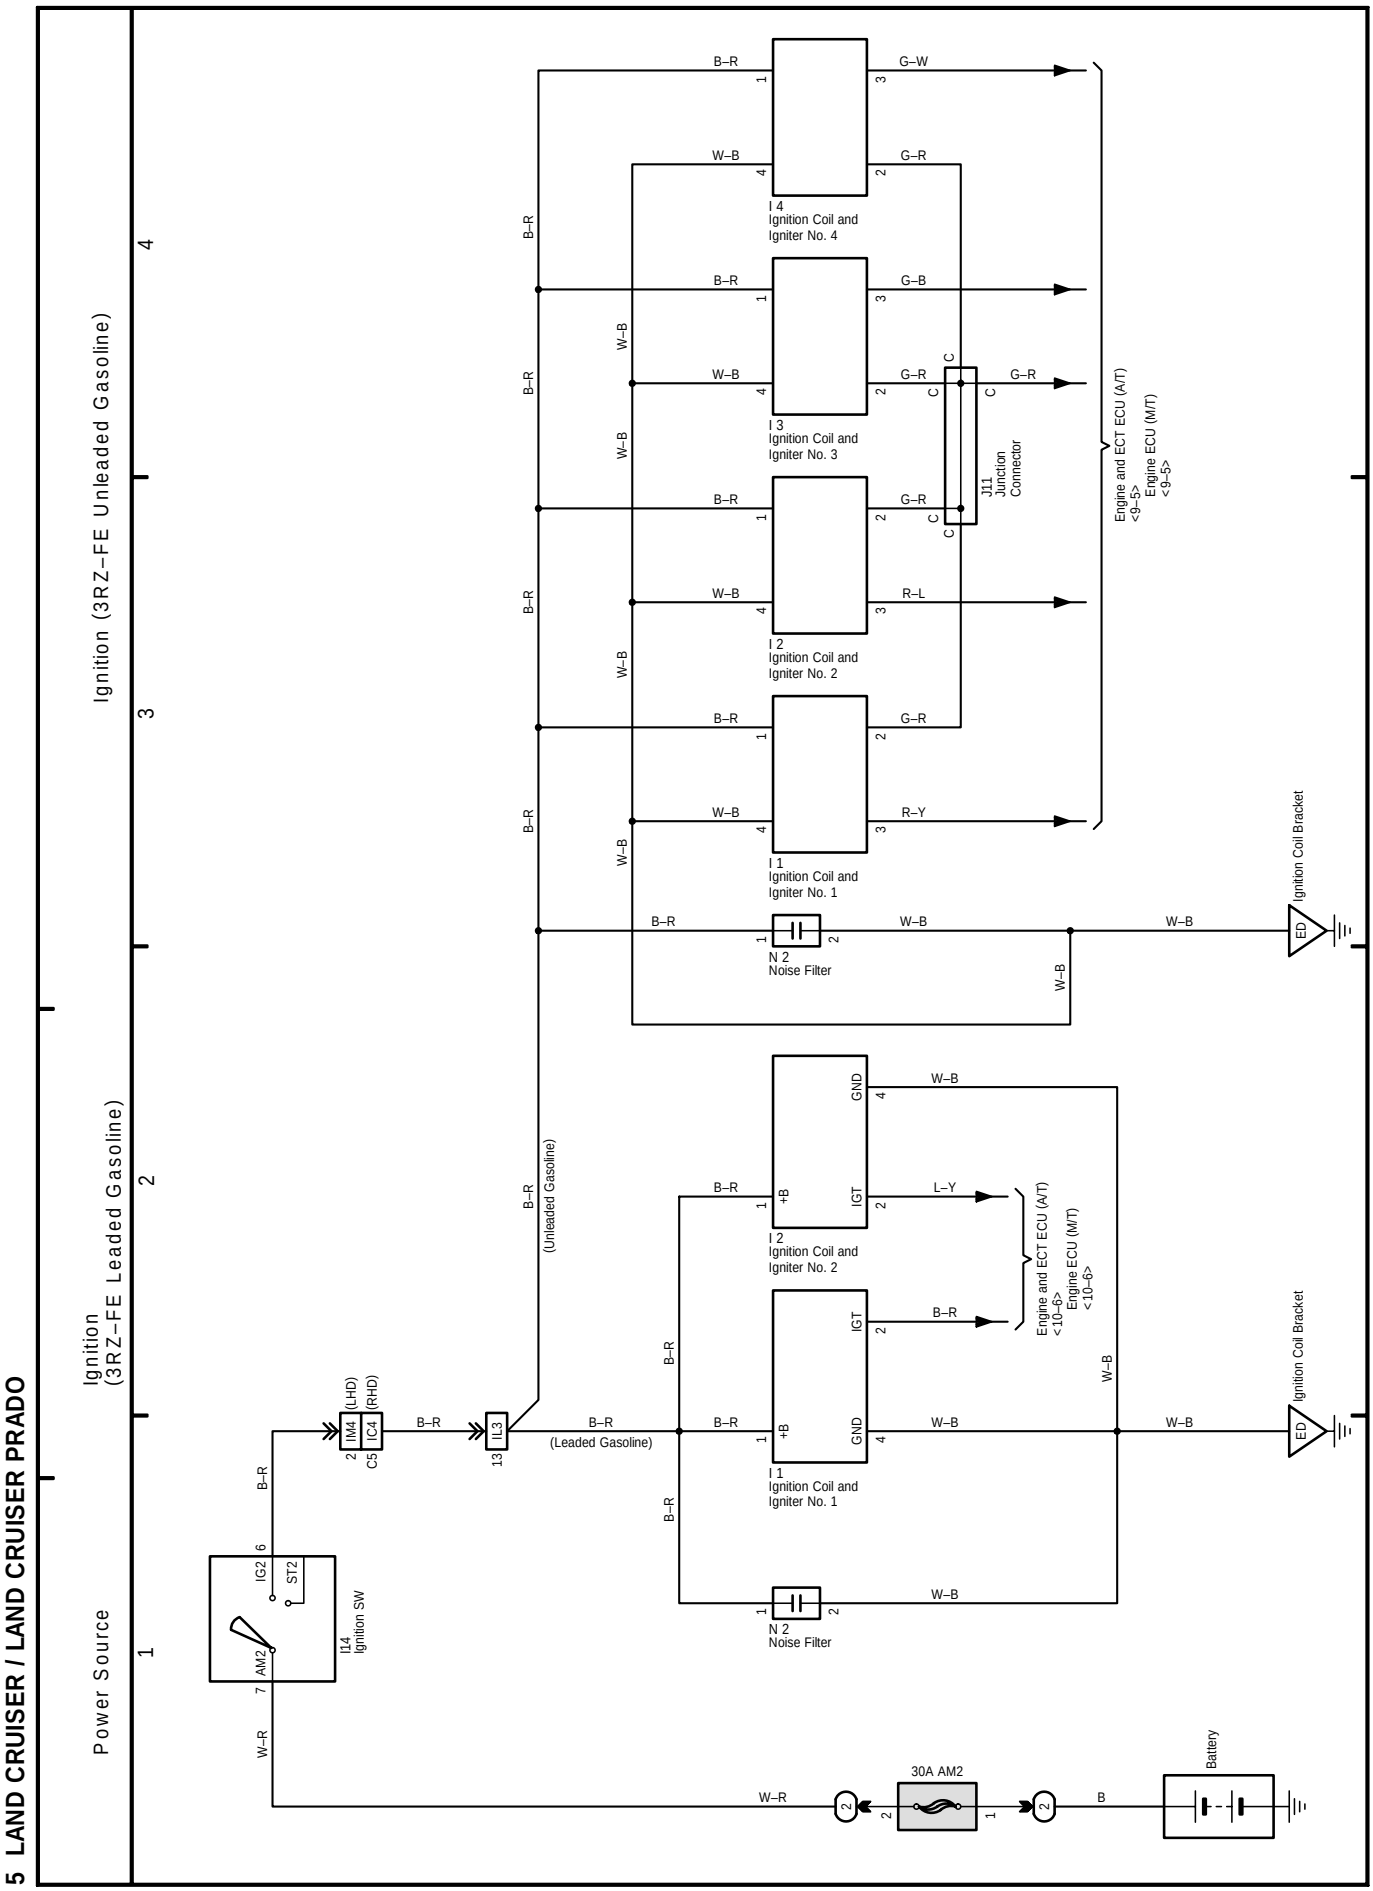

5 LAND CRUISER / LAND CRUISER PRADO
Power Source
Ignition (3RZ–FE Leaded Gasoline)
Ignition (3RZ–FE Unleaded Gasoline)
1
2
3
4
I14 Ignition SW
IG2
ST2
AM2
W–R
30A AM2
Battery
B
IM4 (LHD)
IC4 (RHD)
C5
IL3
13
B–R
(Leaded Gasoline)
(Unleaded Gasoline)
I 1 Ignition Coil and Igniter No. 1
I 2 Ignition Coil and Igniter No. 2
I 3 Ignition Coil and Igniter No. 3
I 4 Ignition Coil and Igniter No. 4
+B
IGT
GND
N 2 Noise Filter
W–B
L–Y
B–R
G–W
G–R
G–B
R–L
R–Y
J11 Junction Connector
Engine and ECT ECU (A/T)
Engine ECU (M/T)
<9–5>
<10–6>
Ignition Coil Bracket
ED