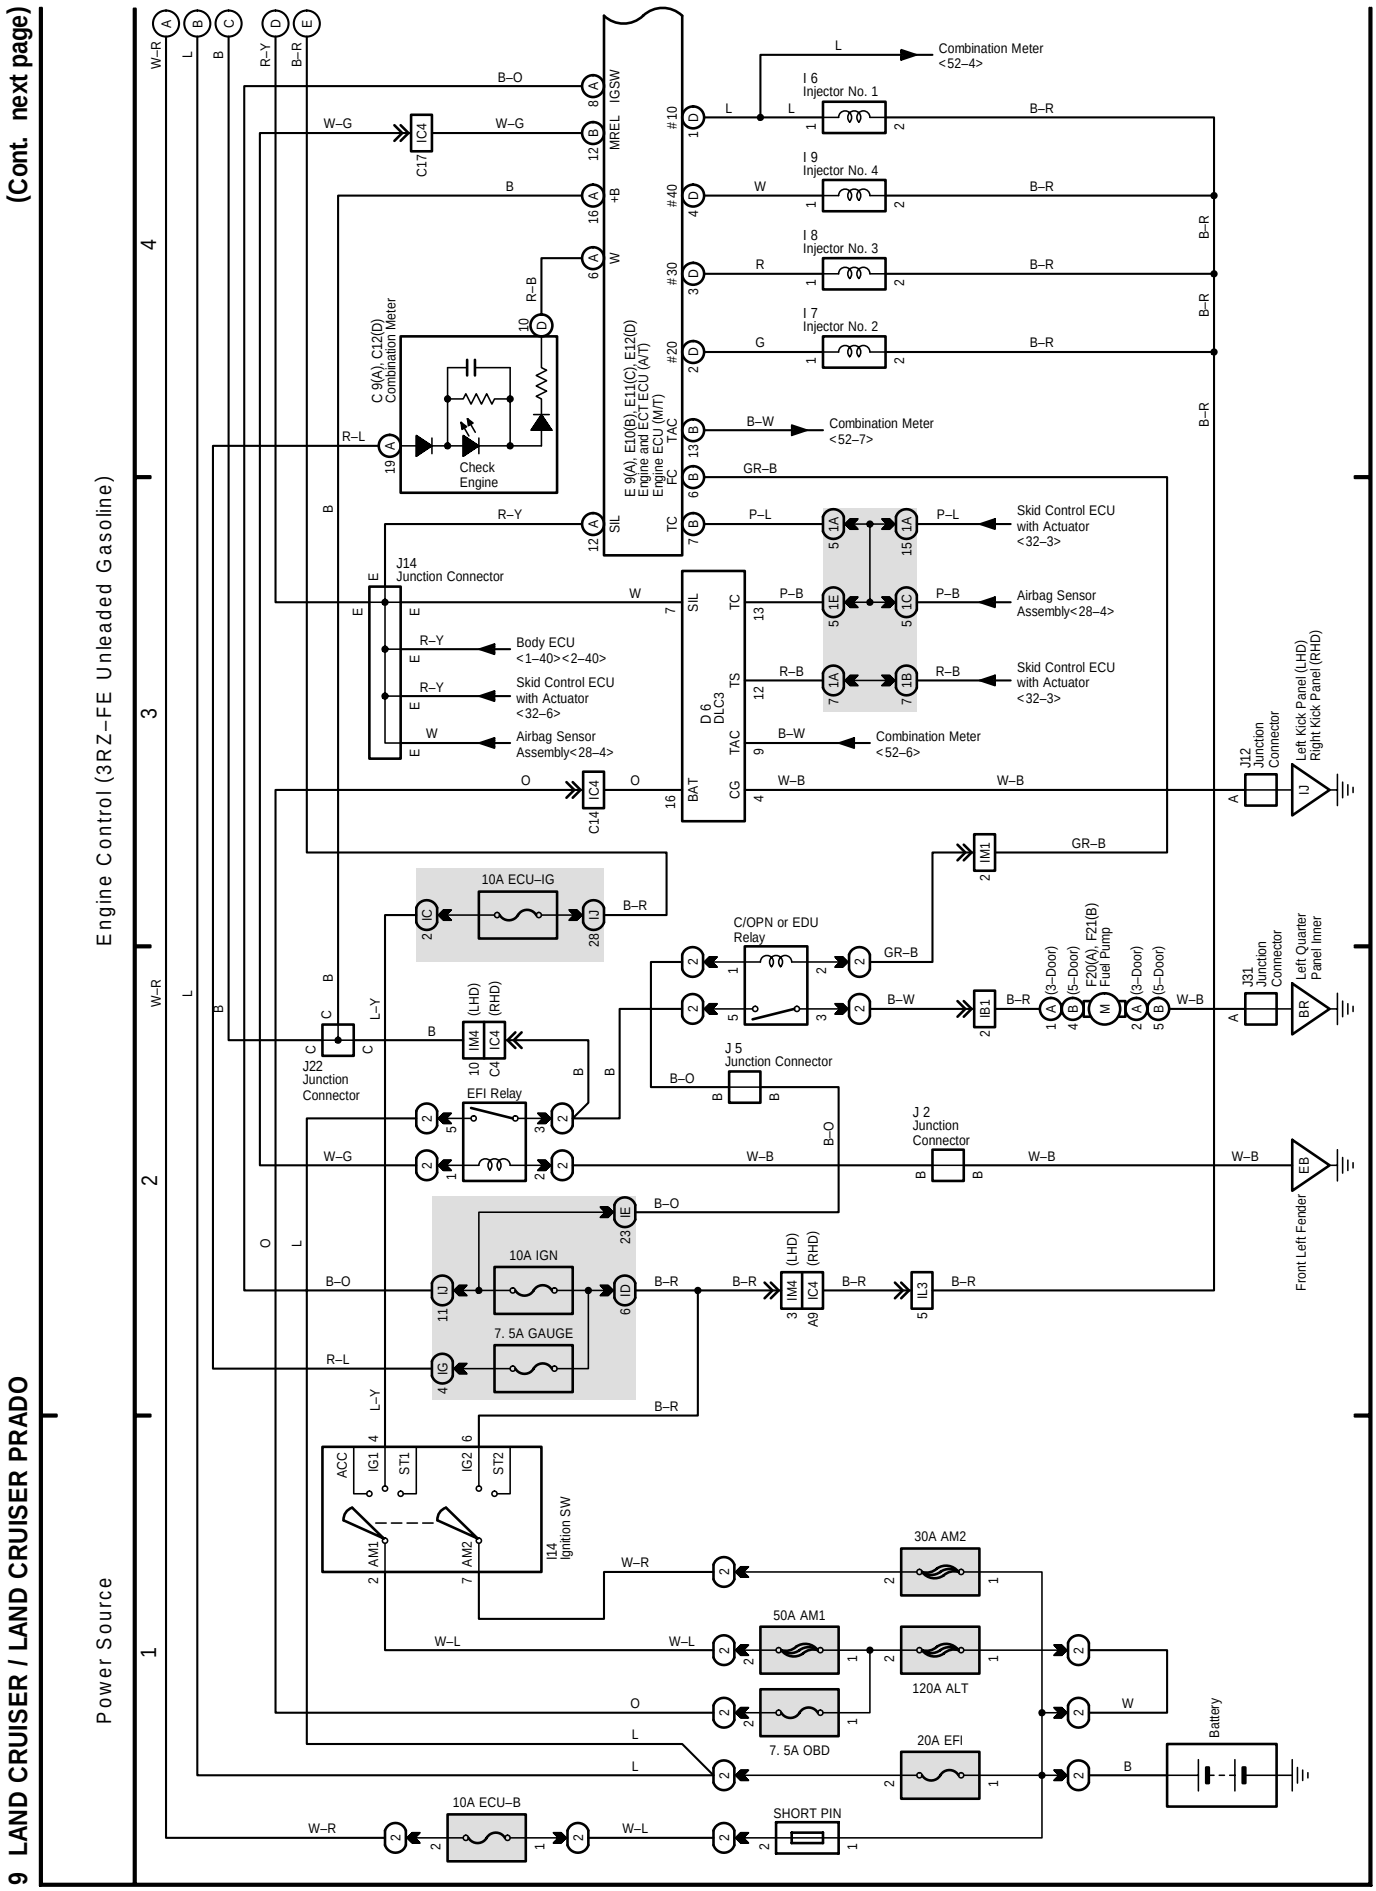
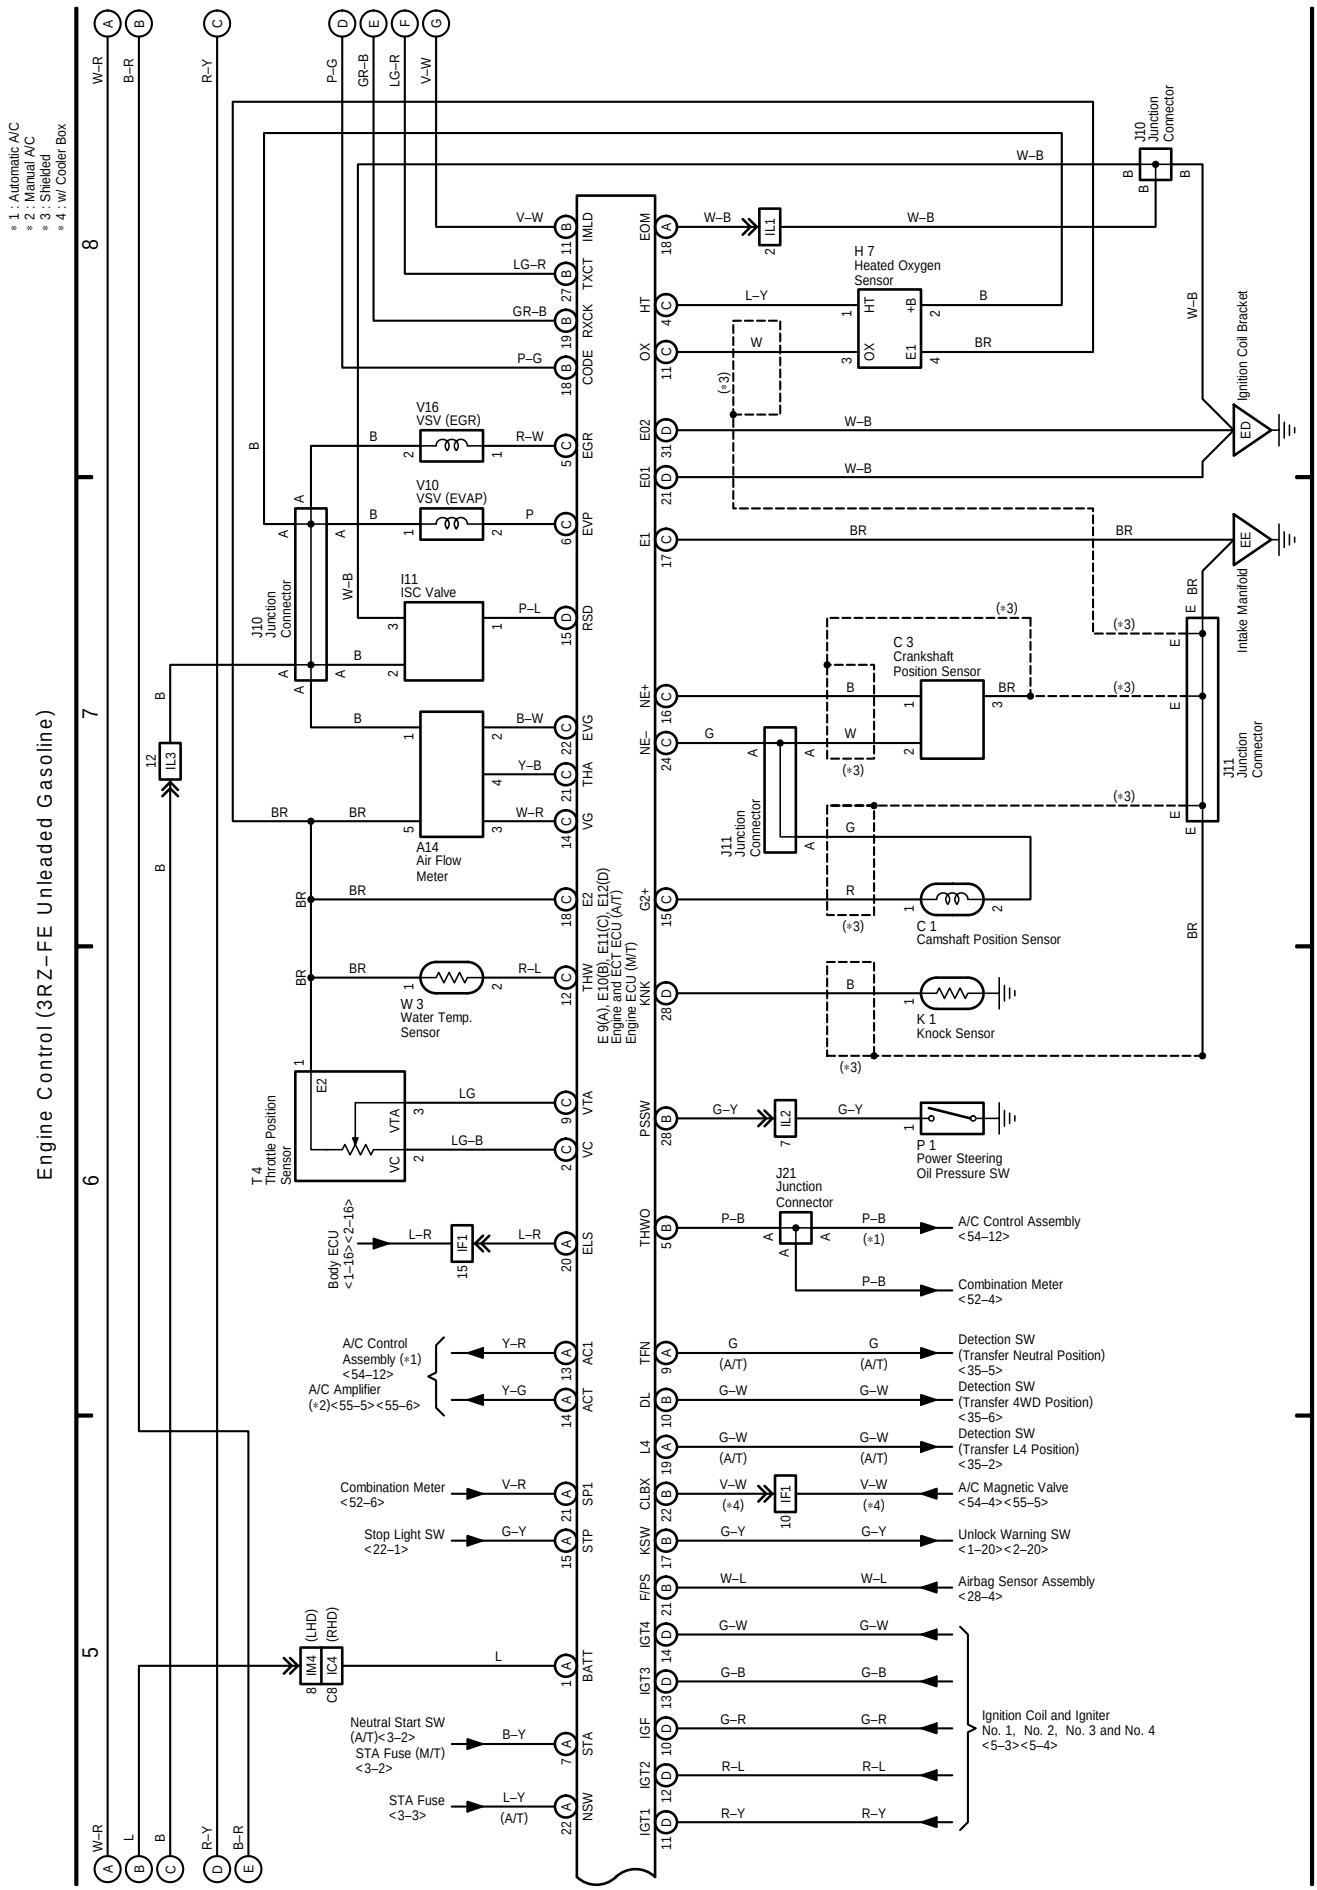
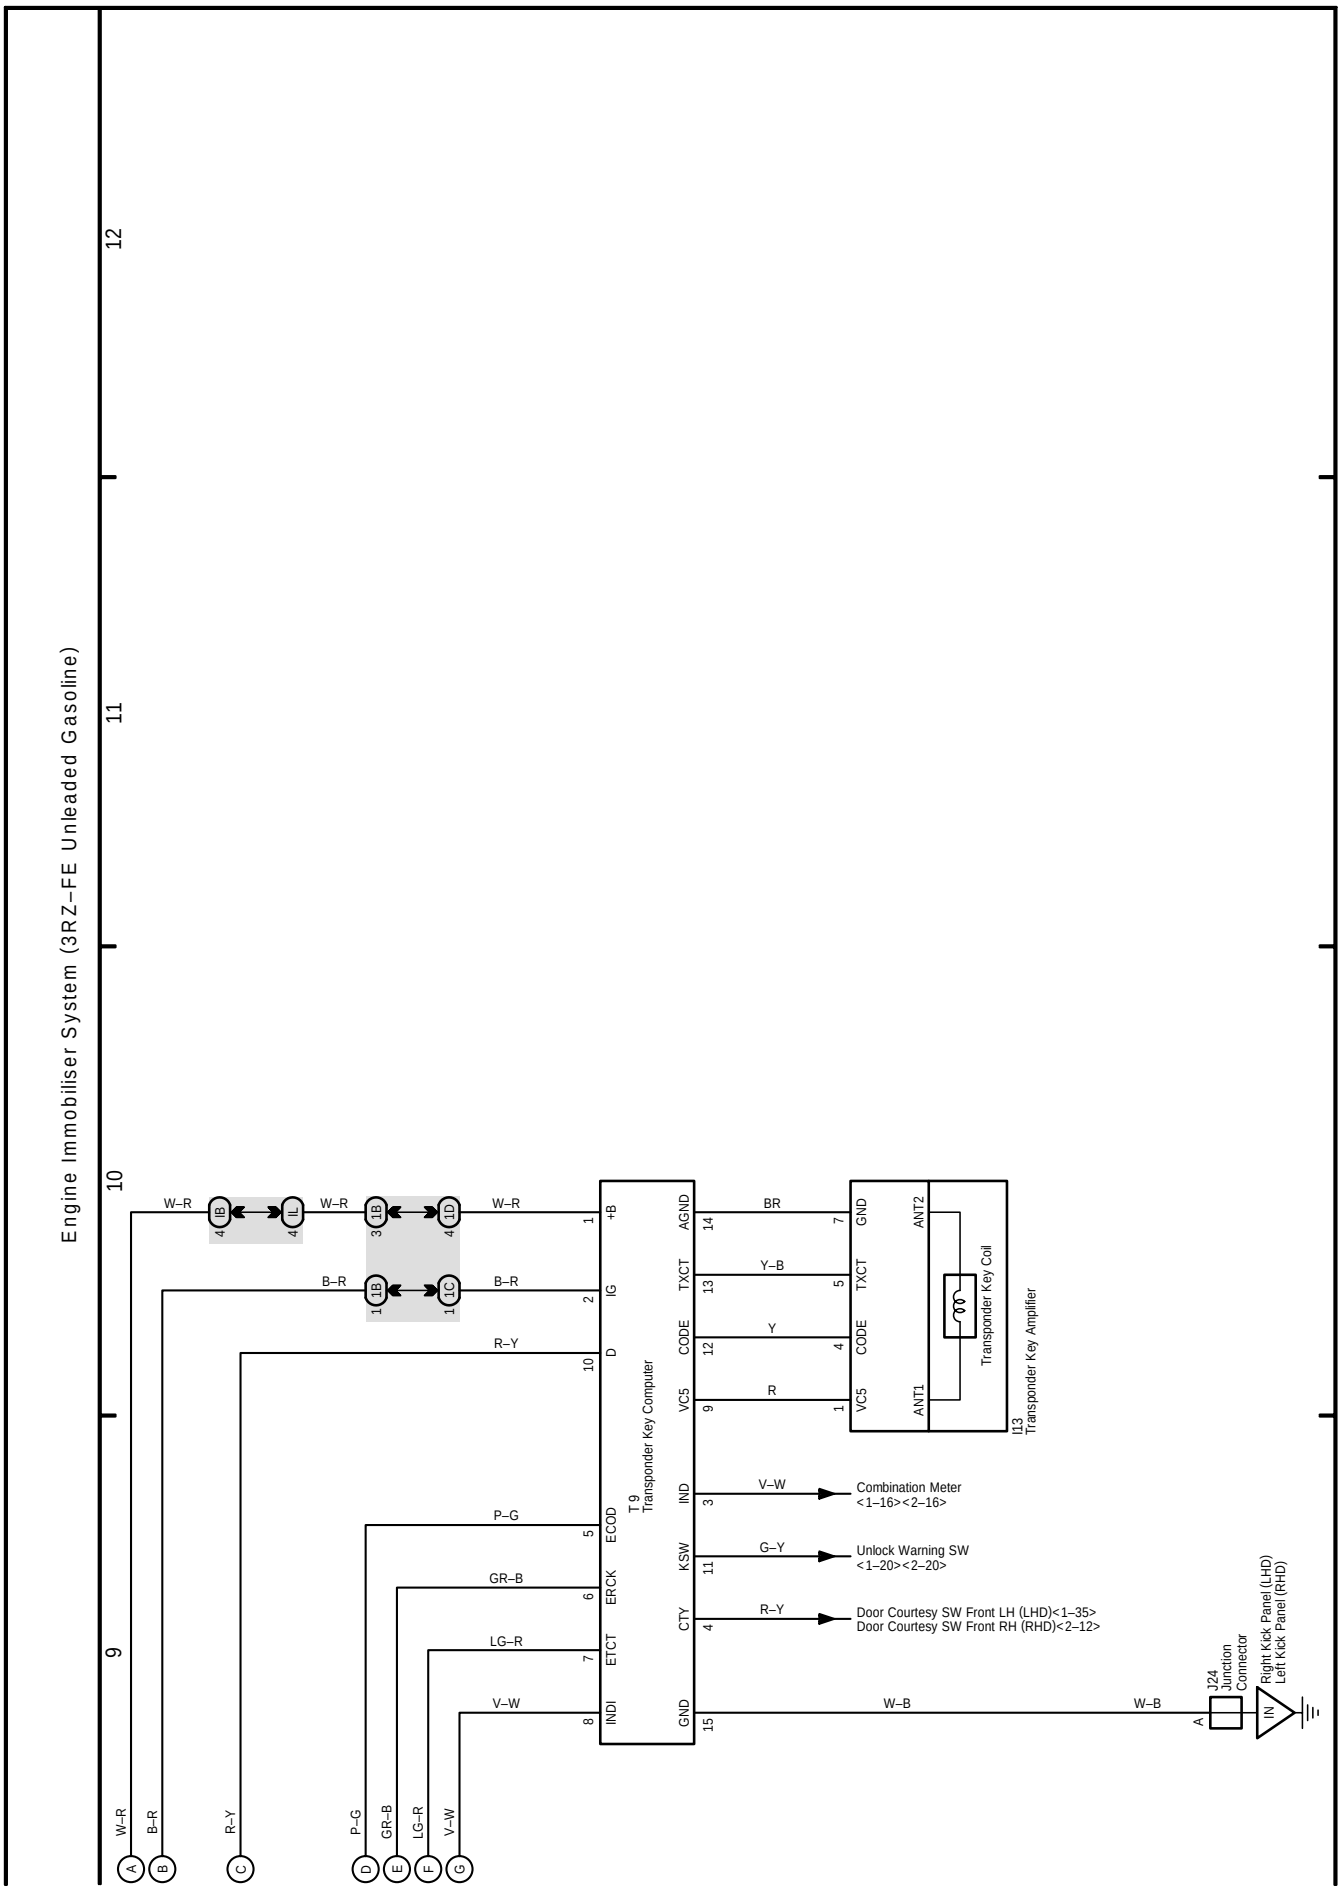

(Cont. next page)
9 LAND CRUISER / LAND CRUISER PRADO
Power Source
Engine Control (3RZ–FE Unleaded Gasoline)
Combination Meter <52–4>
I 6 Injector No. 1
I 9 Injector No. 4
I 8 Injector No. 3
I 7 Injector No. 2
Combination Meter <52–7>
Check Engine
C 9(A), C12(D) Combination Meter
E 9(A), E10(B), E11(C), E12(D) Engine and ECT ECU (A/T) Engine ECU (M/T)
J14 Junction Connector
Body ECU <1–40><2–40>
Skid Control ECU with Actuator <32–6>
Airbag Sensor Assembly<28–4>
D 6 DLC3
Skid Control ECU with Actuator <32–3>
Airbag Sensor Assembly<28–4>
Combination Meter <52–6>
J12 Junction Connector
Left Kick Panel (LHD) Right Kick Panel (RHD)
10A ECU–IG
C/OPN or EDU Relay
J31 Junction Connector
Left Quarter Panel Inner
J22 Junction Connector
EFI Relay
J 5 Junction Connector
J 2 Junction Connector
Front Left Fender
10A IGN
7. 5A GAUGE
J14 Ignition SW
30A AM2
50A AM1
120A ALT
7. 5A OBD
20A EFI
Battery
10A ECU–B
SHORT PIN

(Cont. next page)




9 LAND CRUISER / LAND CRUISER PRADO (Cont' d)
Engine Immobiliser System (3RZ–FE Unleaded Gasoline)
9
10
11
12
W–R
B–R
R–Y
P–G
GR–B
LG–R
V–W
A
B
C
D
E
F
G
1B
1C
1D
1L
4
3
1
2
10
5
6
7
8
+B
IG
D
ECOD
ERCK
ETCT
INDI
T 9
Transponder Key Computer
AGND
TXCT
CODE
VC5
IND
KSW
CTY
GND
14
13
12
9
3
11
4
15
BR
Y–B
Y
R
V–W
G–Y
R–Y
W–B
Combination Meter
<1–16><2–16>
Unlock Warning SW
<1–20><2–20>
Door Courtesy SW Front LH (LHD)<1–35>
Door Courtesy SW Front RH (RHD)<2–12>
GND
TXCT
CODE
VC5
ANT2
ANT1
7
5
4
1
I13
Transponder Key Amplifier
Transponder Key Coil
J24
Junction
Connector
IN
Right Kick Panel (LHD)
Left Kick Panel (RHD)