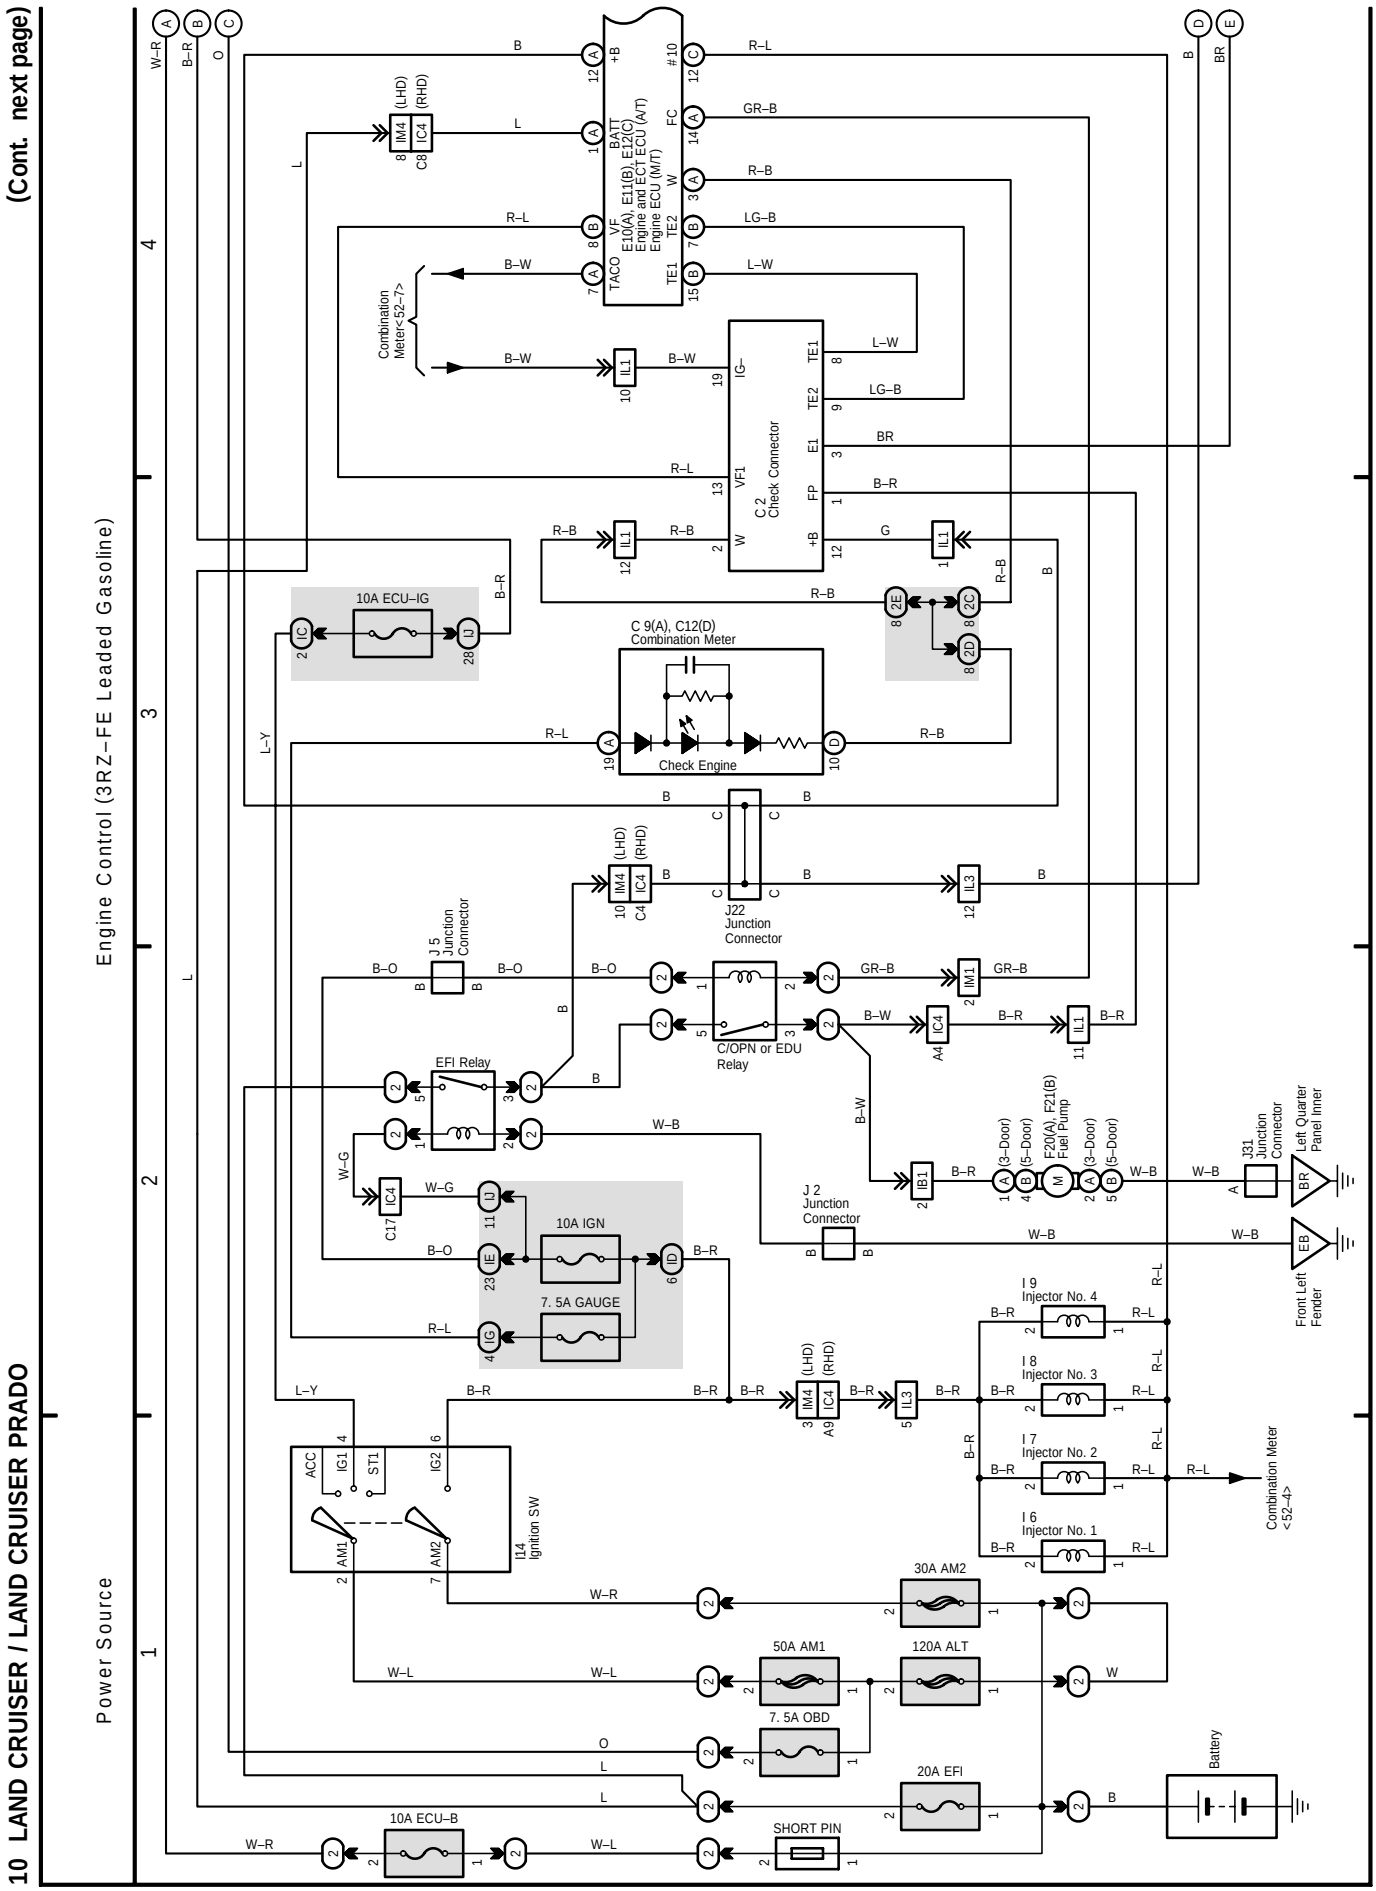
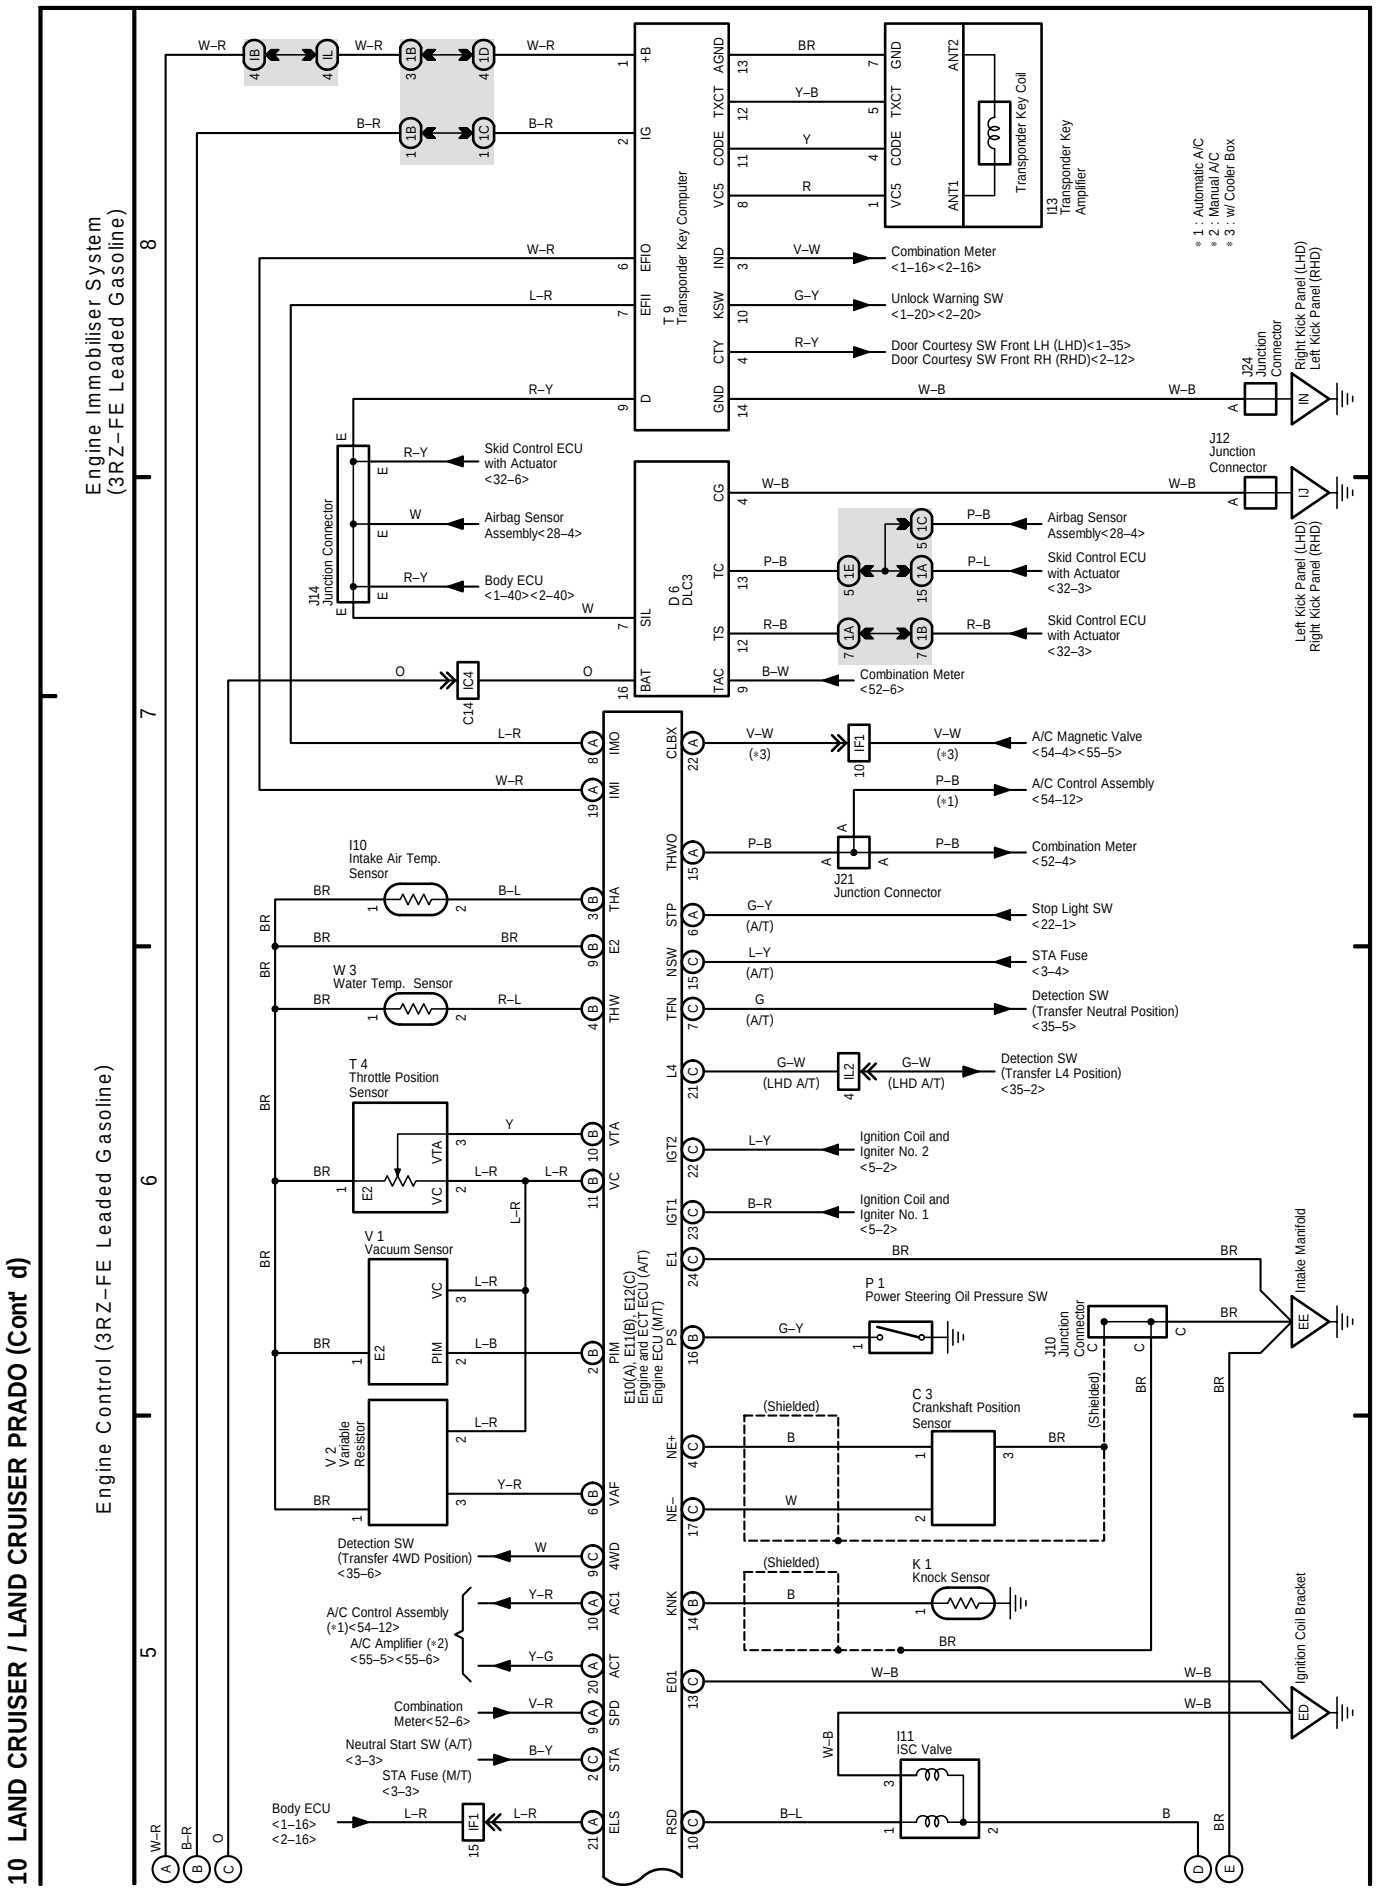

(Cont. next page)
10 LAND CRUISER / LAND CRUISER PRADO
Power Source
Engine Control (3RZ–FE Leaded Gasoline)
Check Engine
C 9(A), C12(D) Combination Meter
C 2 Check Connector
J22 Junction Connector
J 5 Junction Connector
J 2 Junction Connector
J31 Junction Connector
Left Quarter Panel Inner
Front Left Fender
C/OPN or EDU Relay
EFI Relay
F20(A), F21(B) Fuel Pump
I 9 Injector No. 4
I 8 Injector No. 3
I 7 Injector No. 2
I 6 Injector No. 1
I14 Ignition SW
Combination Meter <52–4>
Combination Meter<52–7>
10A ECU–IG
10A IGN
7. 5A GAUGE
30A AM2
50A AM1
120A ALT
7. 5A OBD
20A EFI
10A ECU–B
SHORT PIN
Battery


10 LAND CRUISER / LAND CRUISER PRADO (Cont' d)
Engine Control (3RZ–FE Leaded Gasoline)
Engine Immobiliser System (3RZ–FE Leaded Gasoline)
T 9 Transponder Key Computer
I13 Transponder Key Amplifier
Transponder Key Coil
Combination Meter <1–16><2–16>
Unlock Warning SW <1–20><2–20>
Door Courtesy SW Front LH (LHD)<1–35> Door Courtesy SW Front RH (RHD)<2–12>
J24 Junction Connector
J12 Junction Connector
J14 Junction Connector
Skid Control ECU with Actuator <32–6>
Airbag Sensor Assembly< 28–4>
Body ECU <1–40><2–40>
D 6 DLC3
Airbag Sensor Assembly<28–4>
Skid Control ECU with Actuator <32–3>
Combination Meter <52–6>
C14
A/C Magnetic Valve <54–4><55–5>
A/C Control Assembly <54–12>
Combination Meter <52–4>
J21 Junction Connector
Stop Light SW <22–1>
STA Fuse <3–4>
Detection SW (Transfer Neutral Position) <35–5>
Detection SW (Transfer L4 Position) <35–2>
Ignition Coil and Igniter No. 2 <5–2>
Ignition Coil and Igniter No. 1 <5–2>
I10 Intake Air Temp. Sensor
W 3 Water Temp. Sensor
T 4 Throttle Position Sensor
V 1 Vacuum Sensor
V 2 Variable Resistor
P 1 Power Steering Oil Pressure SW
J10 Junction Connector
C 3 Crankshaft Position Sensor
K 1 Knock Sensor
I11 ISC Valve
Detection SW (Transfer 4WD Position) <35–6>
A/C Control Assembly (*1)<54–12> A/C Amplifier (*2) <55–5><55–6>
Combination Meter<52–6>
Neutral Start SW (A/T) <3–3>
STA Fuse (M/T) <3–3>
Body ECU <1–16> <2–16>
E10(A), E11(B), E12(C) Engine and ECT ECU (A/T) Engine ECU (M/T)
* 1 : Automatic A/C
* 2 : Manual A/C
* 3 : w/ Cooler Box
Left Kick Panel (LHD) Right Kick Panel (RHD)
Intake Manifold
Ignition Coil Bracket