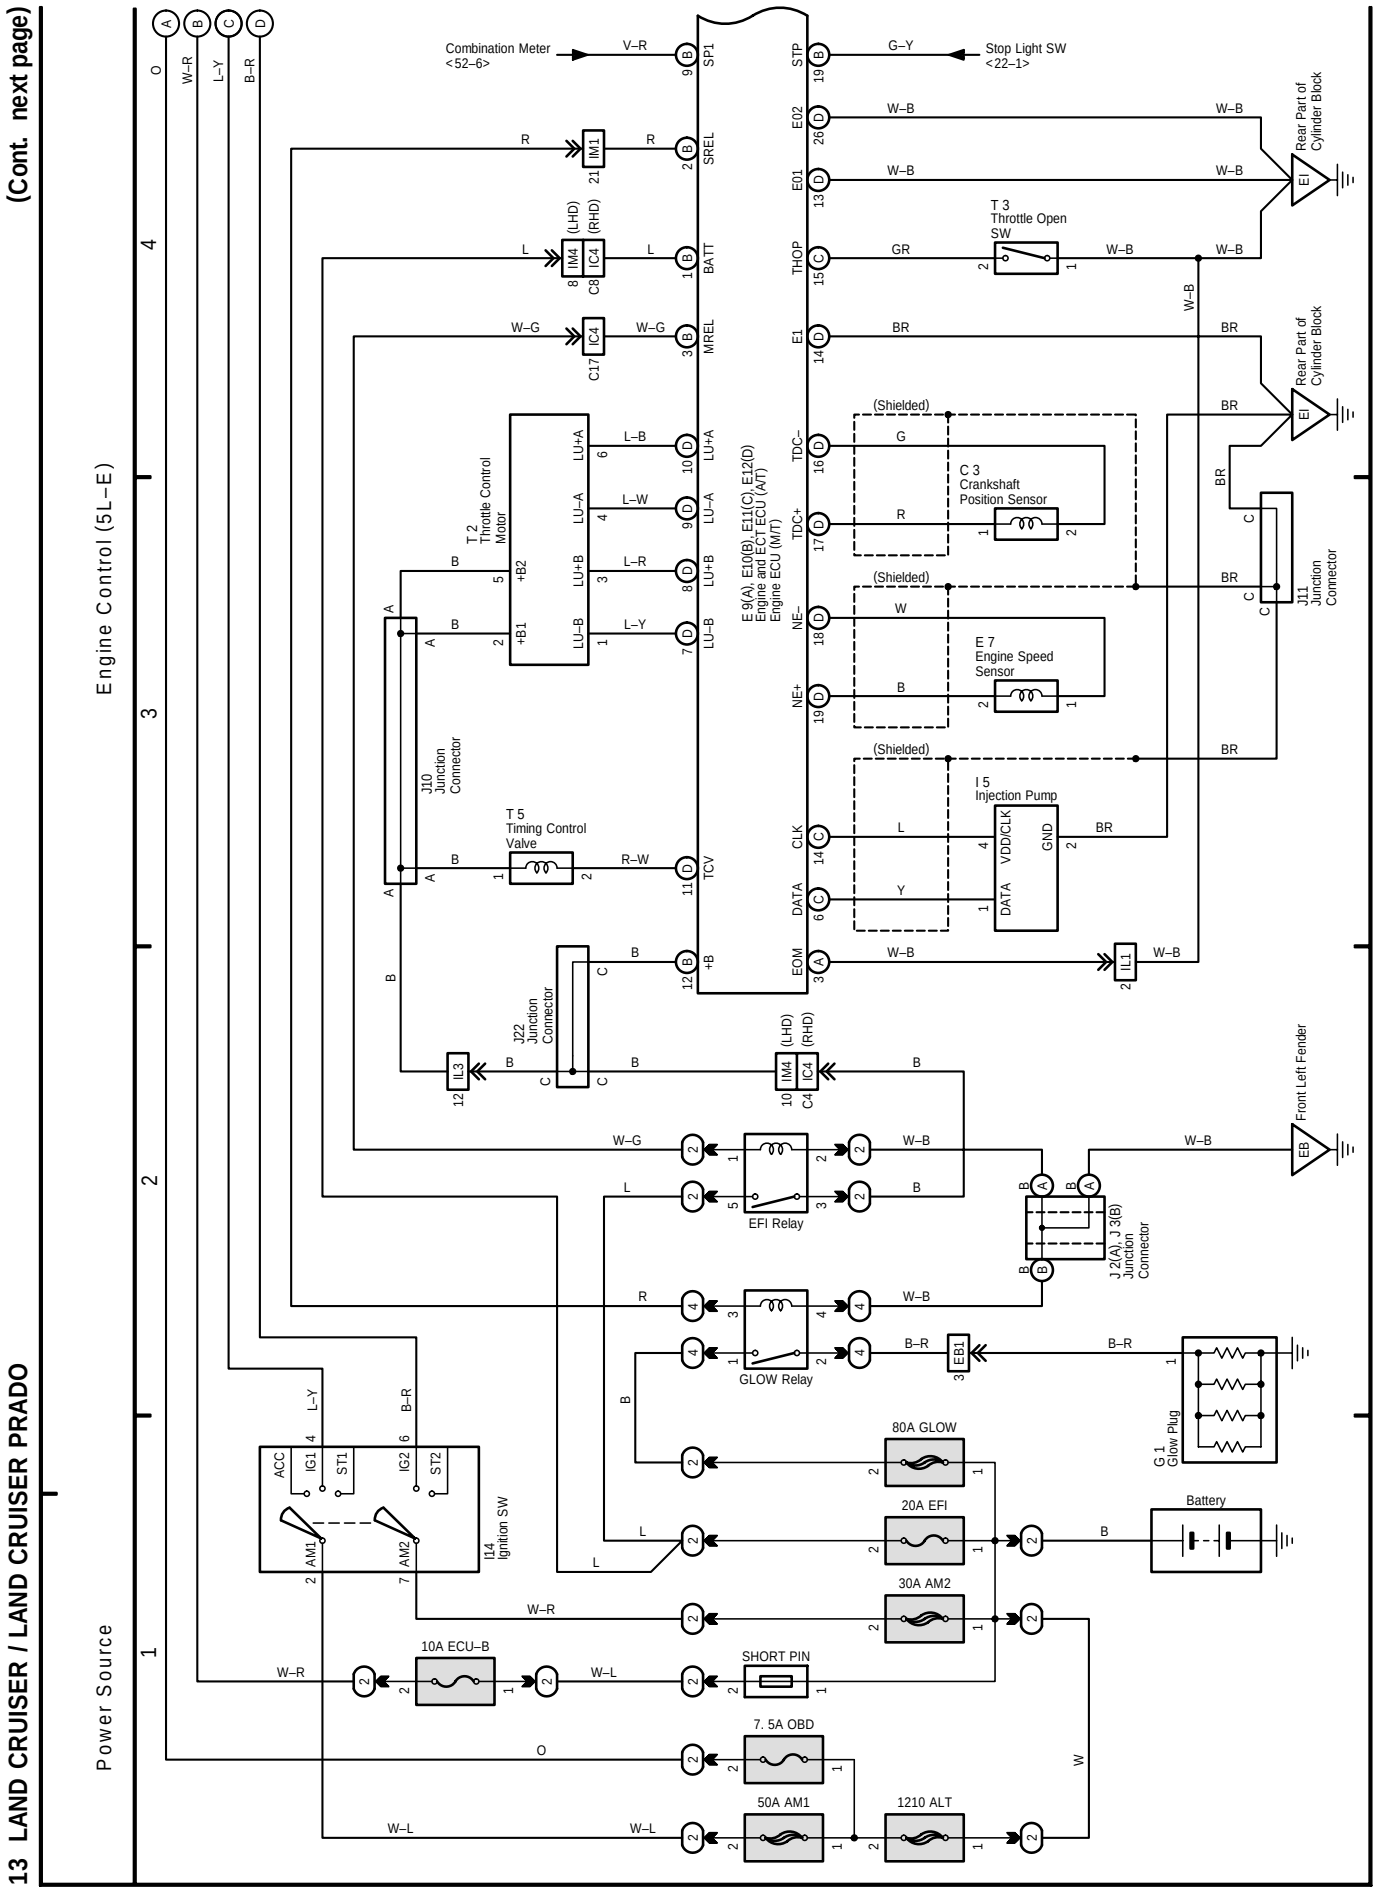
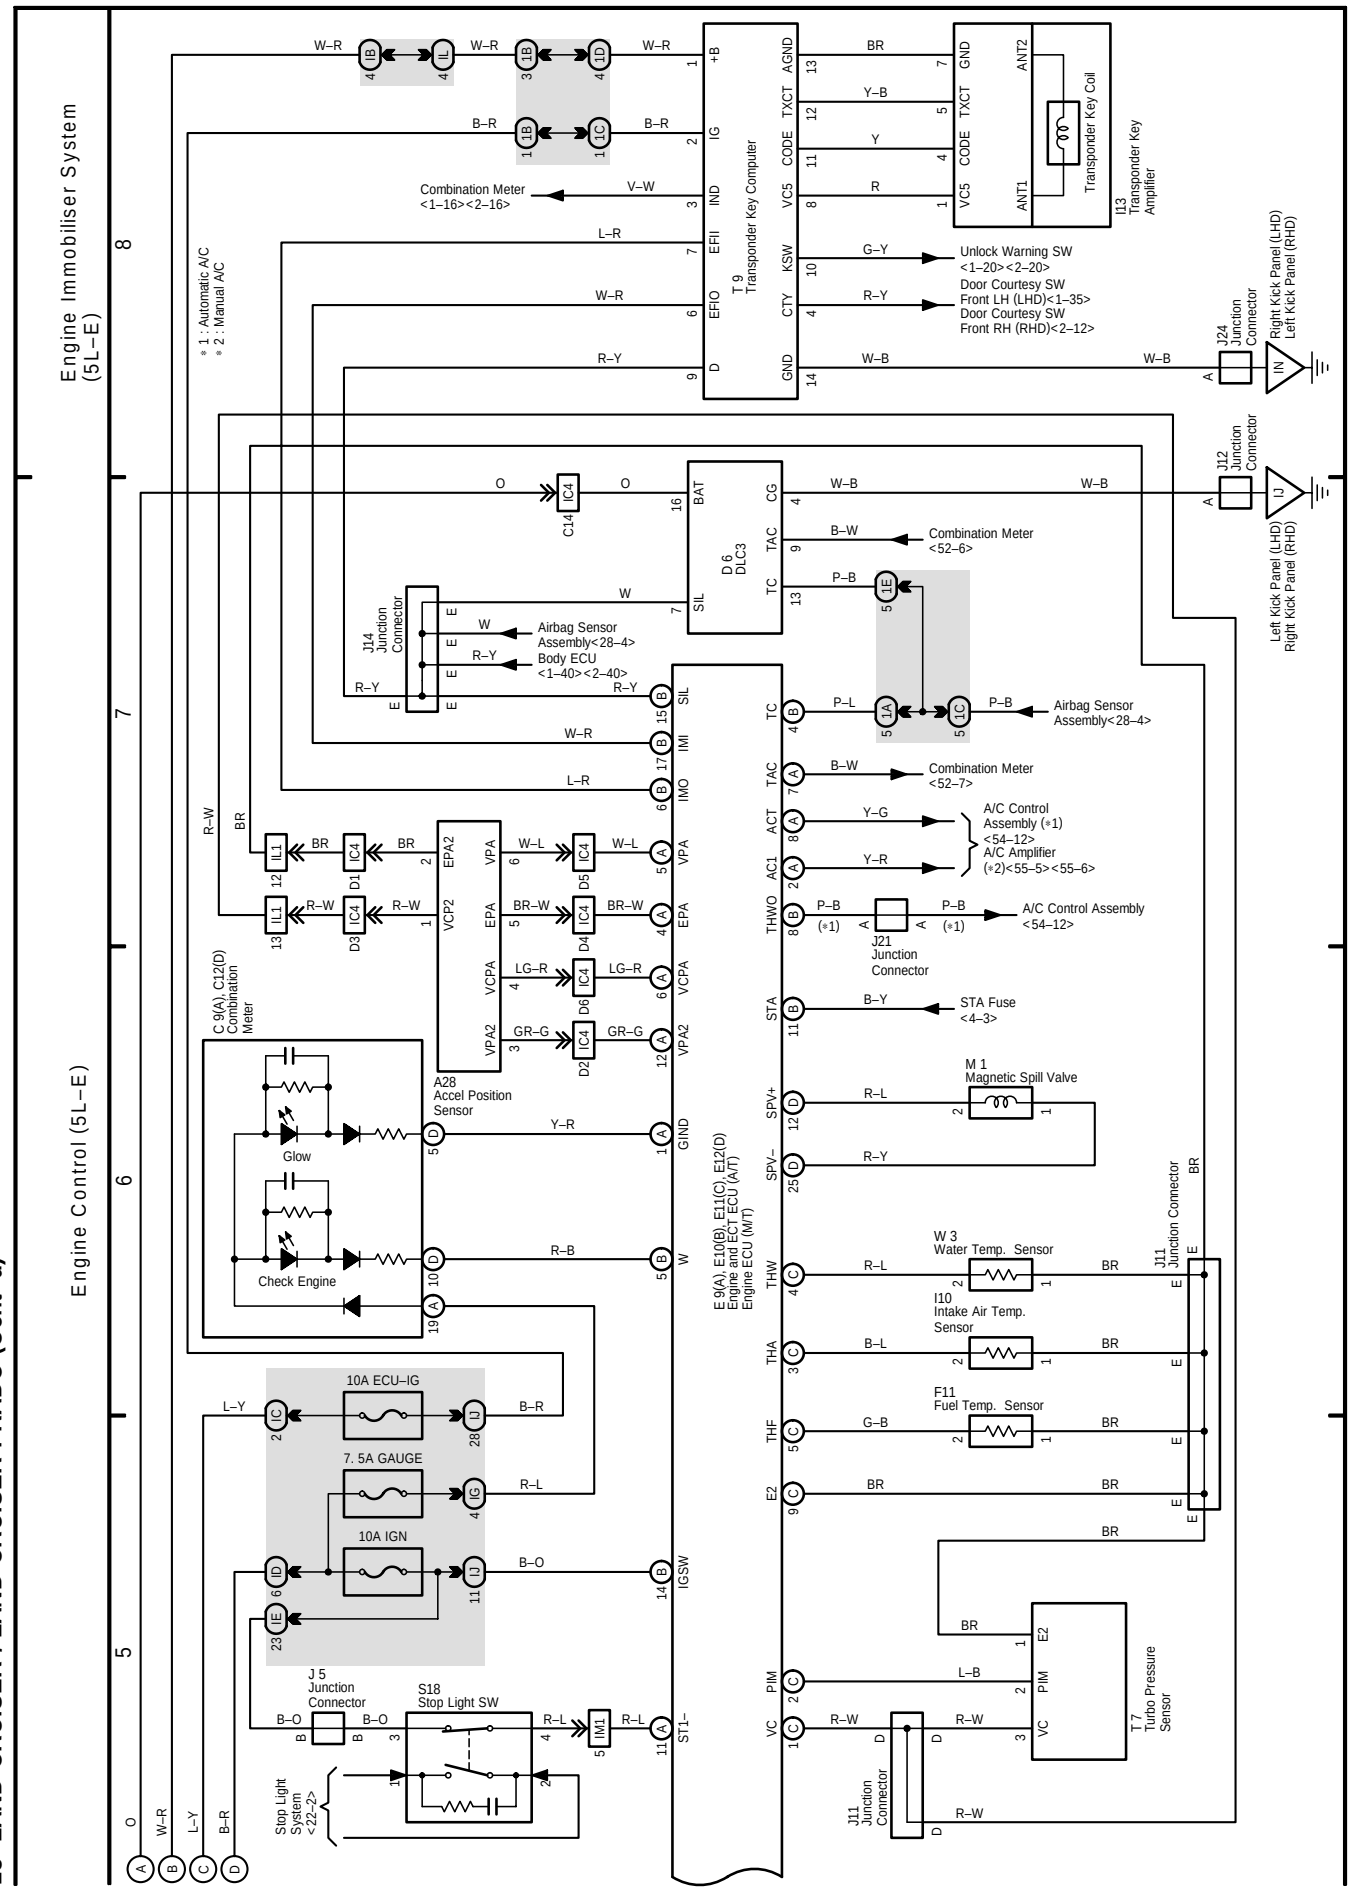

(Cont. next page)
13 LAND CRUISER / LAND CRUISER PRADO
Power Source
Engine Control (5L–E)
Combination Meter <52–6>
Stop Light SW <22–1>
Rear Part of Cylinder Block
Front Left Fender
T 3 Throttle Open SW
T 2 Throttle Control Motor
C 3 Crankshaft Position Sensor
E 7 Engine Speed Sensor
I 5 Injection Pump
T 5 Timing Control Valve
J10 Junction Connector
J11 Junction Connector
J22 Junction Connector
J 2(A), J 3(B) Junction Connector
E 9(A), E10(B), E11(C), E12(D) Engine and ECT ECU (A/T) Engine ECU (M/T)
EFI Relay
GLOW Relay
I14 Ignition SW
G 1 Glow Plug
80A GLOW
20A EFI
30A AM2
10A ECU–B
SHORT PIN
7. 5A OBD
50A AM1
1210 ALT
Battery


13 LAND CRUISER / LAND CRUISER PRADO (Cont' d)
Engine Immobiliser System (5L–E)
Engine Control (5L–E)
* 1 : Automatic A/C
* 2 : Manual A/C
T 9 Transponder Key Computer
I13 Transponder Key Amplifier
Transponder Key Coil
Combination Meter <1–16><2–16>
Unlock Warning SW <1–20><2–20>
Door Courtesy SW Front LH (LHD)<1–35>
Door Courtesy SW Front RH (RHD)<2–12>
J24 Junction Connector
Right Kick Panel (LHD)
Left Kick Panel (RHD)
J12 Junction Connector
D 6 DLC3
Combination Meter <52–6>
J14 Junction Connector
Airbag Sensor Assembly<28–4>
Body ECU <1–40><2–40>
Airbag Sensor Assembly<28–4>
Combination Meter <52–7>
A/C Control Assembly (*1) <54–12>
A/C Amplifier (*2)<55–5><55–6>
A/C Control Assembly <54–12>
J21 Junction Connector
STA Fuse <4–3>
M 1 Magnetic Spill Valve
C 9(A), C12(D) Combination Meter
A28 Accel Position Sensor
Glow
Check Engine
E 9(A), E10(B), E11(C), E12(D) Engine and ECT ECU (A/T) Engine ECU (M/T)
W 3 Water Temp. Sensor
I10 Intake Air Temp. Sensor
F11 Fuel Temp. Sensor
J11 Junction Connector
10A ECU–IG
7. 5A GAUGE
10A IGN
J 5 Junction Connector
S18 Stop Light SW
Stop Light System <22–2>
T 7 Turbo Pressure Sensor
J11 Junction Connector