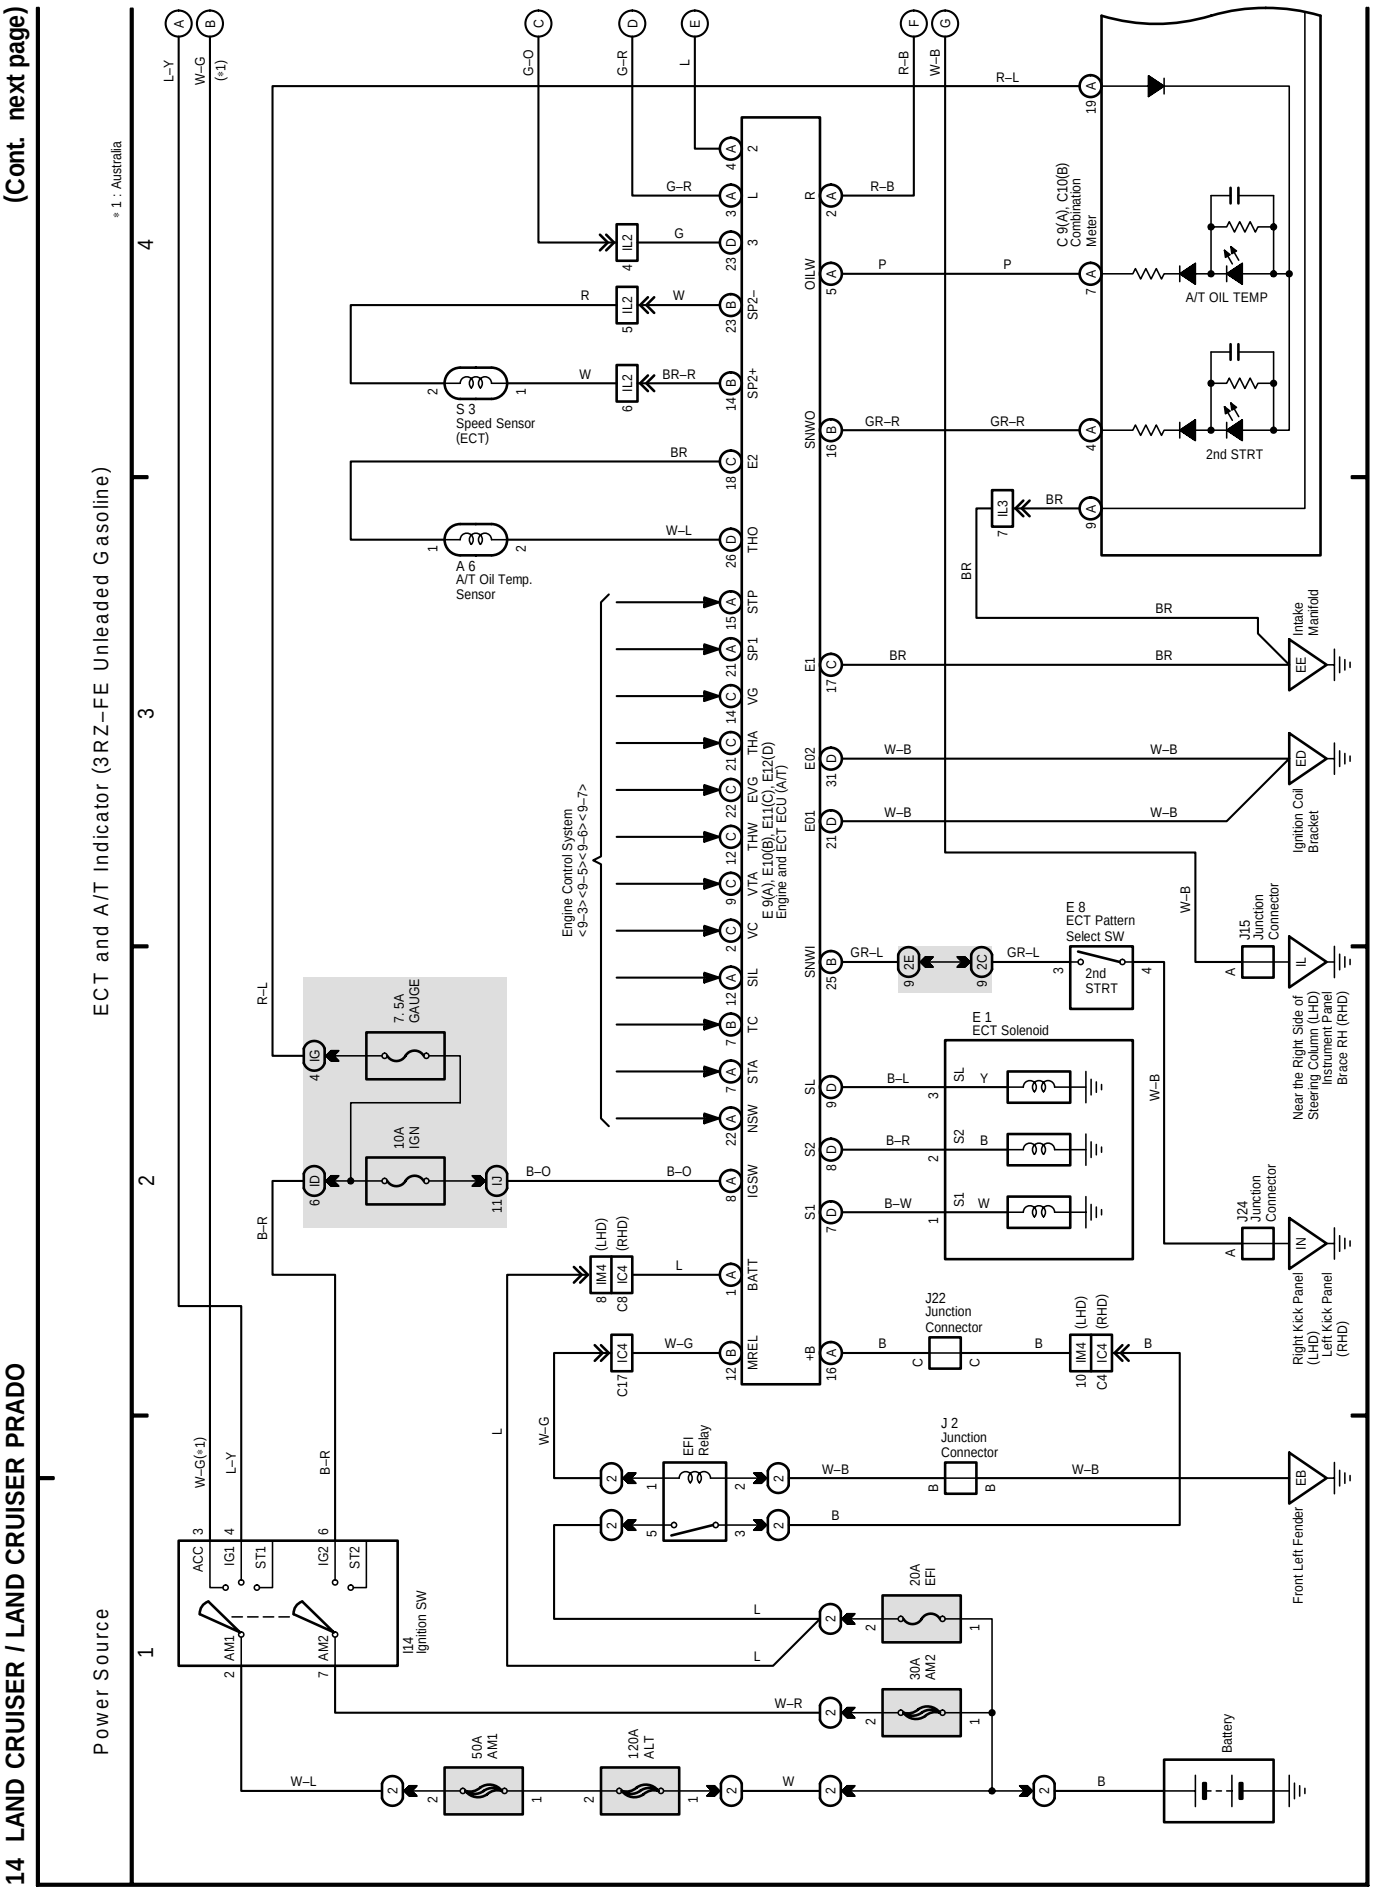
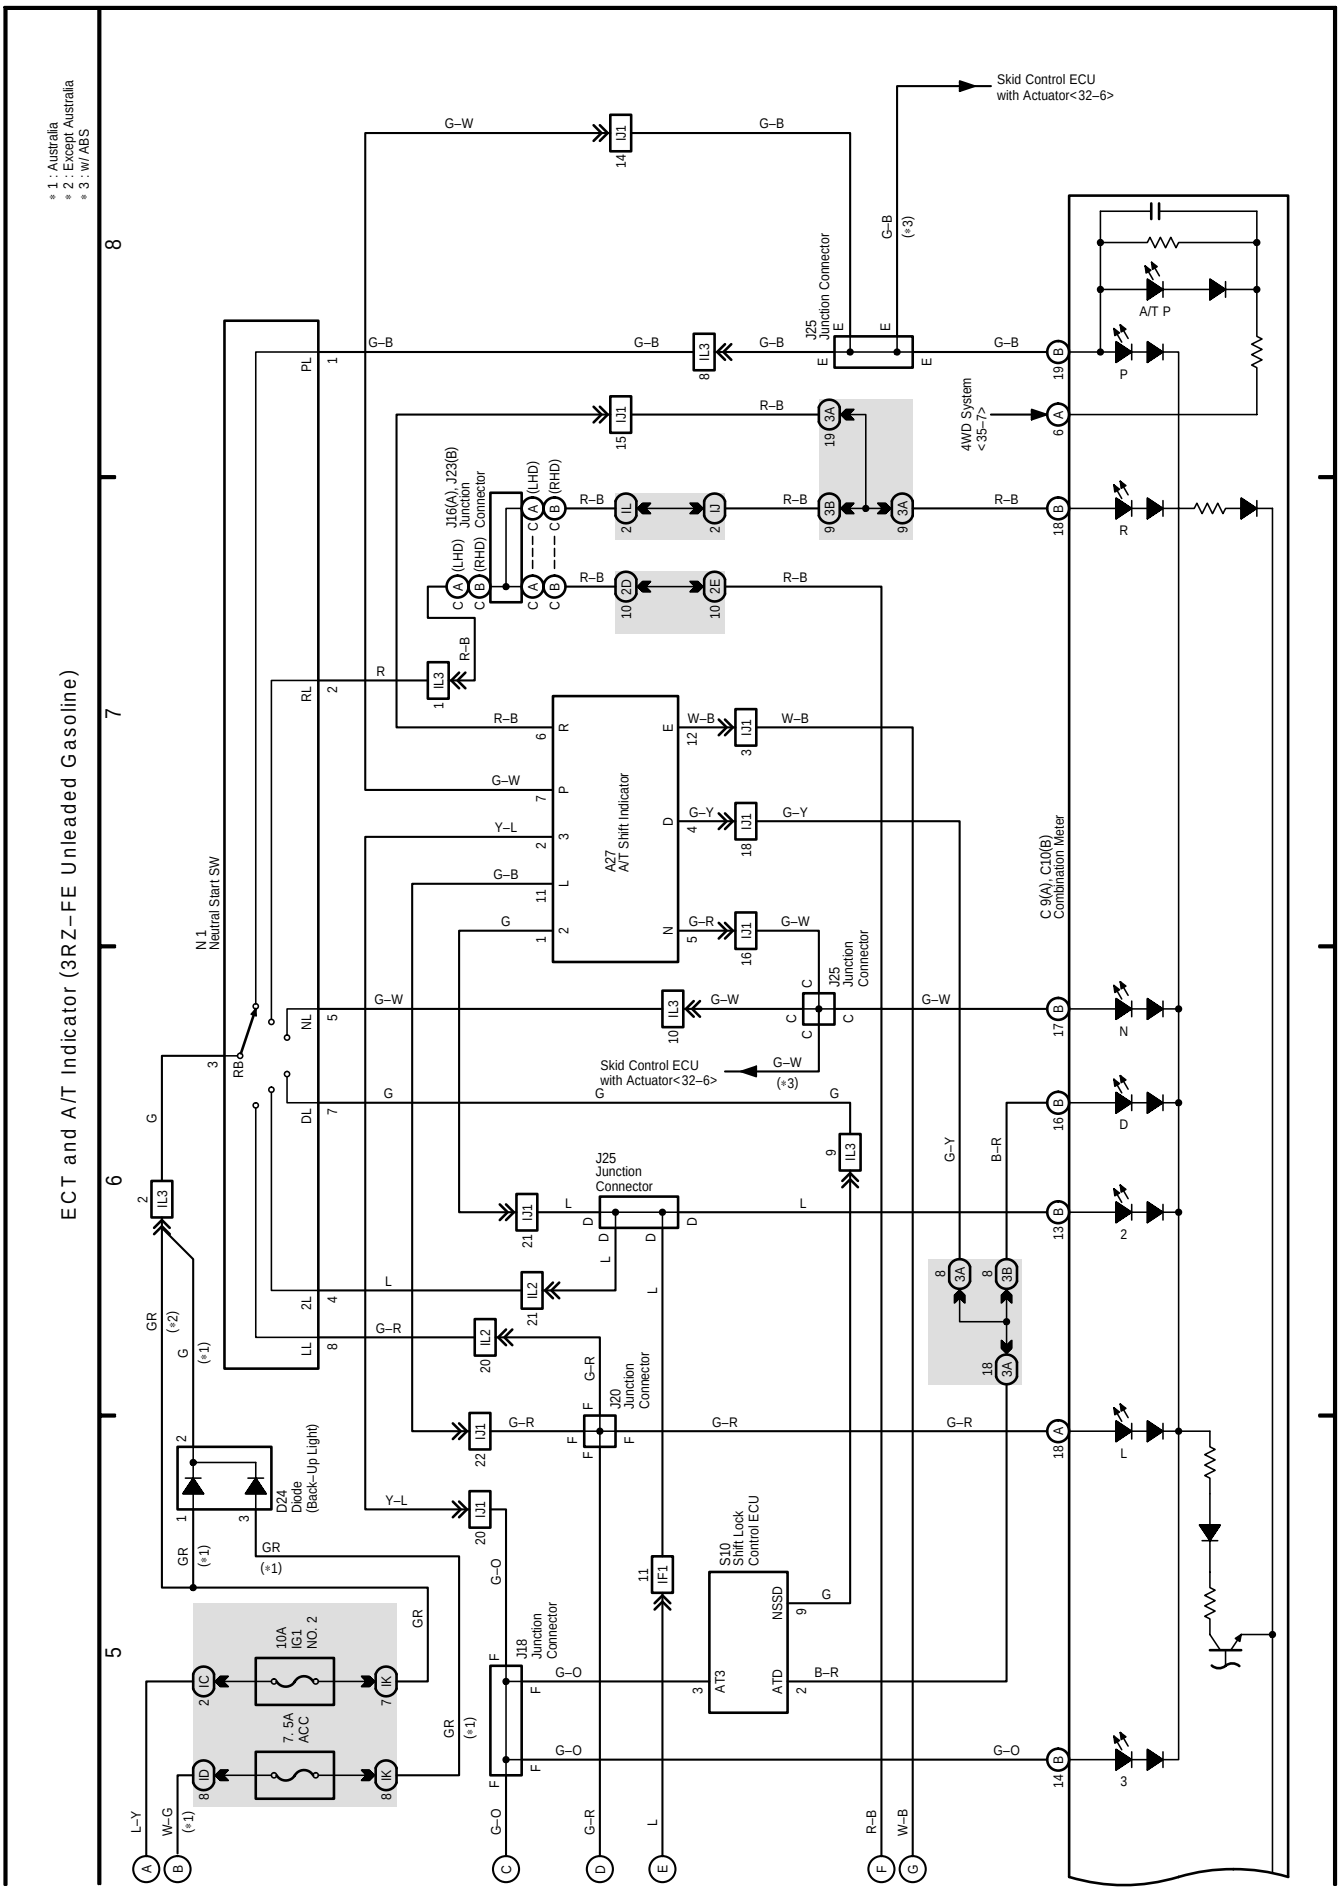

14 LAND CRUISER / LAND CRUISER PRADO
(Cont. next page)
ECT and A/T Indicator (3RZ–FE Unleaded Gasoline)
Power Source
* 1 : Australia
Engine Control System
<9–3><9–5><9–6><9–7>
E 9(A), E10(B), E11(C), E12(D)
Engine and ECT ECU (A/T)
S 3
Speed Sensor
(ECT)
A 6
A/T Oil Temp.
Sensor
C 9(A), C10(B)
Combination
Meter
A/T OIL TEMP
2nd STRT
E 8
ECT Pattern
Select SW
2nd
STRT
E 1
ECT Solenoid
J22
Junction
Connector
J 2
Junction
Connector
J15
Junction
Connector
J24
Junction
Connector
Intake
Manifold
Ignition Coil
Bracket
Near the Right Side of
Steering Column (LHD)
Instrument Panel
Brace RH (RHD)
Right Kick Panel
(LHD)
Left Kick Panel
(RHD)
Front Left Fender
EFI
Relay
7.5A
GAUGE
10A
IGN
20A
EFI
30A
AM2
50A
AM1
120A
ALT
I14
Ignition SW
Battery
ACC
IG1
ST1
IG2
ST2
AM1
AM2
(LHD)
(RHD)
R–L
G–O
G–R
L
R–B
W–B
G
P
R
W
BR–R
BR
W–L
GR–R
L–Y
W–G
(*1)
B–R
B–O
B–L
B–R
B–W
W–G
W–R
B
Y
S1
S2
SL
SP2–
SP2+
E2
THO
STP
SP1
VG
THA
EVG
THW
VTA
VC
SIL
TC
STA
NSW
IGSW
BATT
MREL
+B
OILW
SNWO
E1
E02
E01
SNWI


14 LAND CRUISER / LAND CRUISER PRADO (Cont' d)
ECT and A/T Indicator (3RZ–FE Unleaded Gasoline)
* 1 : Australia
* 2 : Except Australia
* 3 : w/ ABS
Skid Control ECU with Actuator<32–6>
4WD System <35–7>
A/T P
P
R
N
D
2
L
3
J25 Junction Connector
J16(A), J23(B) Junction Connector
A27 A/T Shift Indicator
C 9(A), C10(B) Combination Meter
N 1 Neutral Start SW
D24 Diode (Back–Up Light)
10A IG1 NO. 2
7.5A ACC
J18 Junction Connector
J20 Junction Connector
S10 Shift Lock Control ECU