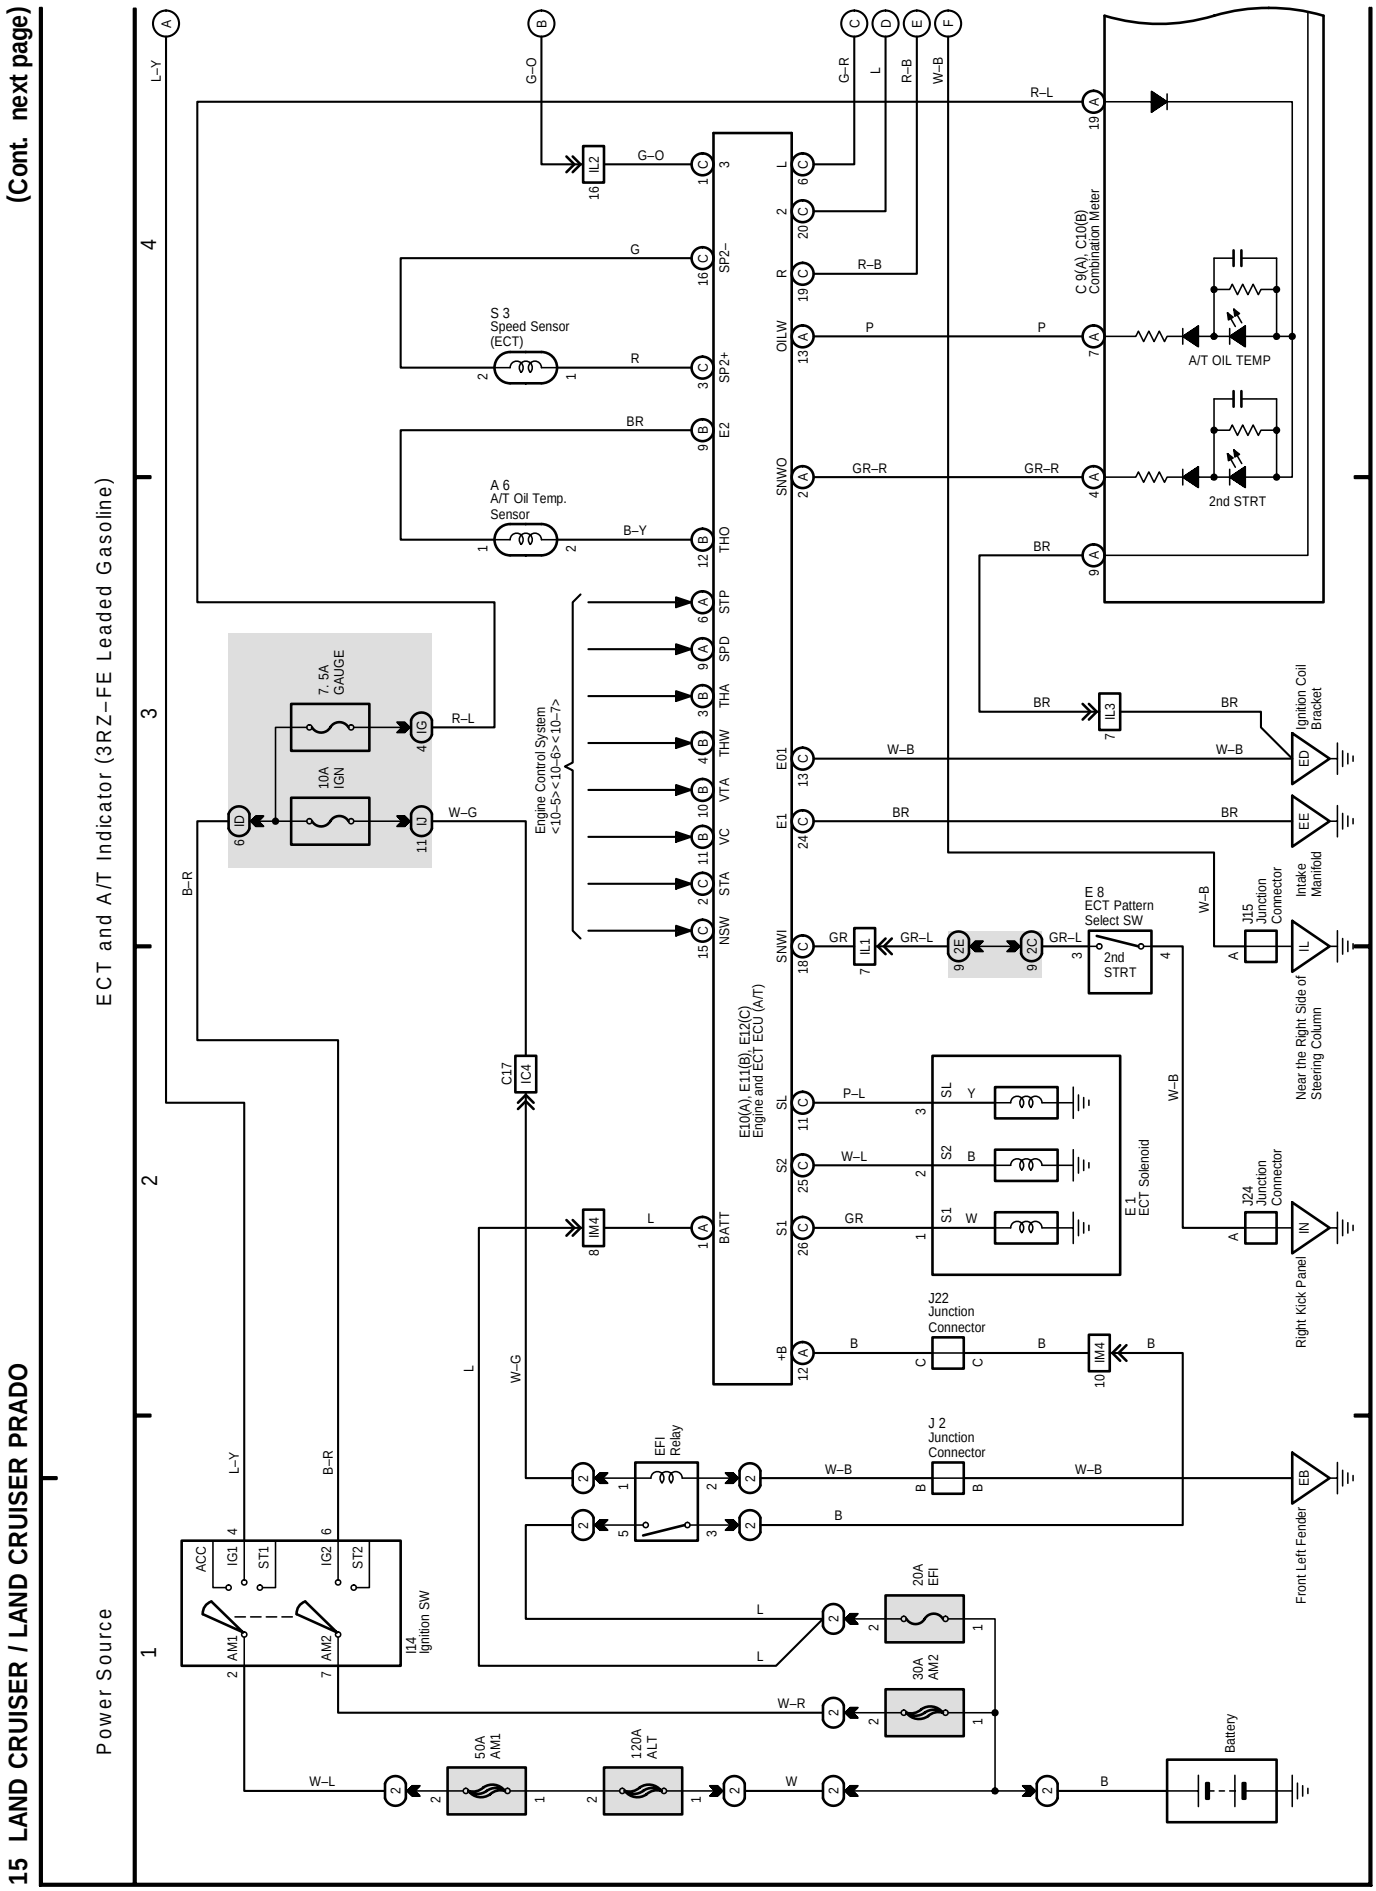

(Cont. next page)
15 LAND CRUISER / LAND CRUISER PRADO
ECT and A/T Indicator (3RZ–FE Leaded Gasoline)
Power Source
S 3
Speed Sensor
(ECT)
A 6
A/T Oil Temp.
Sensor
Engine Control System
<10–5><10–6><10–7>
C 9(A), C10(B)
Combination Meter
A/T OIL TEMP
2nd STRT
7. 5A
GAUGE
10A
IGN
E 8
ECT Pattern
Select SW
2nd
STRT
E10(A), E11(B), E12(C)
Engine and ECT ECU (A/T)
E 1
ECT Solenoid
J22
Junction
Connector
J 2
Junction
Connector
J15
Junction
Connector
J24
Junction
Connector
Ignition Coil
Bracket
Intake
Manifold
Near the Right Side of
Steering Column
Right Kick Panel
Front Left Fender
EFI
Relay
I14
Ignition SW
20A
EFI
30A
AM2
50A
AM1
120A
ALT
Battery

15 LAND CRUISER / LAND CRUISER PRADO (Cont' d)

