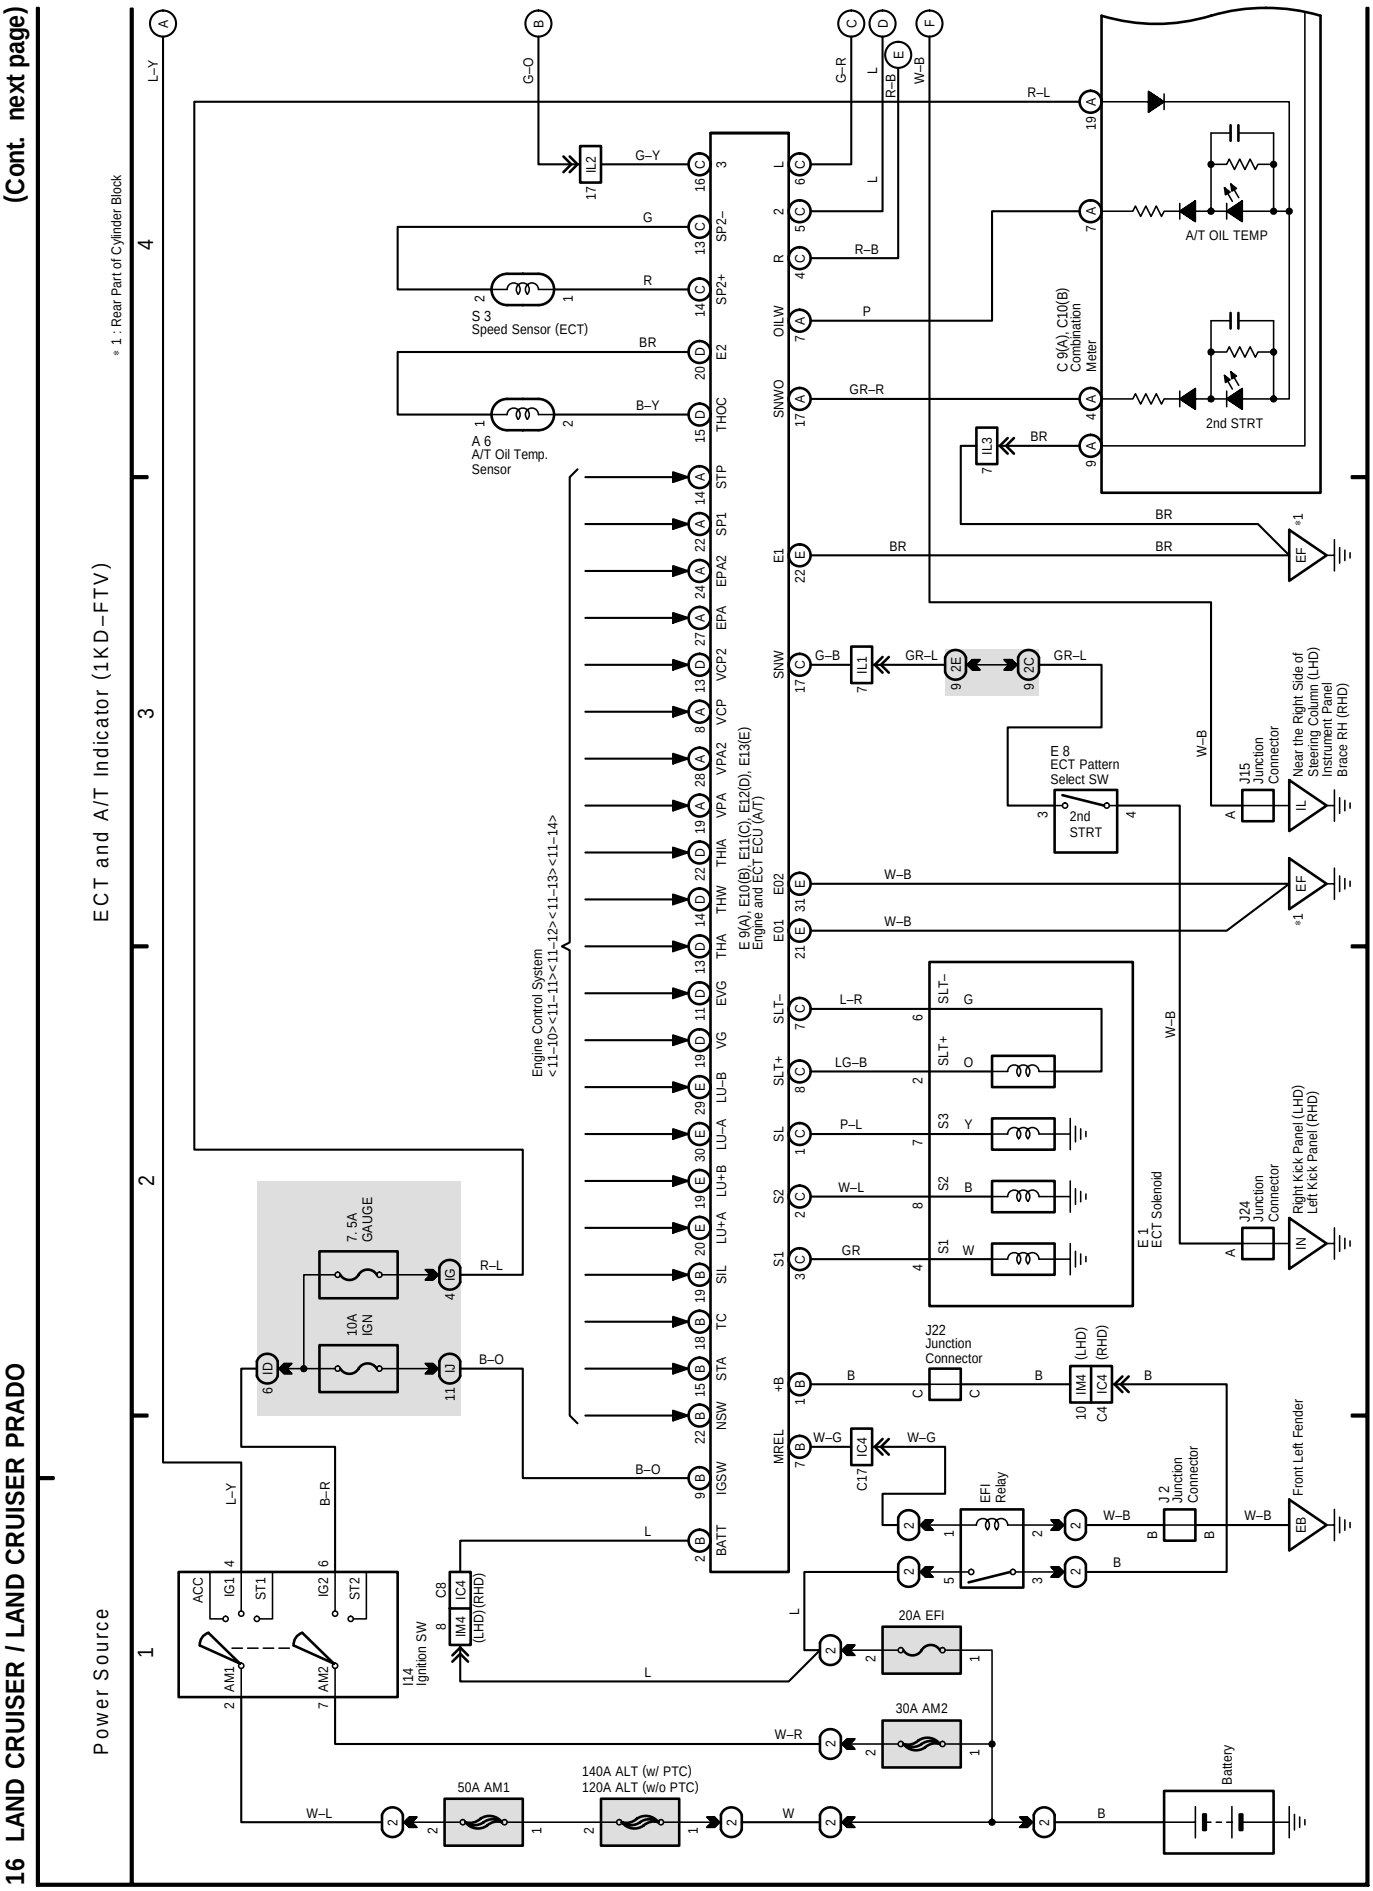

(Cont. next page)
16 LAND CRUISER / LAND CRUISER PRADO
Power Source
ECT and A/T Indicator (1KD–FTV)
* 1 : Rear Part of Cylinder Block
A/T OIL TEMP
2nd STRT
S 3
Speed Sensor (ECT)
A 6
A/T Oil Temp.
Sensor
E 8
ECT Pattern
Select SW
2nd
STRT
E 1
ECT Solenoid
Engine Control System
<11–10><11–11><11–12><11–13><11–14>
E 9(A), E10(B), E11(C), E12(D), E13(E)
Engine and ECT ECU (A/T)
C 9(A), C10(B)
Combination
Meter
J15
Junction
Connector
Near the Right Side of
Steering Column (LHD)
Instrument Panel
Brace RH (RHD)
J24
Junction
Connector
Right Kick Panel (LHD)
Left Kick Panel (RHD)
J22
Junction
Connector
J2
Junction
Connector
Front Left Fender
EFI
Relay
L14
Ignition SW
ACC
IG1
ST1
IG2
ST2
AM1
AM2
7.5A
GAUGE
10A
IGN
20A EFI
30A AM2
50A AM1
140A ALT (w/ PTC)
120A ALT (w/o PTC)
Battery
EF
EB
IL
IN
BATT
IGSW
+B
MREL
STA
TC
SIL
LU+A
LU+B
LU–A
LU–B
VG
EVG
THA
THW
THIA
VPA
VPA2
VCP
VCP2
EPA
EPA2
SP1
STP
SP2–
SP2+
E2
THOC
NSW
SNW
E01
E02
E1
OILW
SNWO
SLT–
SLT+
SL
S2
S1
L–Y
B–R
B–O
G–O
G–R
R–B
W–B
R–L
G–Y
G–B
GR–L
L–R
LG–B
P–L
W–L
GR
W–G
W–R
GR–R
B–Y
BR
P
L
G
R
W
B
Y
O
S3
S2
S1
SLT+
SLT–

16 LAND CRUISER / LAND CRUISER PRADO (Cont' d)

