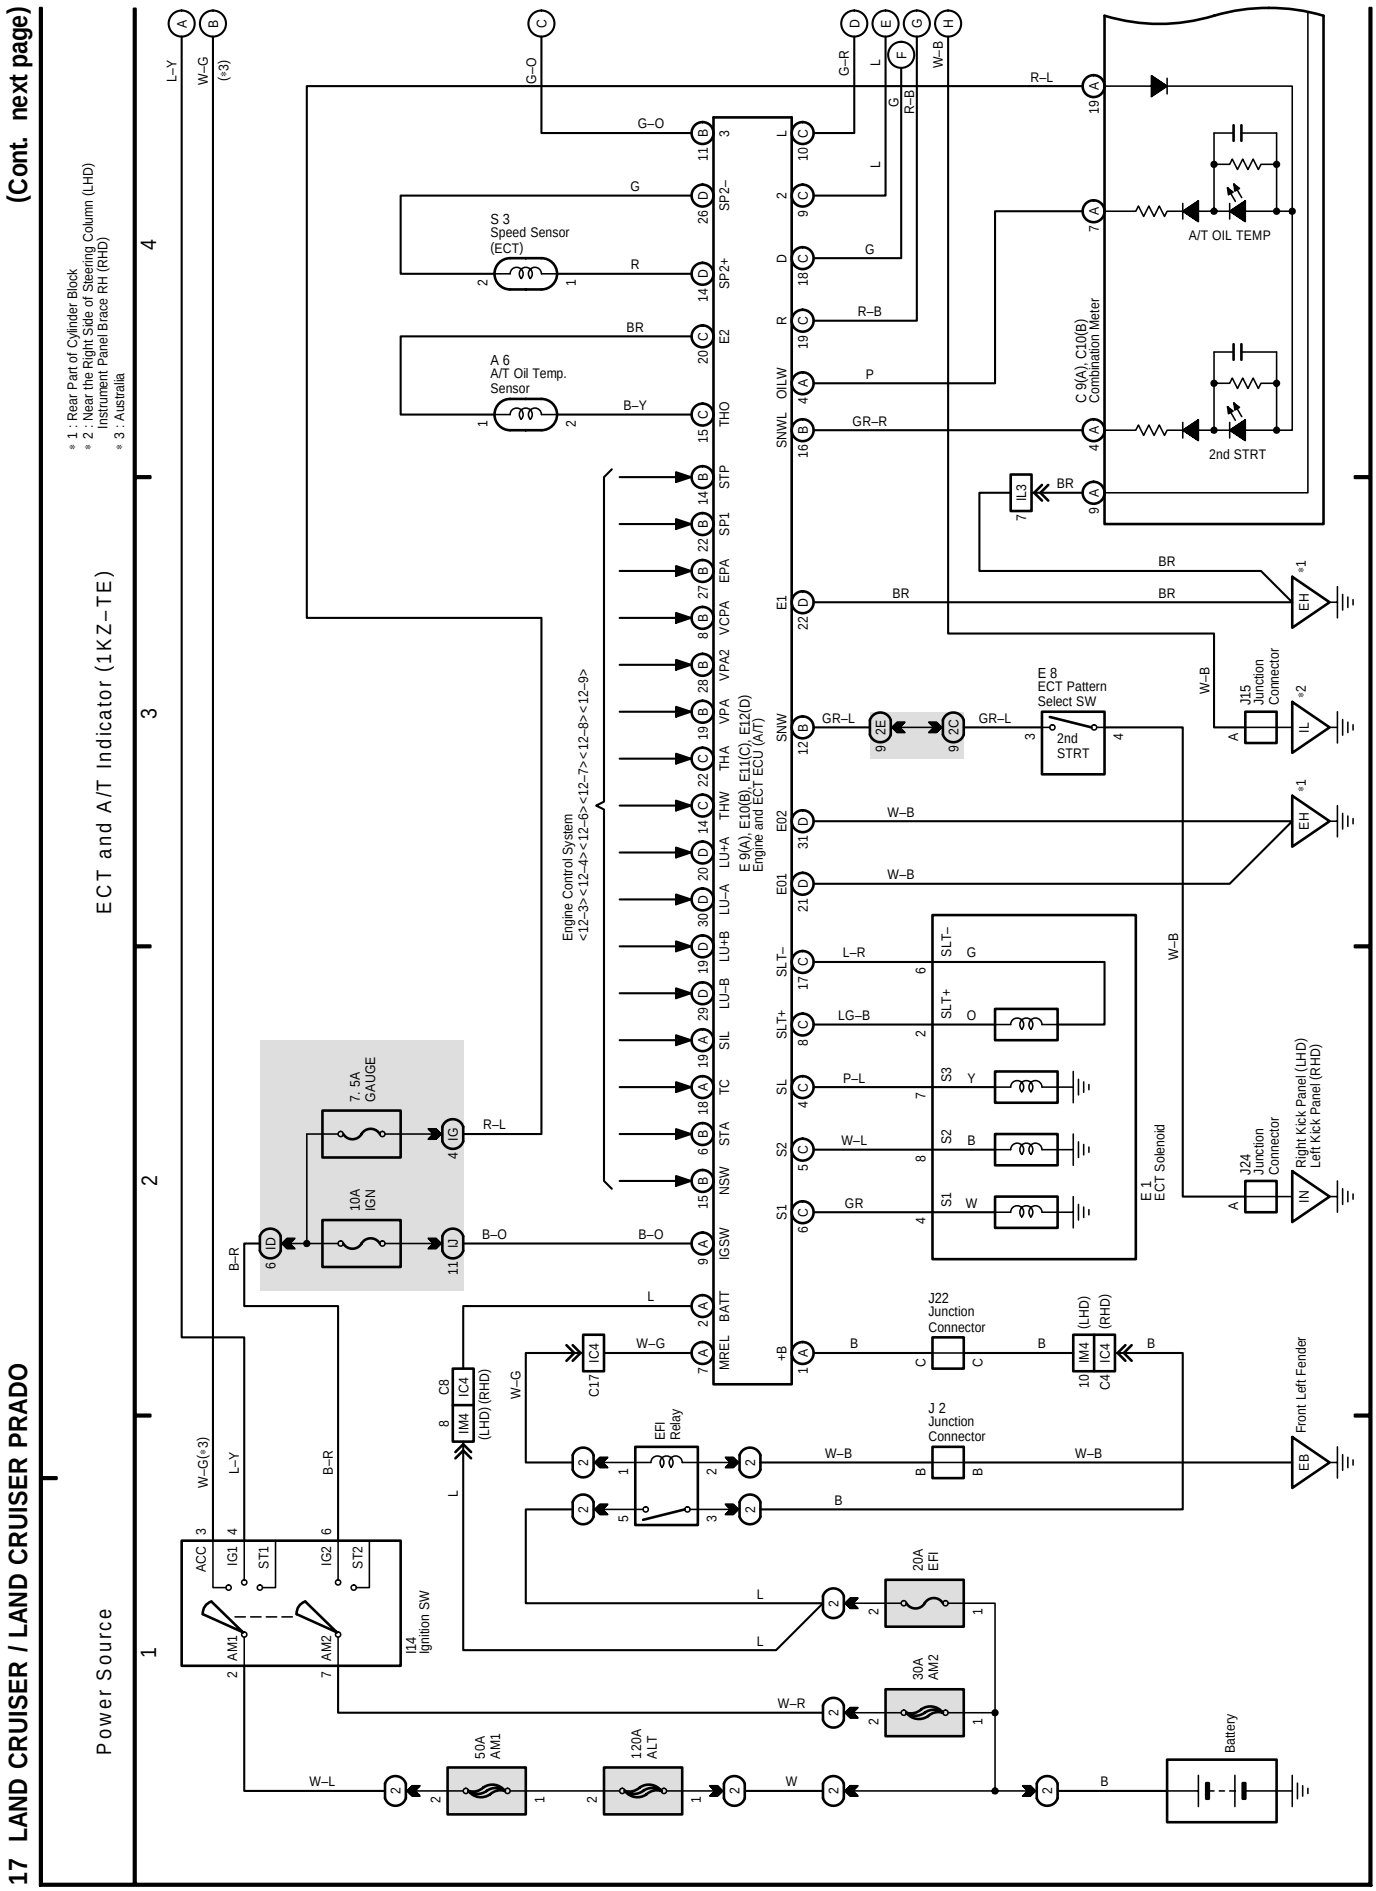

(Cont. next page)
17 LAND CRUISER / LAND CRUISER PRADO
Power Source
ECT and A/T Indicator (1KZ–TE)
* 1 : Rear Part of Cylinder Block
* 2 : Near the Right Side of Steering Column (LHD)
Instrument Panel Brace RH (RHD)
* 3 : Australia
S 3
Speed Sensor
(ECT)
A 6
A/T Oil Temp.
Sensor
A/T OIL TEMP
2nd STRT
C 9(A), C10(B)
Combination Meter
E 8
ECT Pattern
Select SW
2nd
STRT
J15
Junction
Connector
J24
Junction
Connector
Right Kick Panel (LHD)
Left Kick Panel (RHD)
J22
Junction
Connector
J 2
Junction
Connector
E 1
ECT Solenoid
Engine Control System
<12–3><12–4><12–6><12–7><12–8><12–9>
E 9(A), E10(B), E11(C), E12(D)
Engine and ECT ECU (A/T)
7.5A
GAUGE
10A
IGN
EFI
Relay
I14
Ignition SW
20A
EFI
30A
AM2
50A
AM1
120A
ALT
Battery
Front Left Fender

17 LAND CRUISER / LAND CRUISER PRADO (Cont' d)

