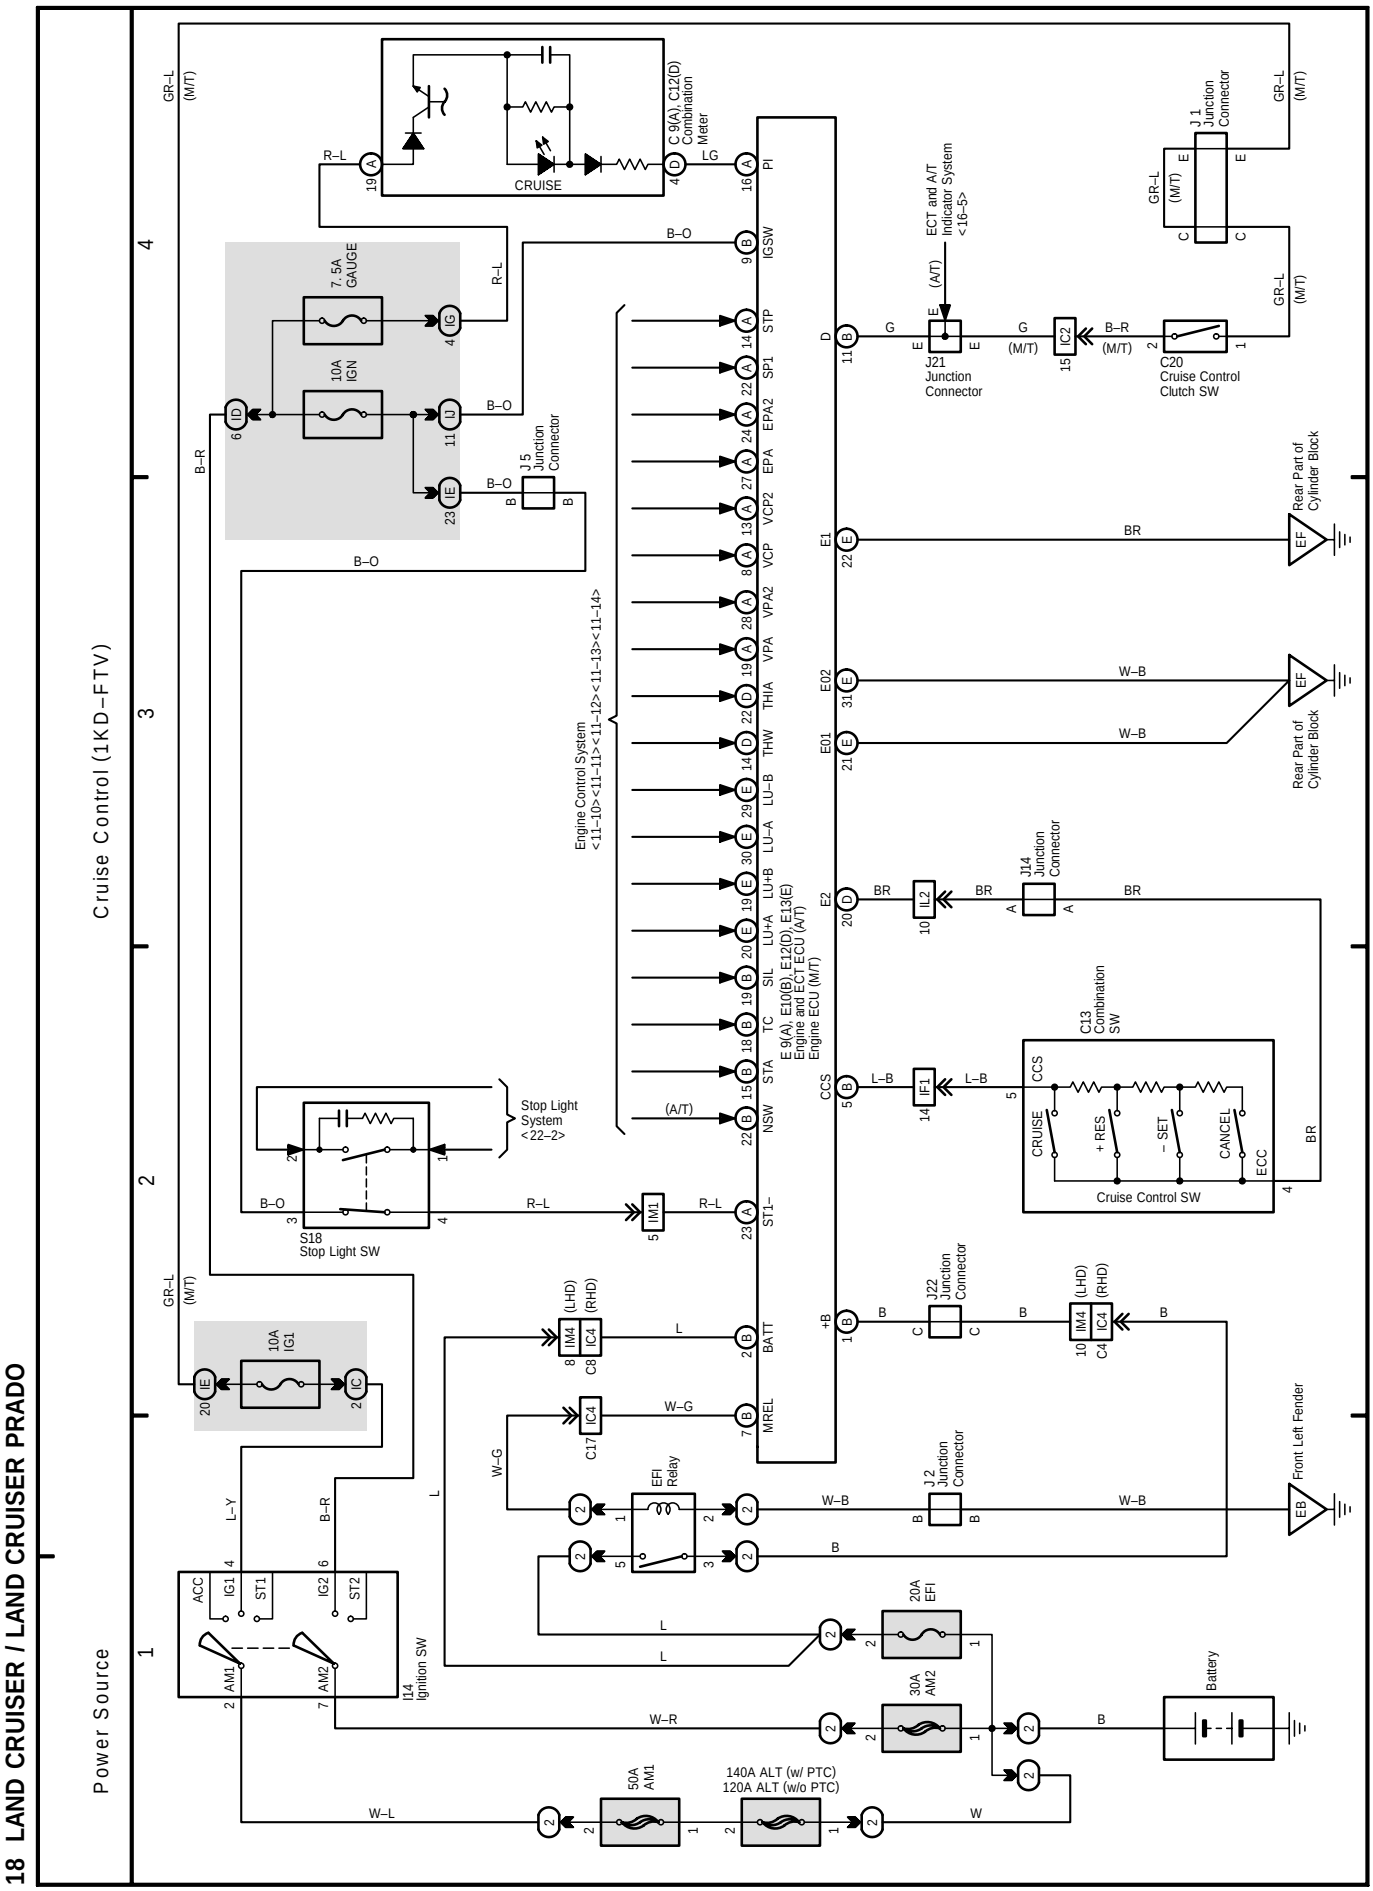

18 LAND CRUISER / LAND CRUISER PRADO
Power Source
Cruise Control (1KD–FTV)
1
2
3
4
CRUISE
C 9(A), C12(D) Combination Meter
7.5A GAUGE
10A IGN
J 5 Junction Connector
Engine Control System <11–10><11–11><11–12><11–13><11–14>
E 9(A), E10(B), E12(D), E13(E) Engine and ECT ECU (A/T) Engine ECU (M/T)
Stop Light System <22–2>
S18 Stop Light SW
I14 Ignition SW
10A IG1
EFI Relay
20A EFI
30A AM2
50A AM1
140A ALT (w/ PTC)
120A ALT (w/o PTC)
Battery
ECT and A/T Indicator System <16–5>
J21 Junction Connector
C20 Cruise Control Clutch SW
J 1 Junction Connector
J14 Junction Connector
J22 Junction Connector
J 2 Junction Connector
C13 Combination SW
Cruise Control SW
+ RES
– SET
CANCEL
Rear Part of Cylinder Block
Front Left Fender