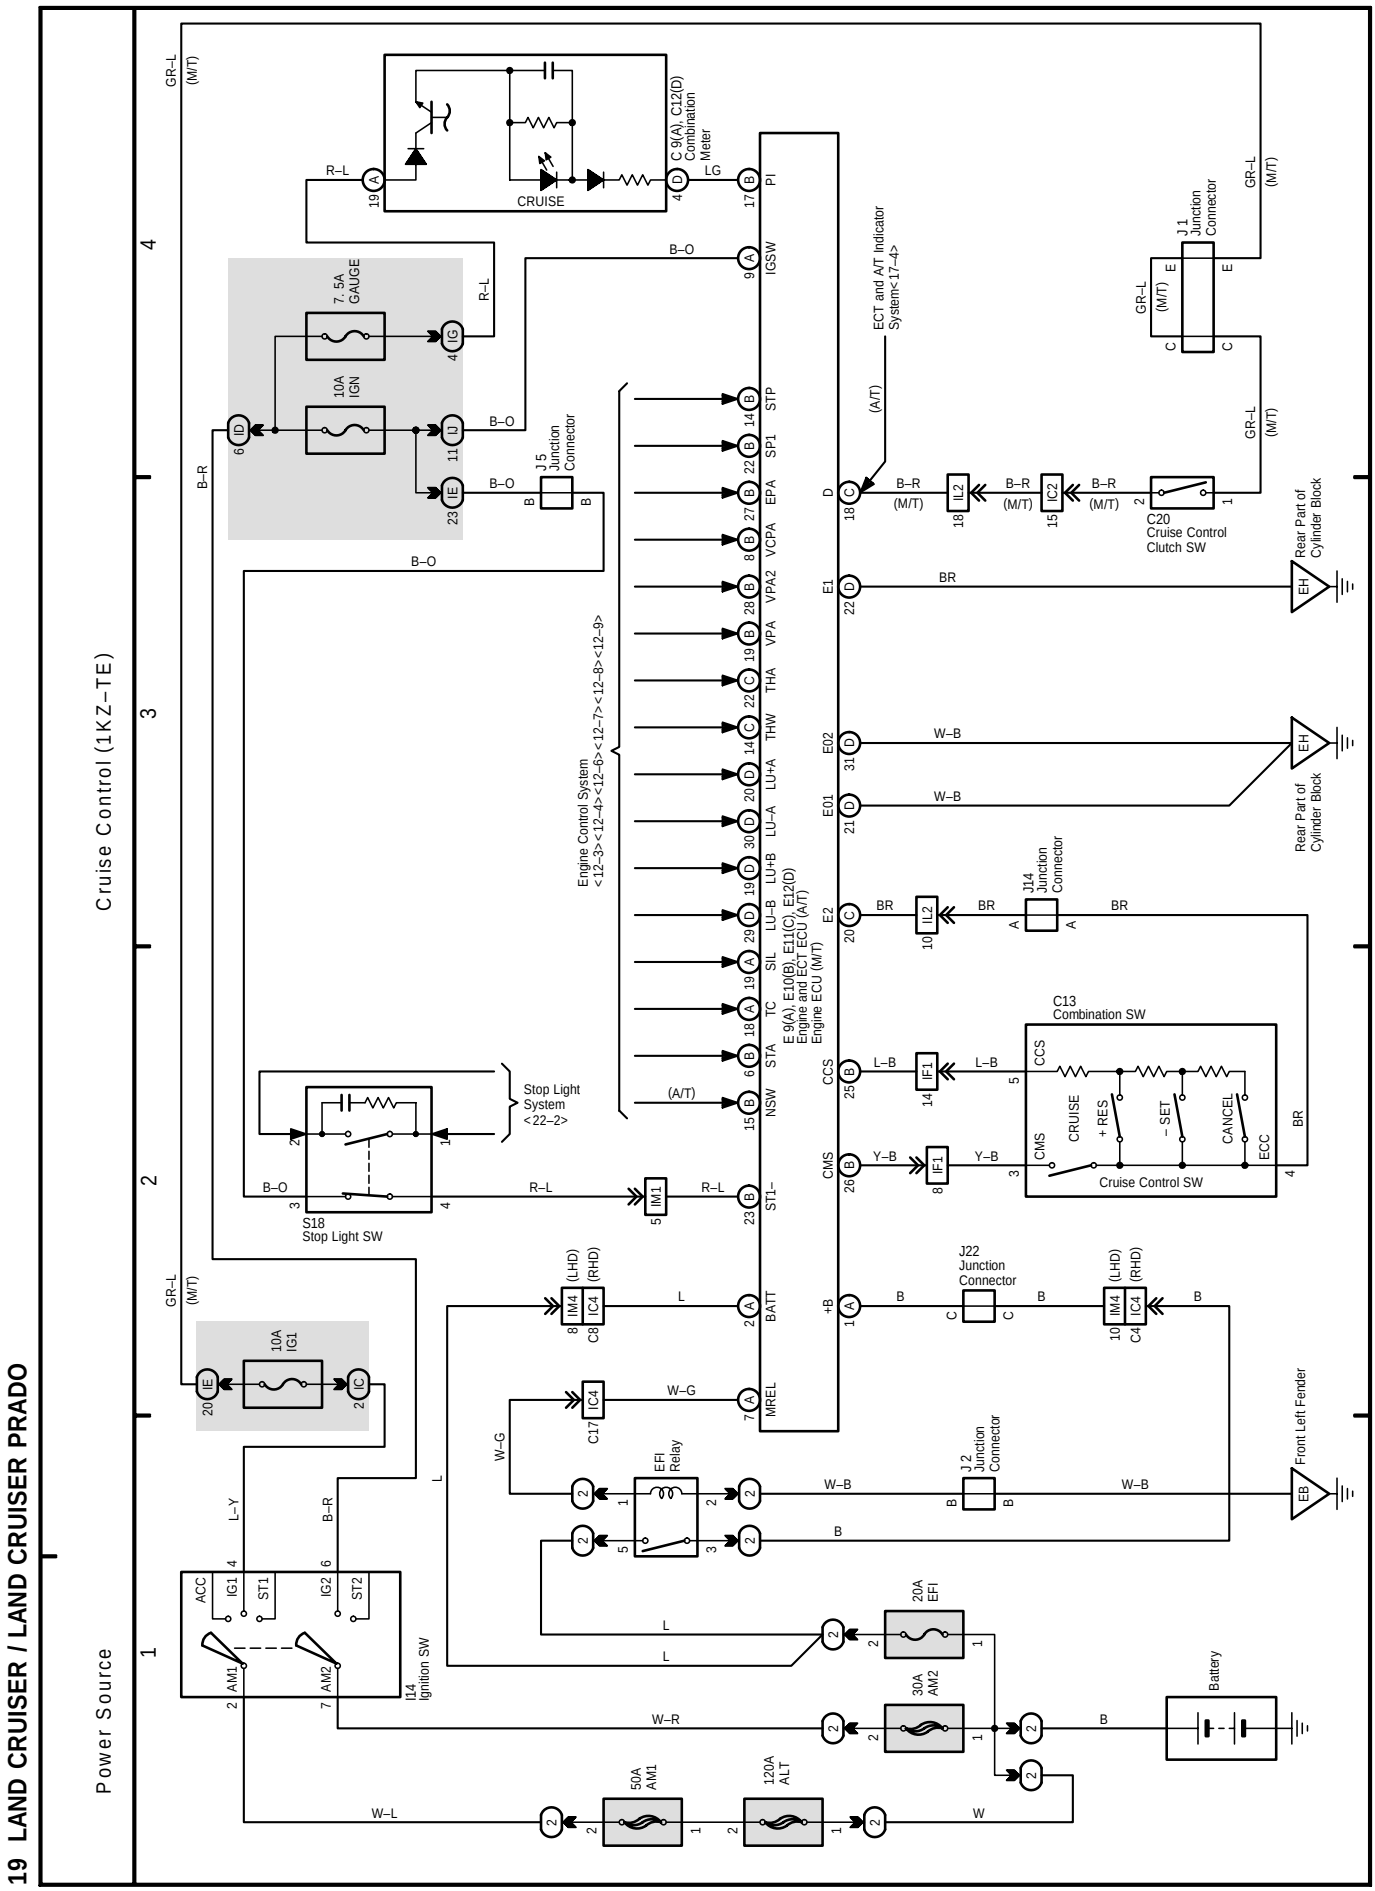

19 LAND CRUISER / LAND CRUISER PRADO
Power Source
Cruise Control (1KZ–TE)
1
2
3
4
Battery
Ignition SW
Stop Light SW
Stop Light System
Engine Control System
Engine and ECT ECU (A/T)
Engine ECU (M/T)
Combination SW
Cruise Control SW
Cruise Control Clutch SW
ECT and A/T Indicator System
Junction Connector
Rear Part of Cylinder Block
Front Left Fender
EFI Relay
CRUISE
7. 5A GAUGE
10A IGN
10A IG1
20A EFI
30A AM2
50A AM1
120A ALT