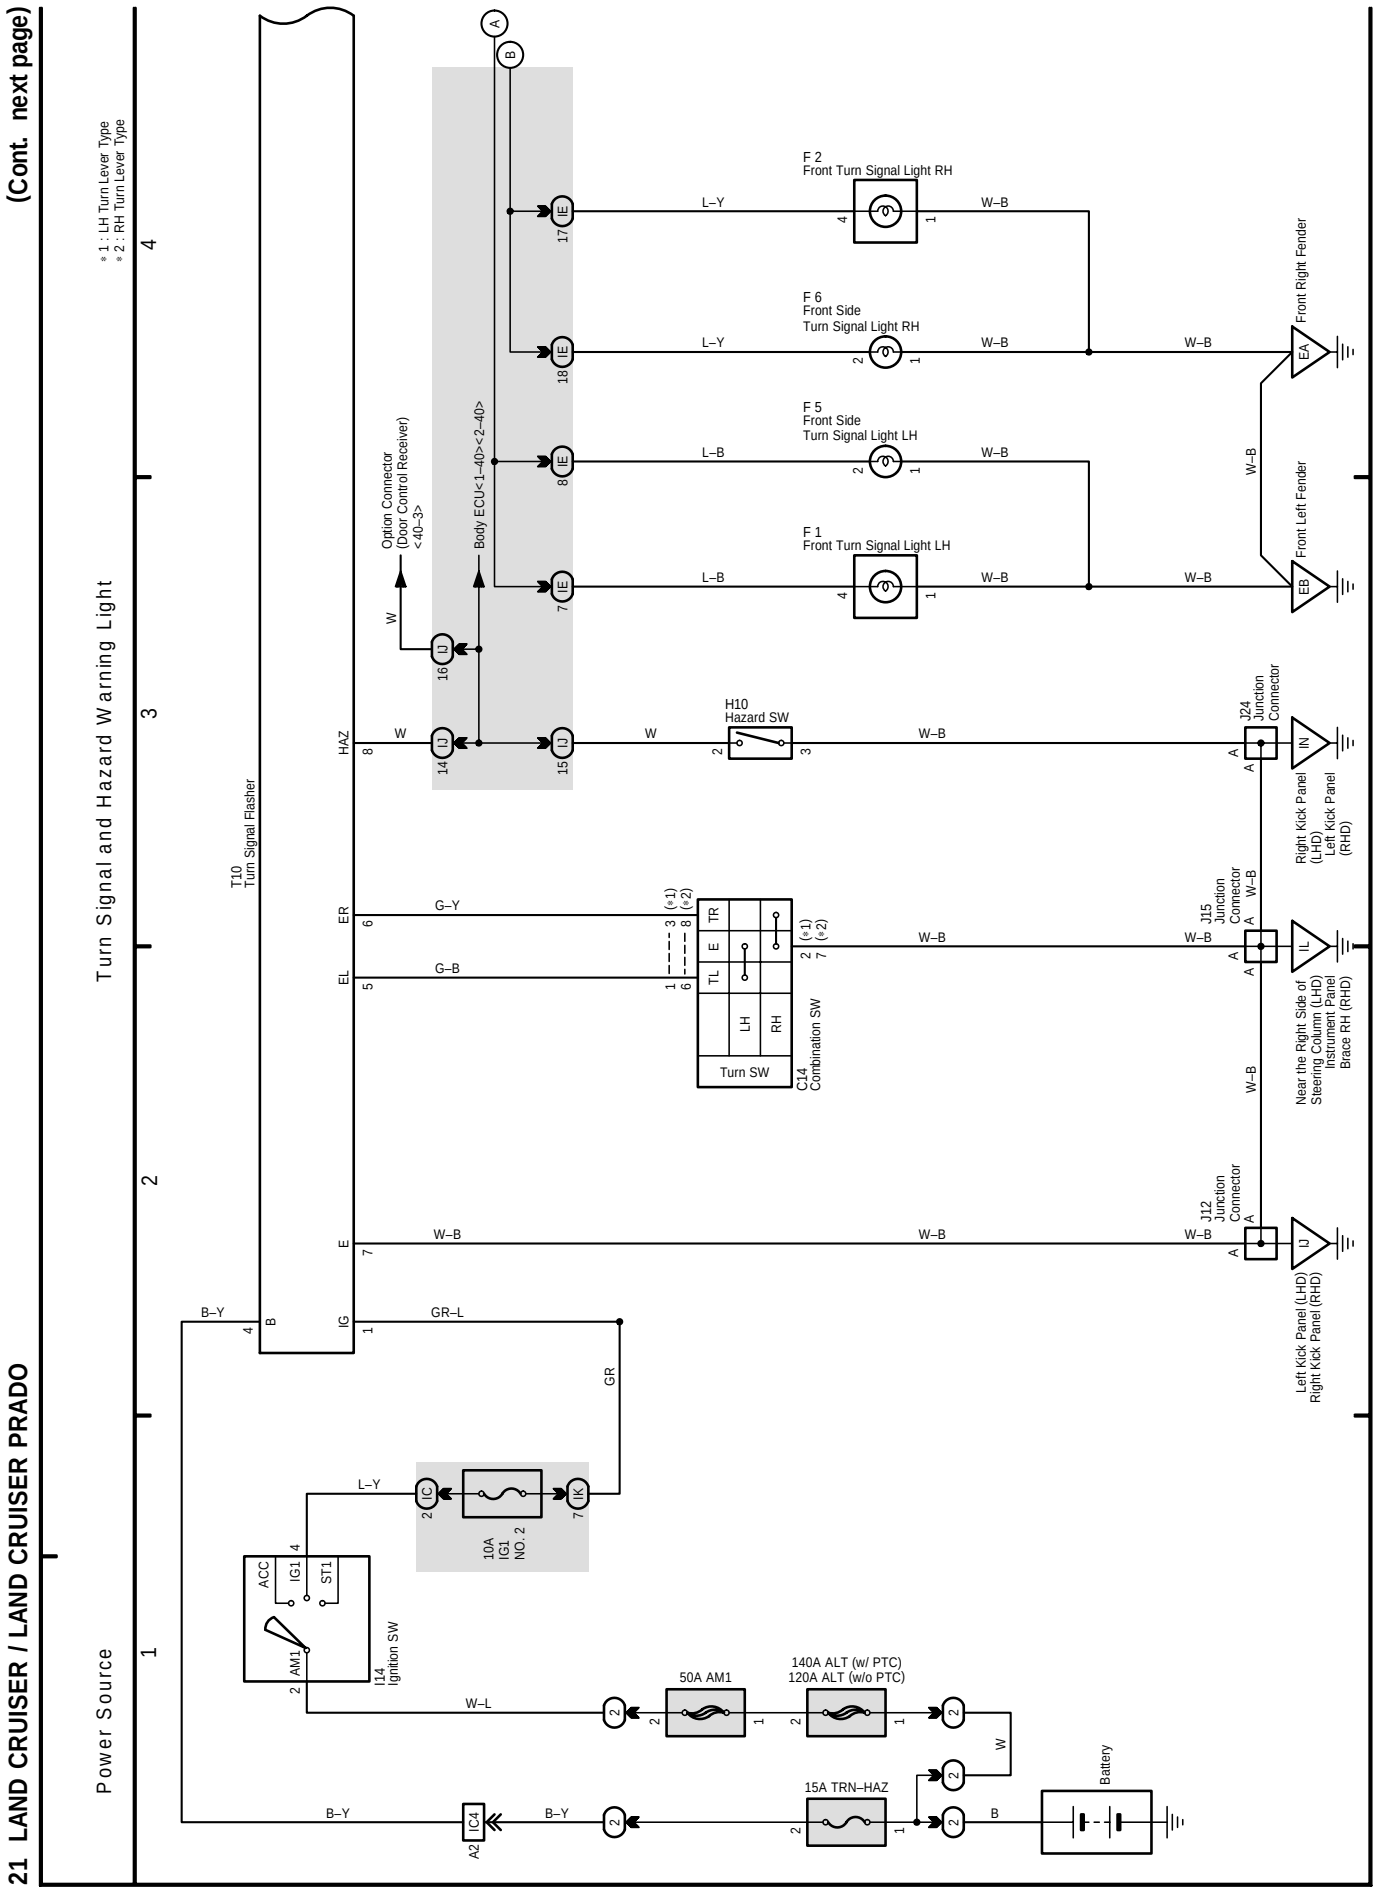

(Cont. next page)
21 LAND CRUISER / LAND CRUISER PRADO
Power Source
Turn Signal and Hazard Warning Light
1
2
3
4
* 1 : LH Turn Lever Type
* 2 : RH Turn Lever Type
T10
Turn Signal Flasher
Option Connector
(Door Control Receiver)
<40–3>
Body ECU<1–40><2–40>
F 2
Front Turn Signal Light RH
F 6
Front Side
Turn Signal Light RH
F 5
Front Side
Turn Signal Light LH
F 1
Front Turn Signal Light LH
Front Right Fender
Front Left Fender
H10
Hazard SW
J24
Junction
Connector
Right Kick Panel (LHD)
Left Kick Panel (RHD)
J15
Junction
Connector
Near the Right Side of Steering Column (LHD)
Instrument Panel Brace RH (RHD)
J12
Junction
Connector
Left Kick Panel (LHD)
Right Kick Panel (RHD)
C14
Combination SW
Turn SW
TR
E
TL
LH
RH
I14
Ignition SW
ACC
IG1
ST1
AM1
10A
IG1
NO. 2
50A AM1
140A ALT (w/ PTC)
120A ALT (w/o PTC)
15A TRN–HAZ
Battery
IC4
A2
HAZ
ER
EL
E
IG
B
L–Y
L–B
G–Y
G–B
W–B
B–Y
GR–L
GR
W–L
W
B

21 LAND CRUISER / LAND CRUISER PRADO (Cont' d)

