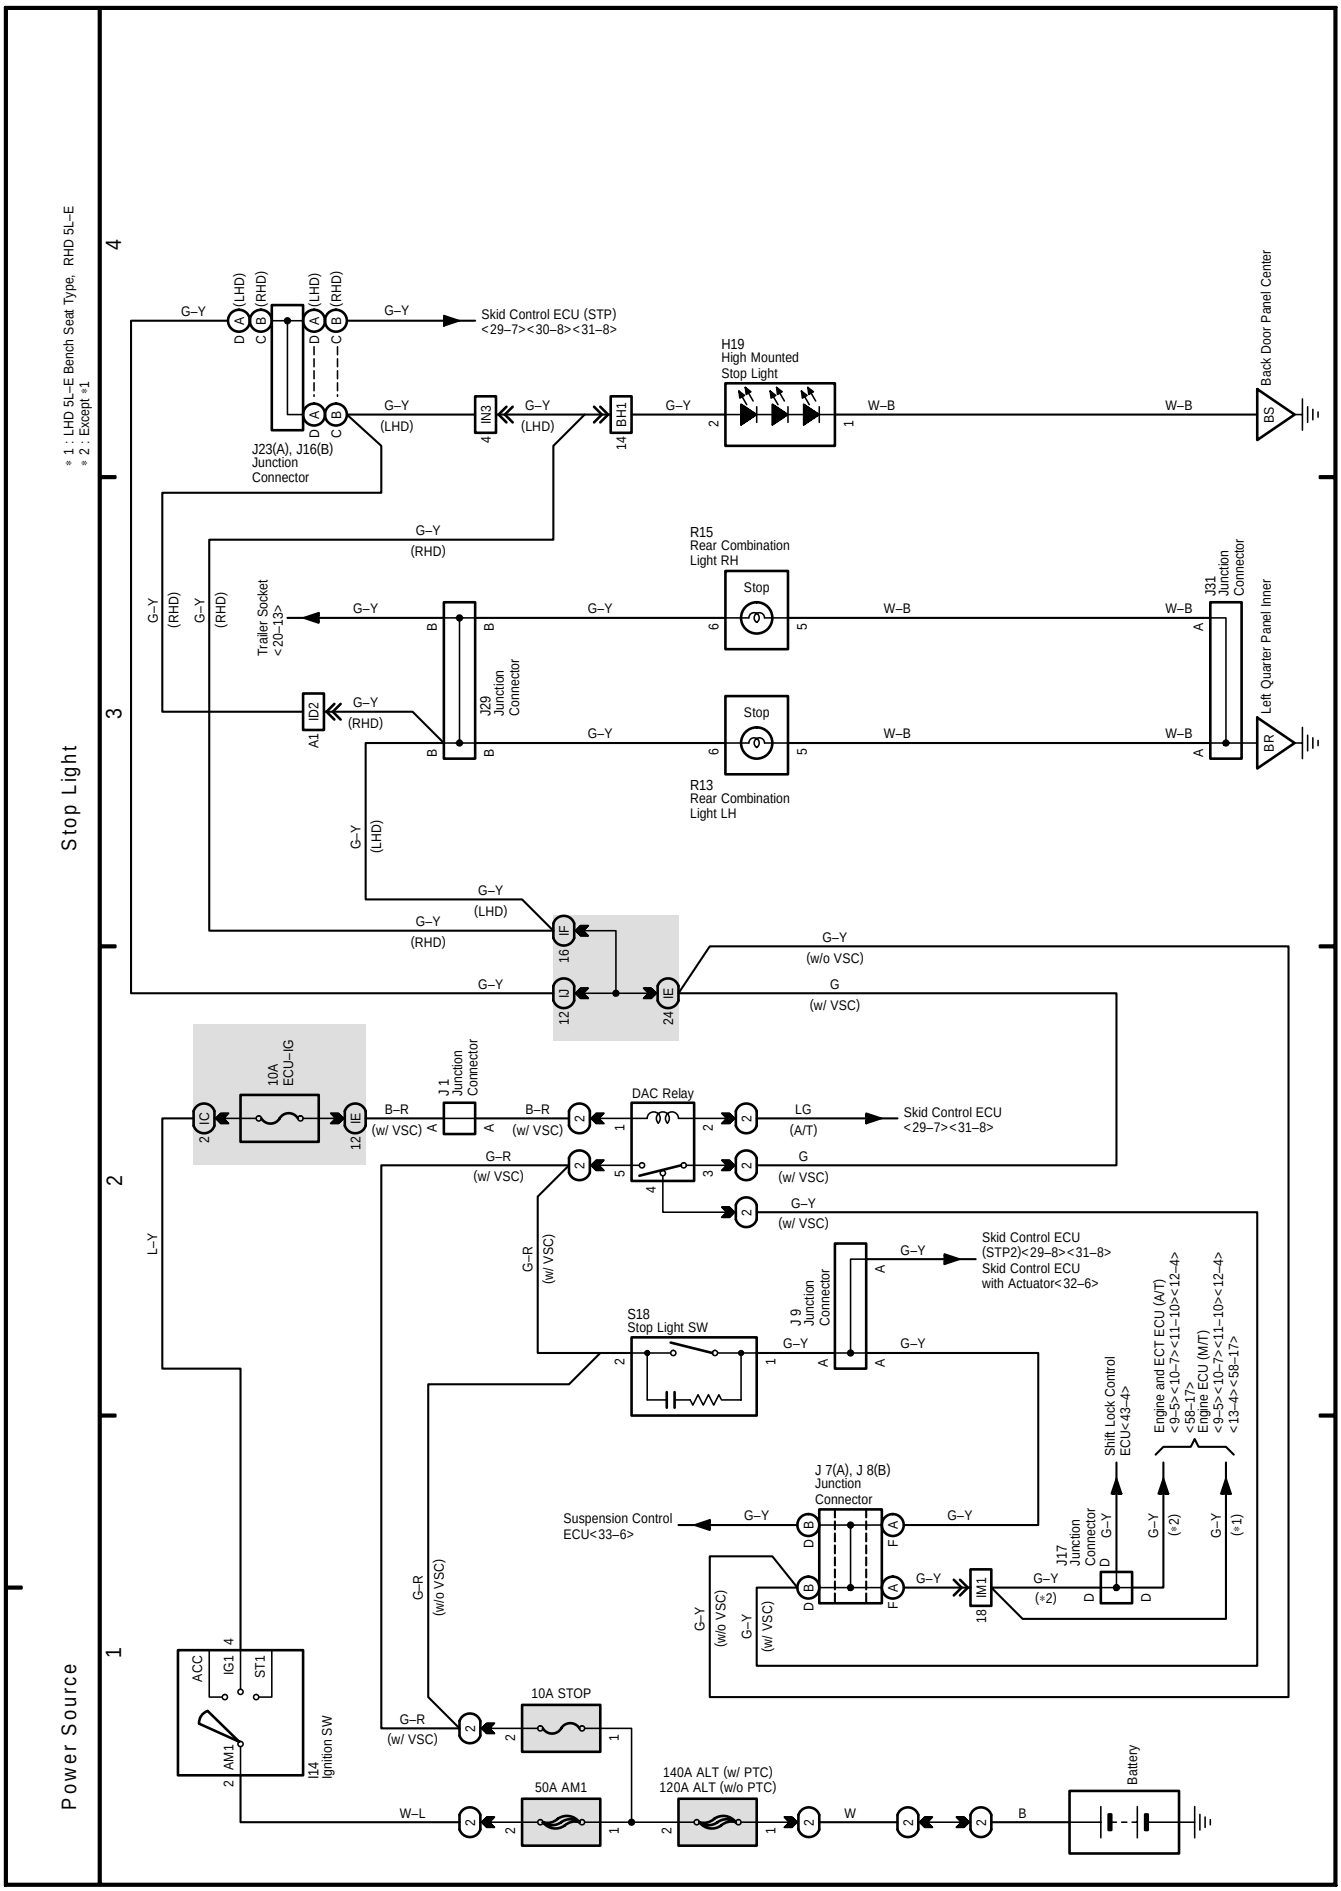

22 LAND CRUISER / LAND CRUISER PRADO
Power Source
Stop Light
* 1.: LHD 5L–E Bench Seat Type, RHD 5L–E
* 2.: Except *1
Skid Control ECU (STP)
<29–7><30–8><31–8>
H19
High Mounted
Stop Light
Back Door Panel Center
J23(A), J16(B)
Junction
Connector
R15
Rear Combination
Light RH
R13
Rear Combination
Light LH
Trailer Socket
<20–13>
J29
Junction
Connector
J31
Junction
Connector
Left Quarter Panel Inner
10A
ECU–IG
J1
Junction
Connector
DAC Relay
Skid Control ECU
<29–7><31–8>
S18
Stop Light SW
J9
Junction
Connector
Skid Control ECU
(STP2)<29–8><31–8>
Skid Control ECU
with Actuator<32–6>
Shift Lock Control
ECU<43–4>
Engine and ECT ECU (A/T)
<9–5><10–7><11–10><12–4>
<58–17>
Engine ECU (M/T)
<9–5><10–7><11–10><12–4>
<13–4><58–17>
J 7(A), J 8(B)
Junction
Connector
Suspension Control
ECU<33–6>
J17
Junction
Connector
10A STOP
50A AM1
140A ALT (w/ PTC)
120A ALT (w/o PTC)
Battery
I14
Ignition SW
ACC
IG1
ST1
AM1