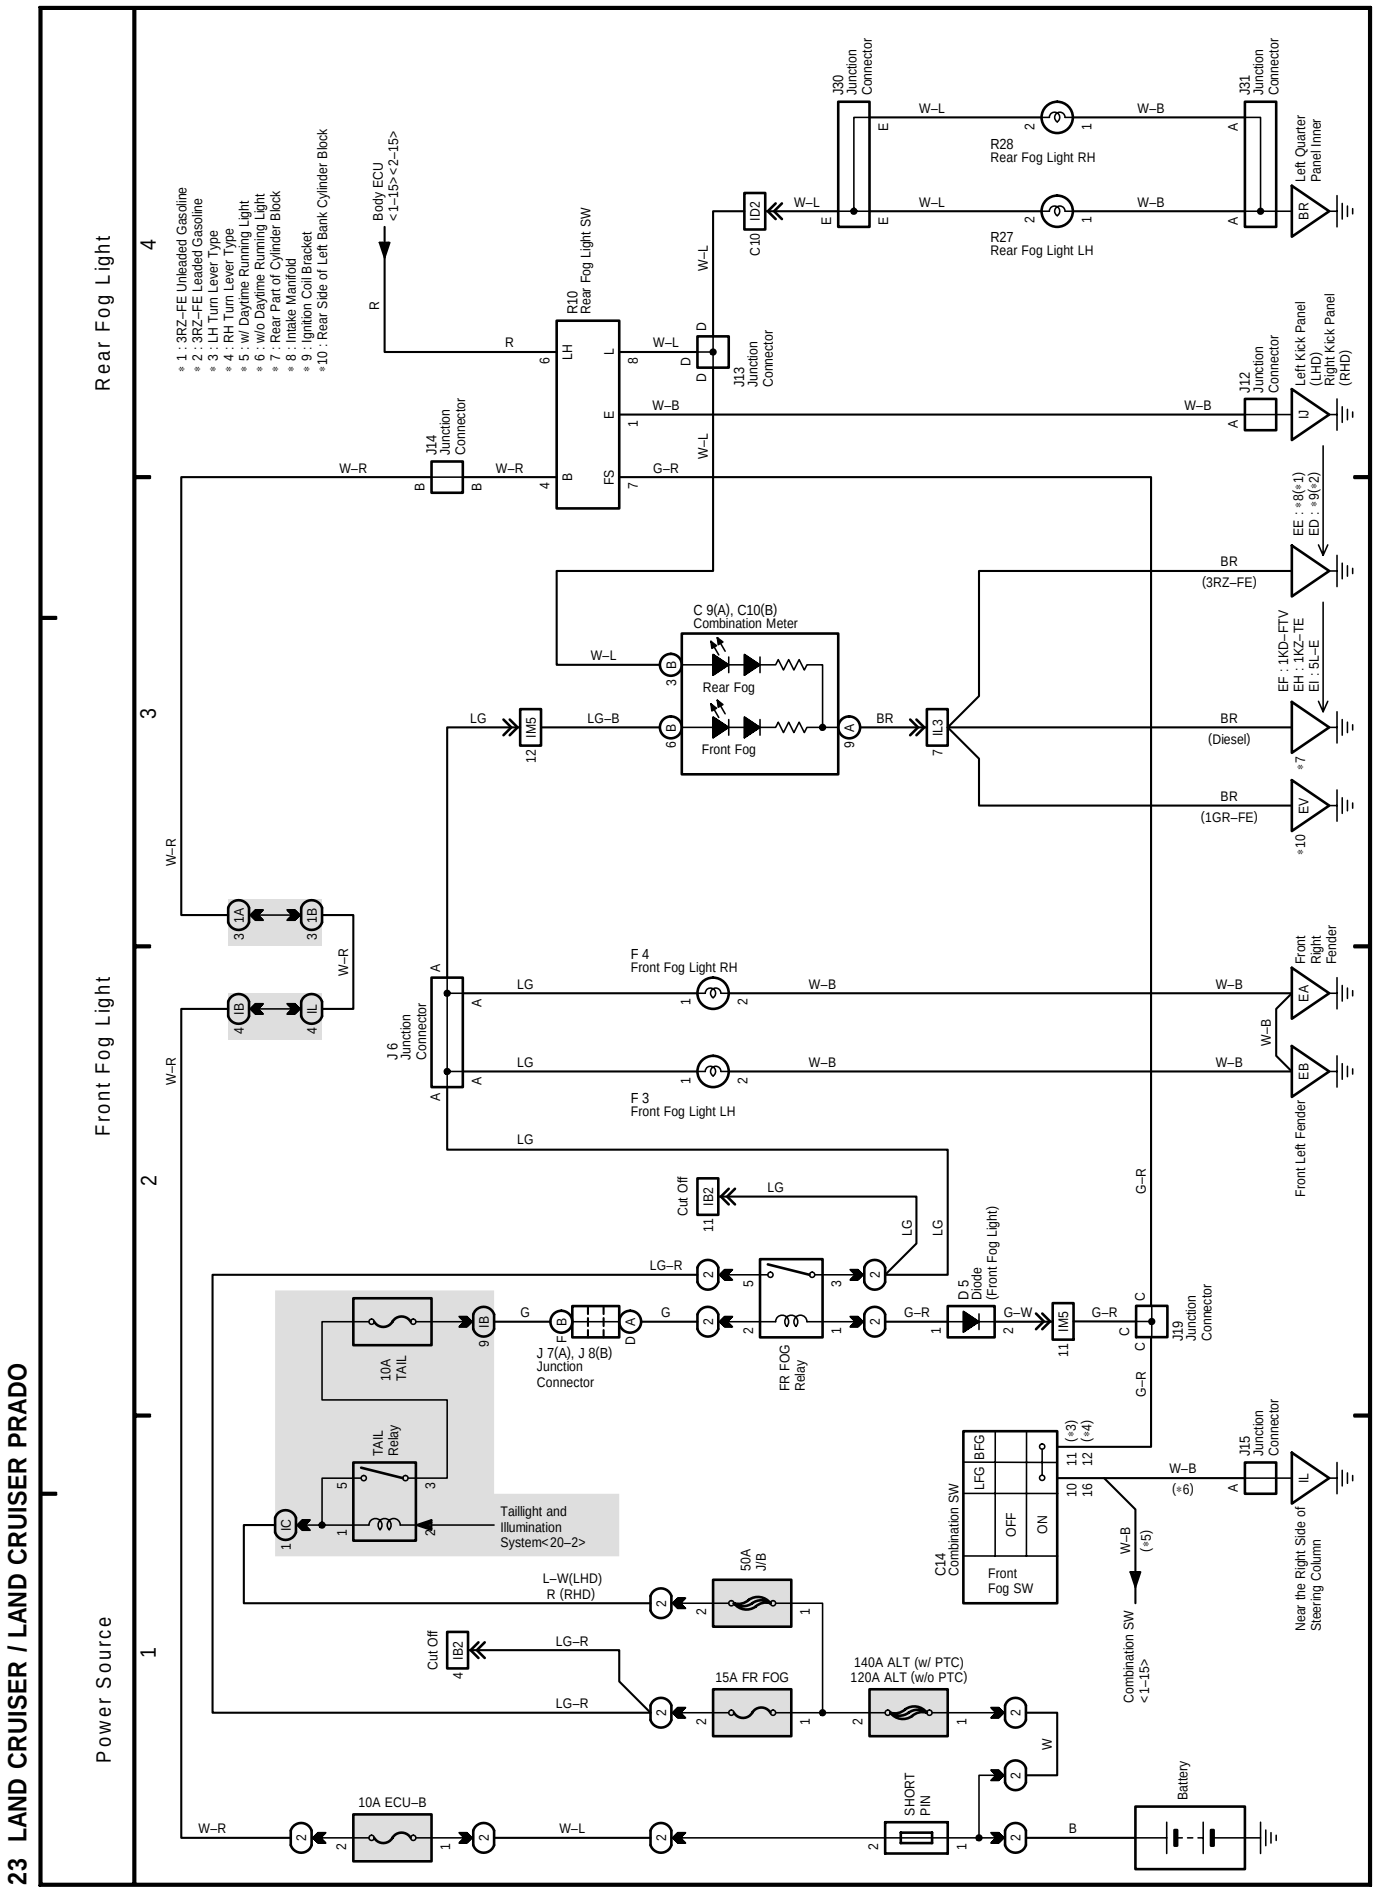

23 LAND CRUISER / LAND CRUISER PRADO
Power Source
Front Fog Light
Rear Fog Light
1
2
3
4
*1 : 3RZ–FE Unleaded Gasoline
*2 : 3RZ–FE Leaded Gasoline
*3 : LH Turn Lever Type
*4 : RH Turn Lever Type
*5 : w/ Daytime Running Light
*6 : w/o Daytime Running Light
*7 : Rear Part of Cylinder Block
*8 : Intake Manifold
*9 : Ignition Coil Bracket
*10 : Rear Side of Left Bank Cylinder Block
Body ECU <1–15><2–15>
R10 Rear Fog Light SW
J14 Junction Connector
J13 Junction Connector
J30 Junction Connector
J31 Junction Connector
R28 Rear Fog Light RH
R27 Rear Fog Light LH
Left Quarter Panel Inner
J12 Junction Connector
Left Kick Panel (LHD) Right Kick Panel (RHD)
C 9(A), C10(B) Combination Meter
Rear Fog
Front Fog
EE : *8(*1) ED : *9(*2)
EF : 1KD–FTV EH : 1KZ–TE EI : 5L–E
BR (3RZ–FE)
BR (Diesel)
BR (1GR–FE)
F 4 Front Fog Light RH
F 3 Front Fog Light LH
J 6 Junction Connector
Front Right Fender
Front Left Fender
Cut Off
D 5 Diode (Front Fog Light)
J 7(A), J 8(B) Junction Connector
FR FOG Relay
J19 Junction Connector
10A TAIL
TAIL Relay
Taillight and Illumination System<20–2>
50A J/B
15A FR FOG
140A ALT (w/ PTC) 120A ALT (w/o PTC)
10A ECU–B
SHORT PIN
Battery
C14 Combination SW
Front Fog SW
LFG
BFG
OFF
ON
J15 Junction Connector
Near the Right Side of Steering Column
Combination SW <1–15>
W–B (*6)
W–B (*5)