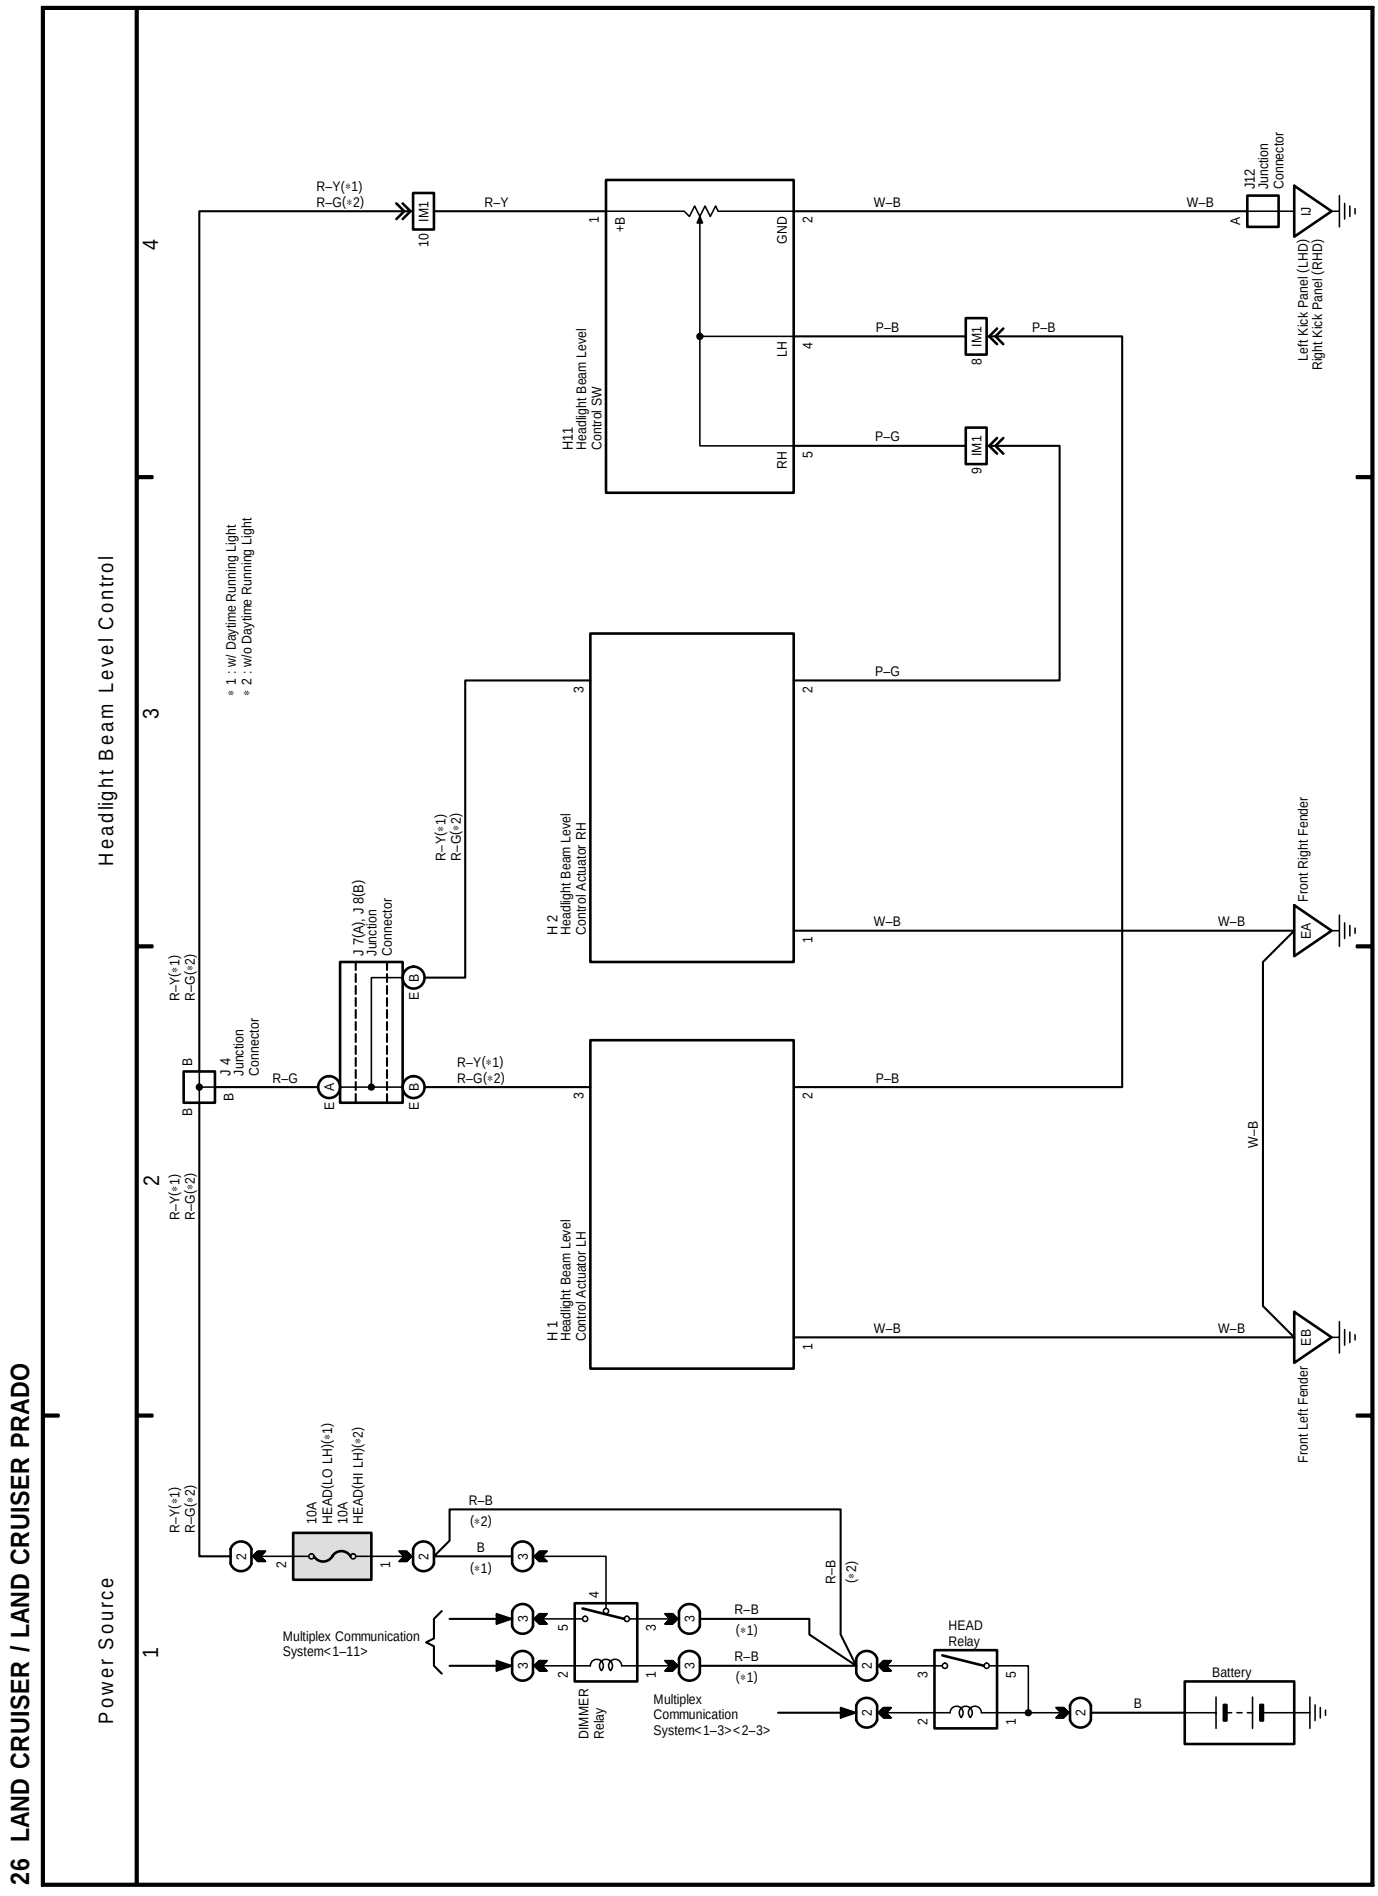

26 LAND CRUISER / LAND CRUISER PRADO
Headlight Beam Level Control
Power Source
1
2
3
4
* 1 : w/ Daytime Running Light
* 2 : w/o Daytime Running Light
R–Y(*1)
R–G(*2)
IM1
10
R–Y
H11
Headlight Beam Level
Control SW
+B
GND
LH
RH
1
2
4
5
W–B
P–B
P–G
8
9
J12
Junction
Connector
A
IJ
Left Kick Panel (LHD)
Right Kick Panel (RHD)
H2
Headlight Beam Level
Control Actuator RH
H1
Headlight Beam Level
Control Actuator LH
3
J 7(A), J 8(B)
Junction
Connector
E A
E B
J 4
Junction
Connector
B
R–G
EA
EB
Front Right Fender
Front Left Fender
10A
HEAD(LO LH)(*1)
10A
HEAD(HI LH)(*2)
R–B
(*2)
B
(*1)
Multiplex Communication
System<1–11>
DIMMER
Relay
Multiplex
Communication
System<1–3><2–3>
HEAD
Relay
Battery