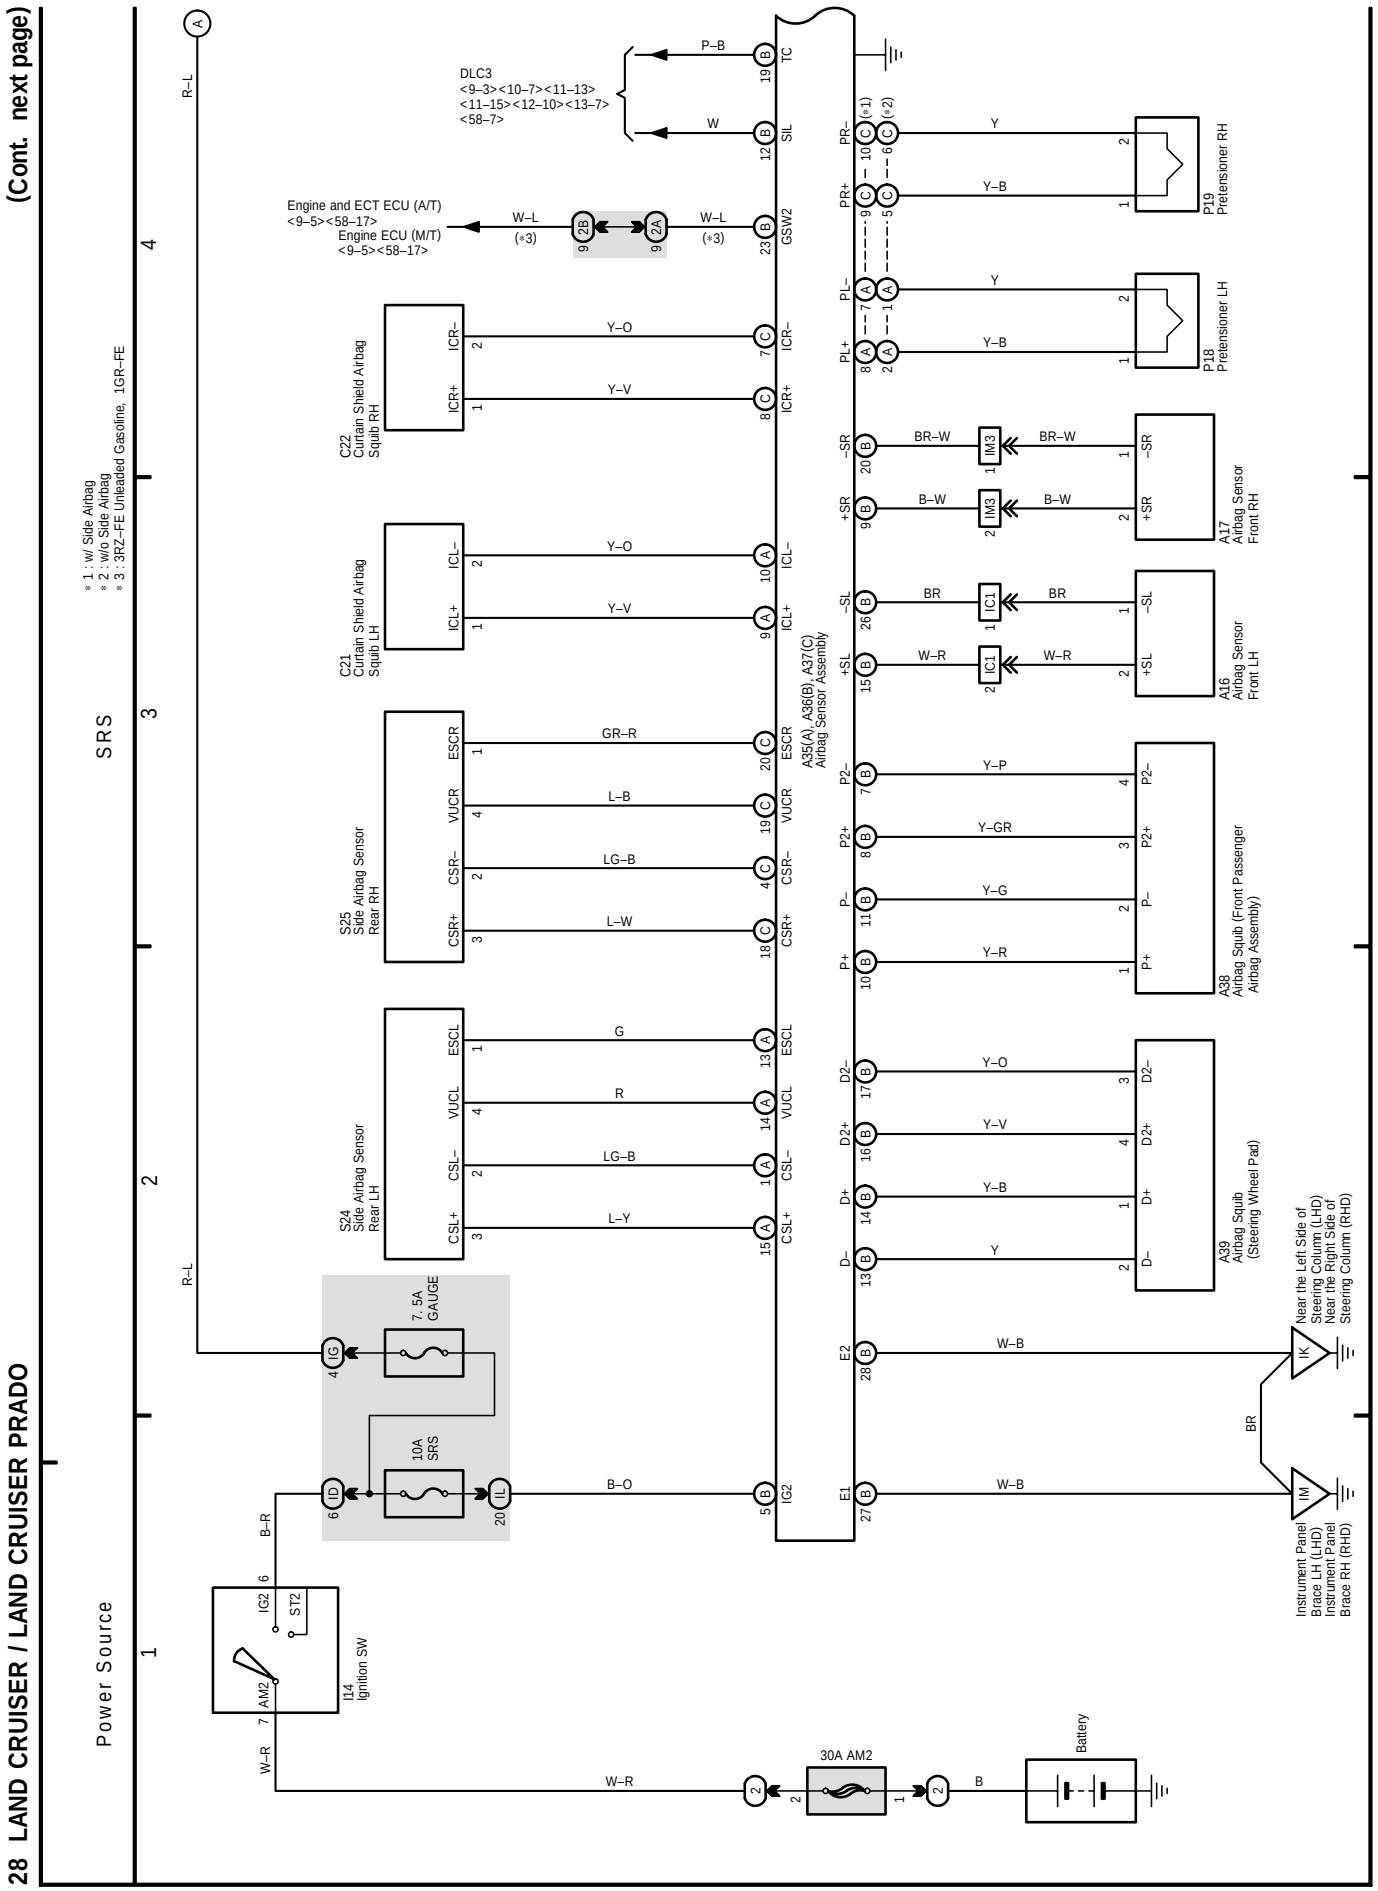

28 LAND CRUISER / LAND CRUISER PRADO
(Cont. next page)
Power Source
SRS
1
2
3
4
* 1 : w/ Side Airbag
* 2 : w/o Side Airbag
* 3 : 3RZ–FE Unleaded Gasoline, 1GR–FE
DLC3
<9–3><10–7><11–13>
<11–15><12–10><13–7>
<58–7>
Engine and ECT ECU (A/T)
<9–5><58–17>
Engine ECU (M/T)
<9–5><58–17>
I14
Ignition SW
C22
Curtain Shield Airbag
Squib RH
C21
Curtain Shield Airbag
Squib LH
S25
Side Airbag Sensor
Rear RH
S24
Side Airbag Sensor
Rear LH
A35(A), A36(B), A37(C)
Airbag Sensor Assembly
P19
Pretensioner RH
P18
Pretensioner LH
A17
Airbag Sensor
Front RH
A16
Airbag Sensor
Front LH
A38
Airbag Squib (Front Passenger
Airbag Assembly)
A39
Airbag Squib
(Steering Wheel Pad)
7.5A
GAUGE
10A
SRS
30A AM2
Battery
Near the Left Side of
Steering Column (LHD)
Near the Right Side of
Steering Column (RHD)
Instrument Panel
Brace LH (LHD)
Instrument Panel
Brace RH (RHD)

28 LAND CRUISER / LAND CRUISER PRADO (Cont' d)

