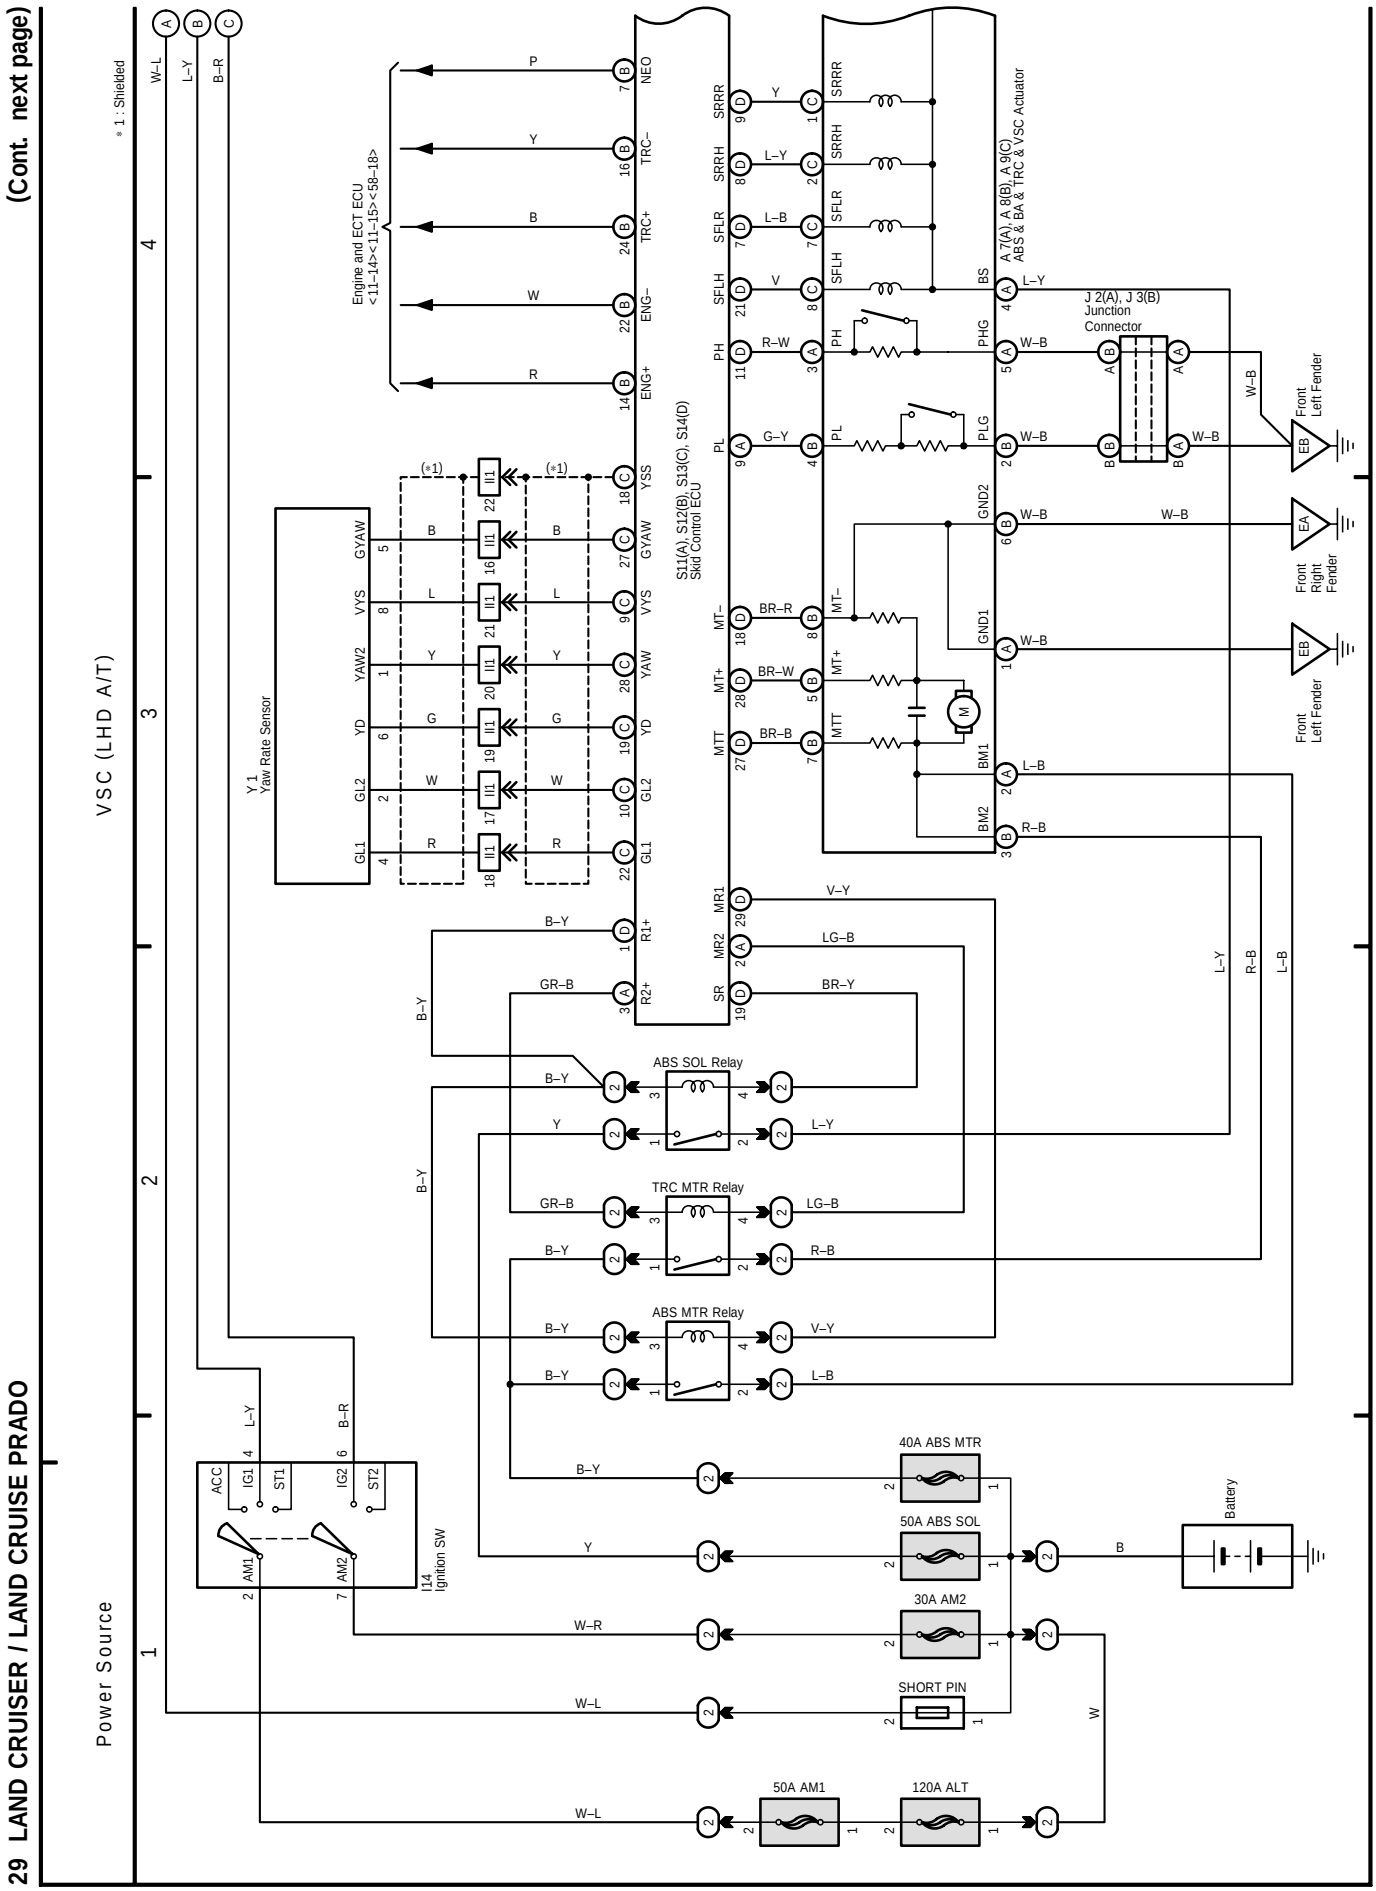
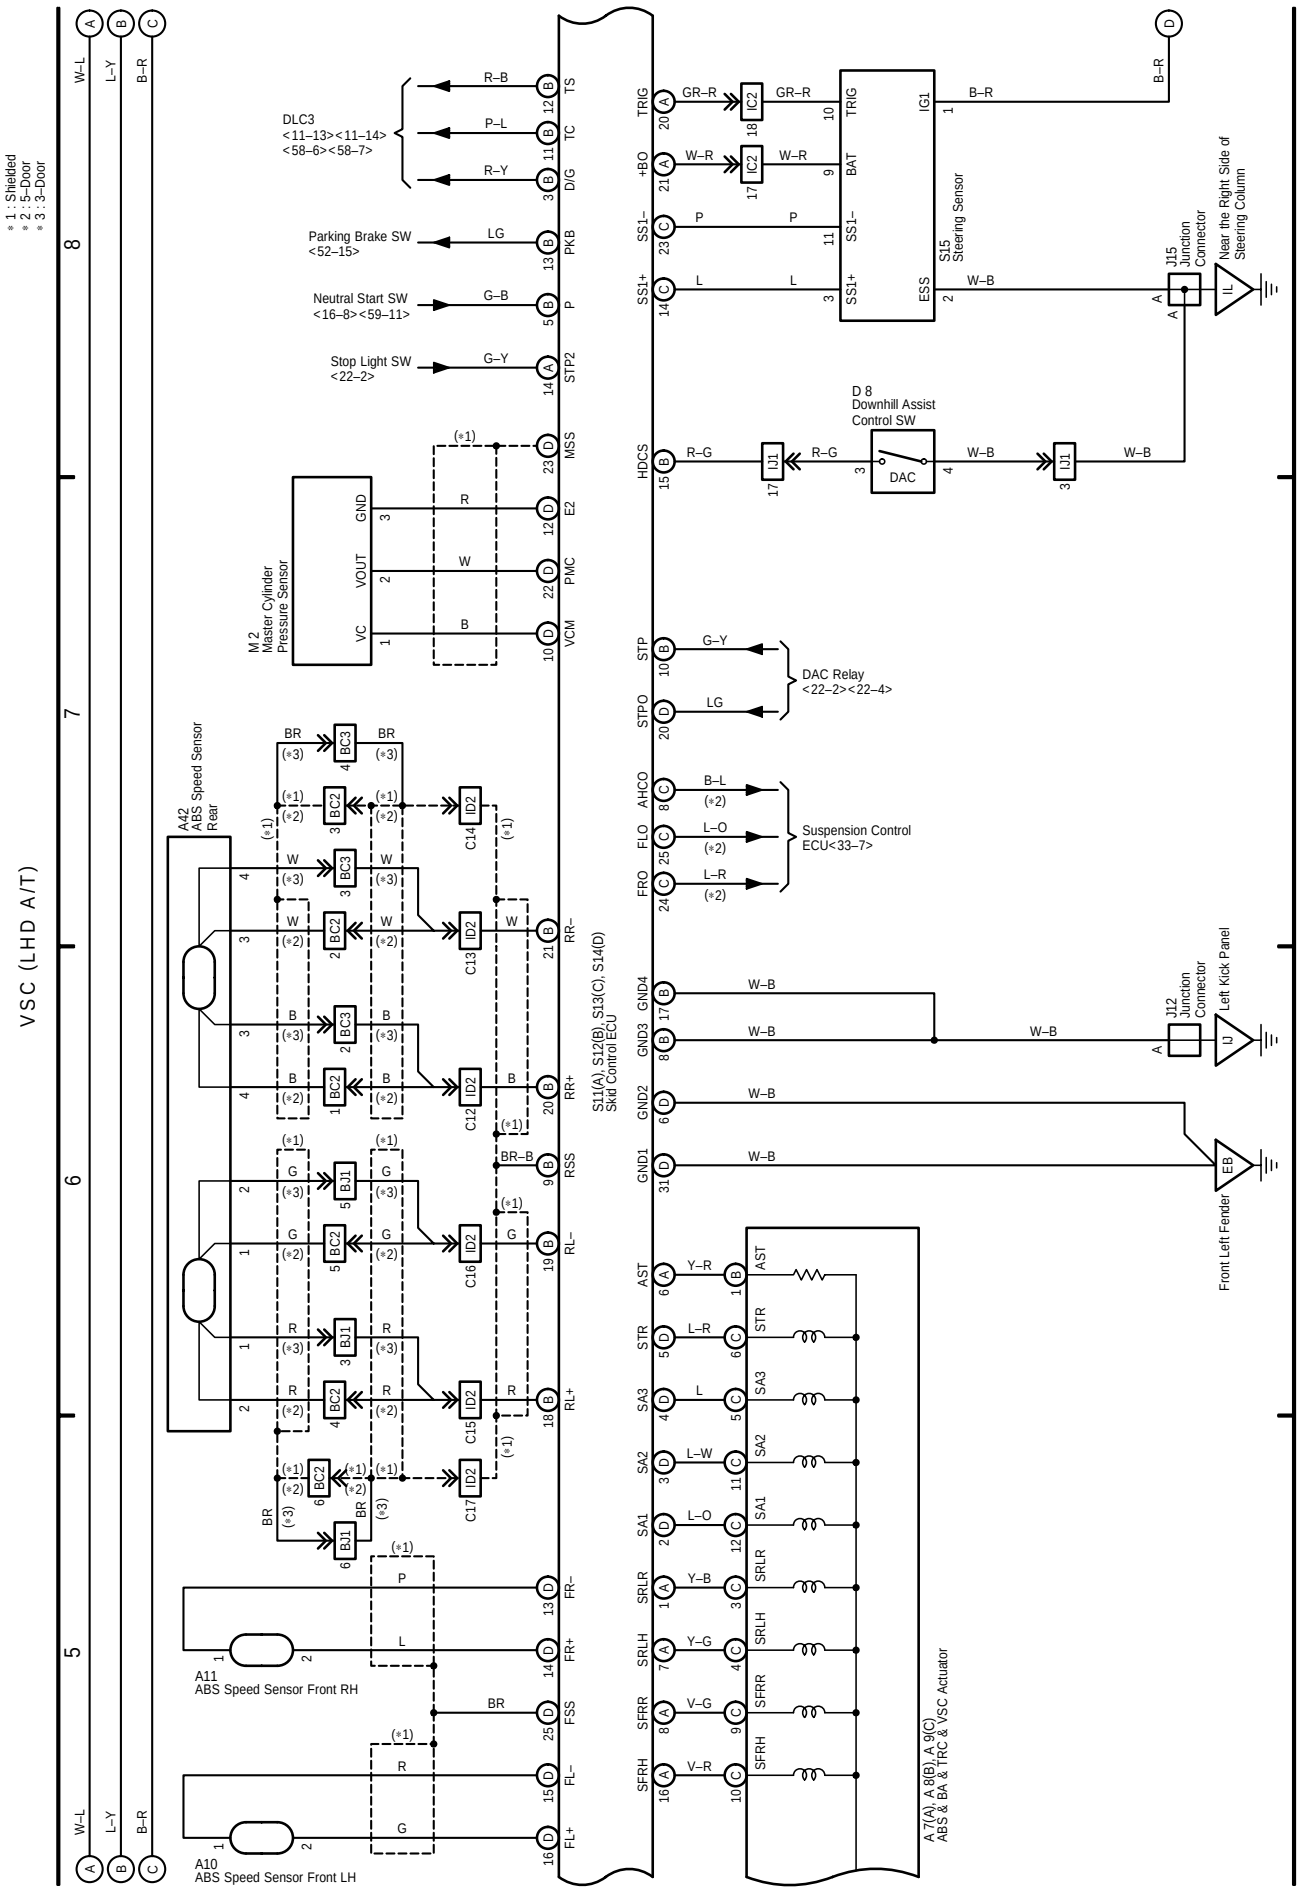
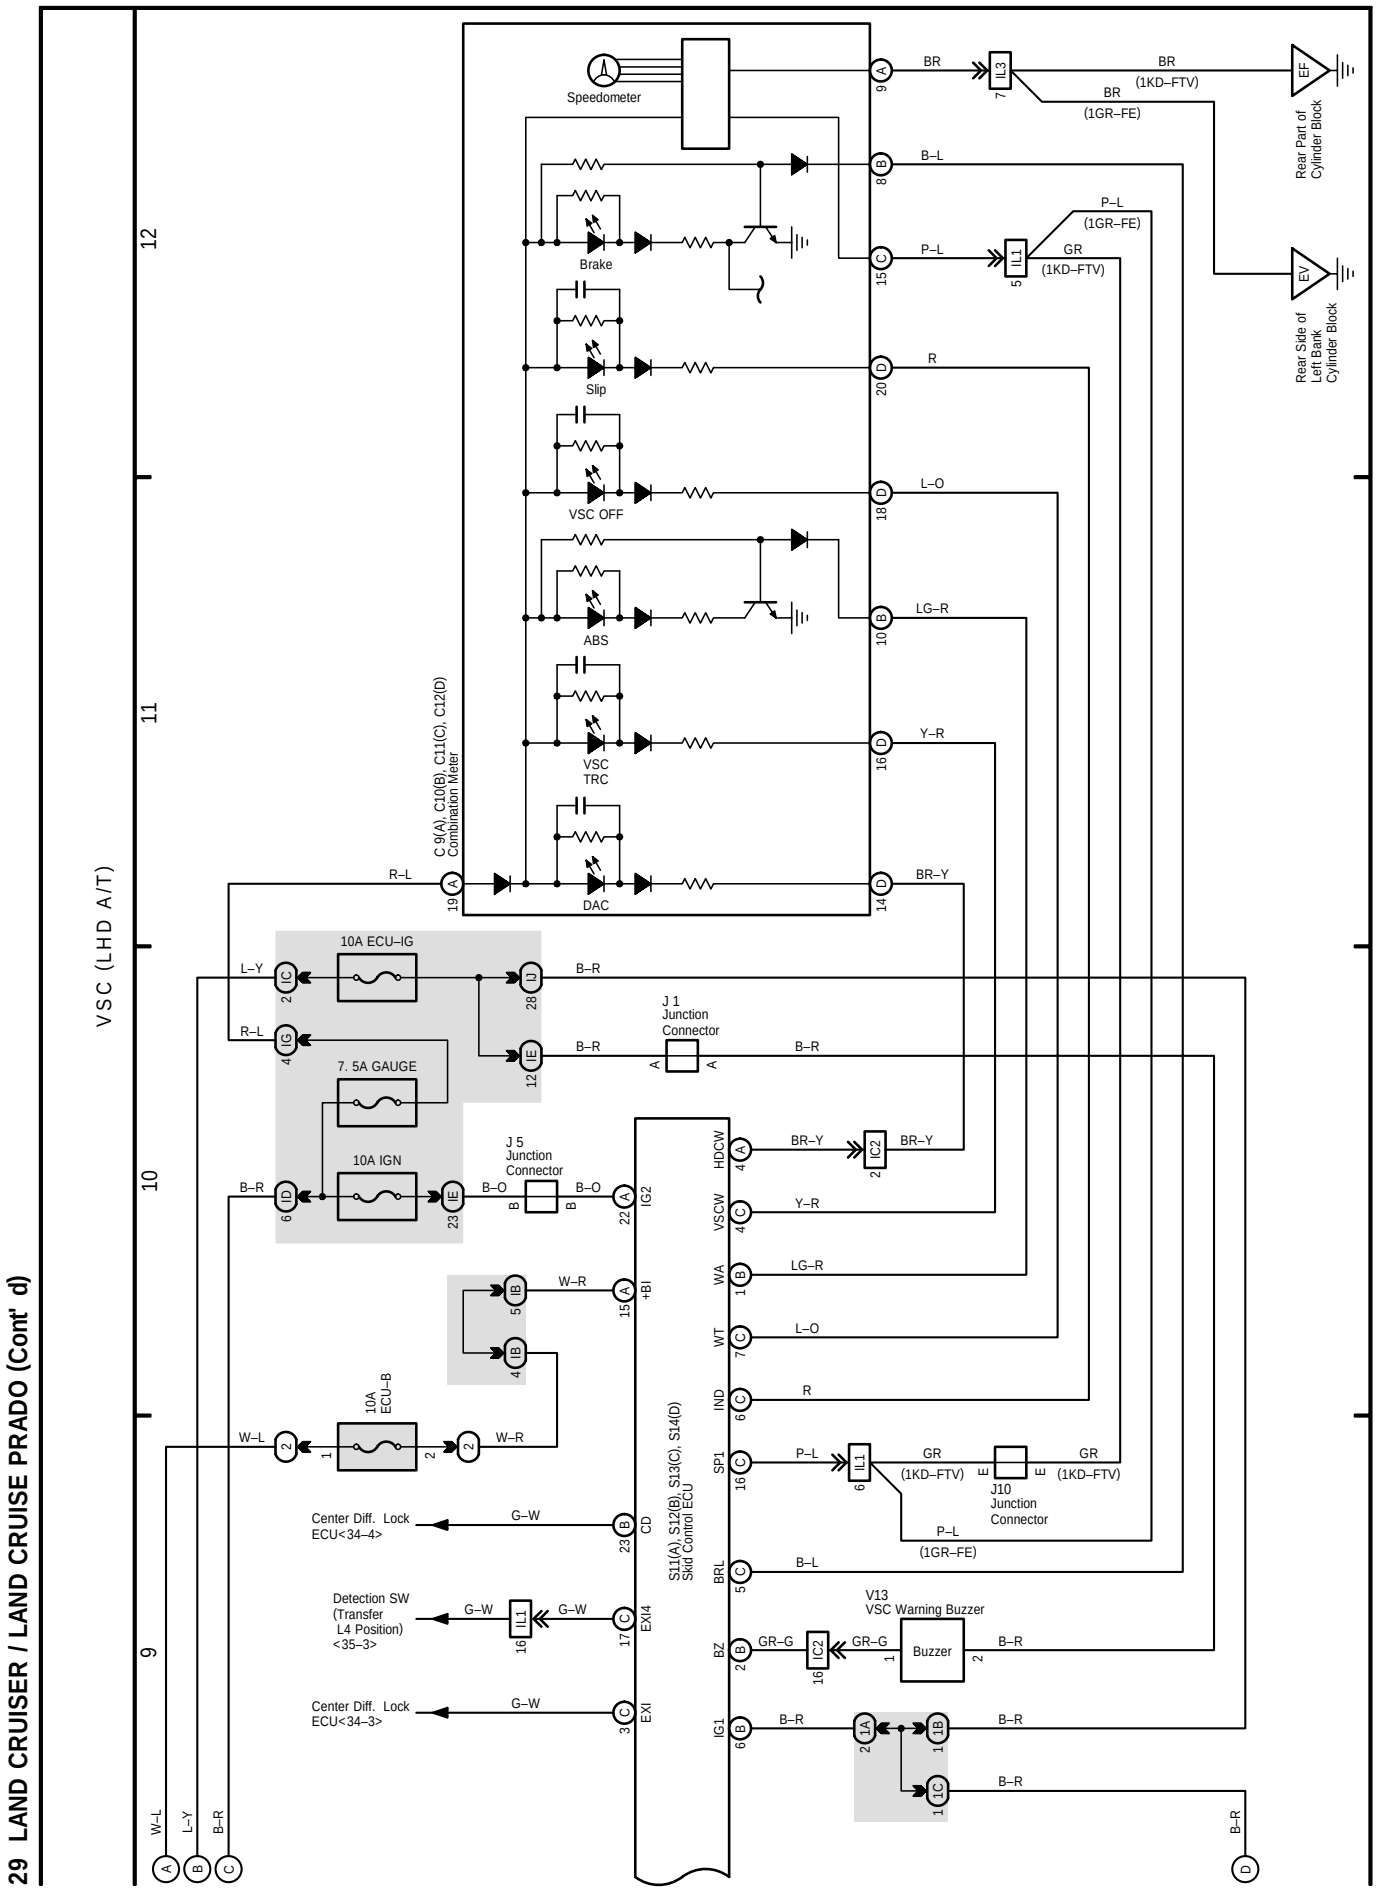

(Cont. next page)
29 LAND CRUISER / LAND CRUISER PRADO
Power Source
VSC (LHD A/T)
1
2
3
4
* 1 : Shielded
Engine and ECT ECU
<11–14><11–15><58–18>
S11(A), S12(B), S13(C), S14(D)
Skid Control ECU
A 7(A), A 8(B), A 9(C)
ABS & BA & TRC & VSC Actuator
J 2(A), J 3(B)
Junction Connector
Front Left Fender
Front Right Fender
Y 1
Yaw Rate Sensor
ABS SOL Relay
TRC MTR Relay
ABS MTR Relay
I14
Ignition SW
ACC
IG1
ST1
IG2
ST2
AM1
AM2
40A ABS MTR
50A ABS SOL
30A AM2
SHORT PIN
50A AM1
120A ALT
Battery

29 LAND CRUISE / LAND CRUISE PRADO (Cont' d)

(Cont. next page)




29 LAND CRUISER / LAND CRUISER PRADO (Cont' d)
VSC (LHD A/T)
12
11
10
9
Speedometer
Brake
Slip
VSC OFF
ABS
VSC TRC
DAC
C 9(A), C10(B), C11(C), C12(D) Combination Meter
10A ECU–IG
7. 5A GAUGE
10A IGN
10A ECU–B
J 1 Junction Connector
J 5 Junction Connector
J10 Junction Connector
IL1
IL3
IC2
Rear Part of Cylinder Block
Rear Side of Left Bank Cylinder Block
EF
EV
S11(A), S12(B), S13(C), S14(D) Skid Control ECU
Center Diff. Lock ECU<34–4>
Center Diff. Lock ECU<34–3>
Detection SW (Transfer L4 Position) <35–3>
V13 VSC Warning Buzzer
Buzzer
BR
B–L
P–L
R
L–O
LG–R
Y–R
BR–Y
R–L
L–Y
B–R
W–L
W–R
G–W
GR–G
GR
B–O
(1KD–FTV)
(1GR–FE)