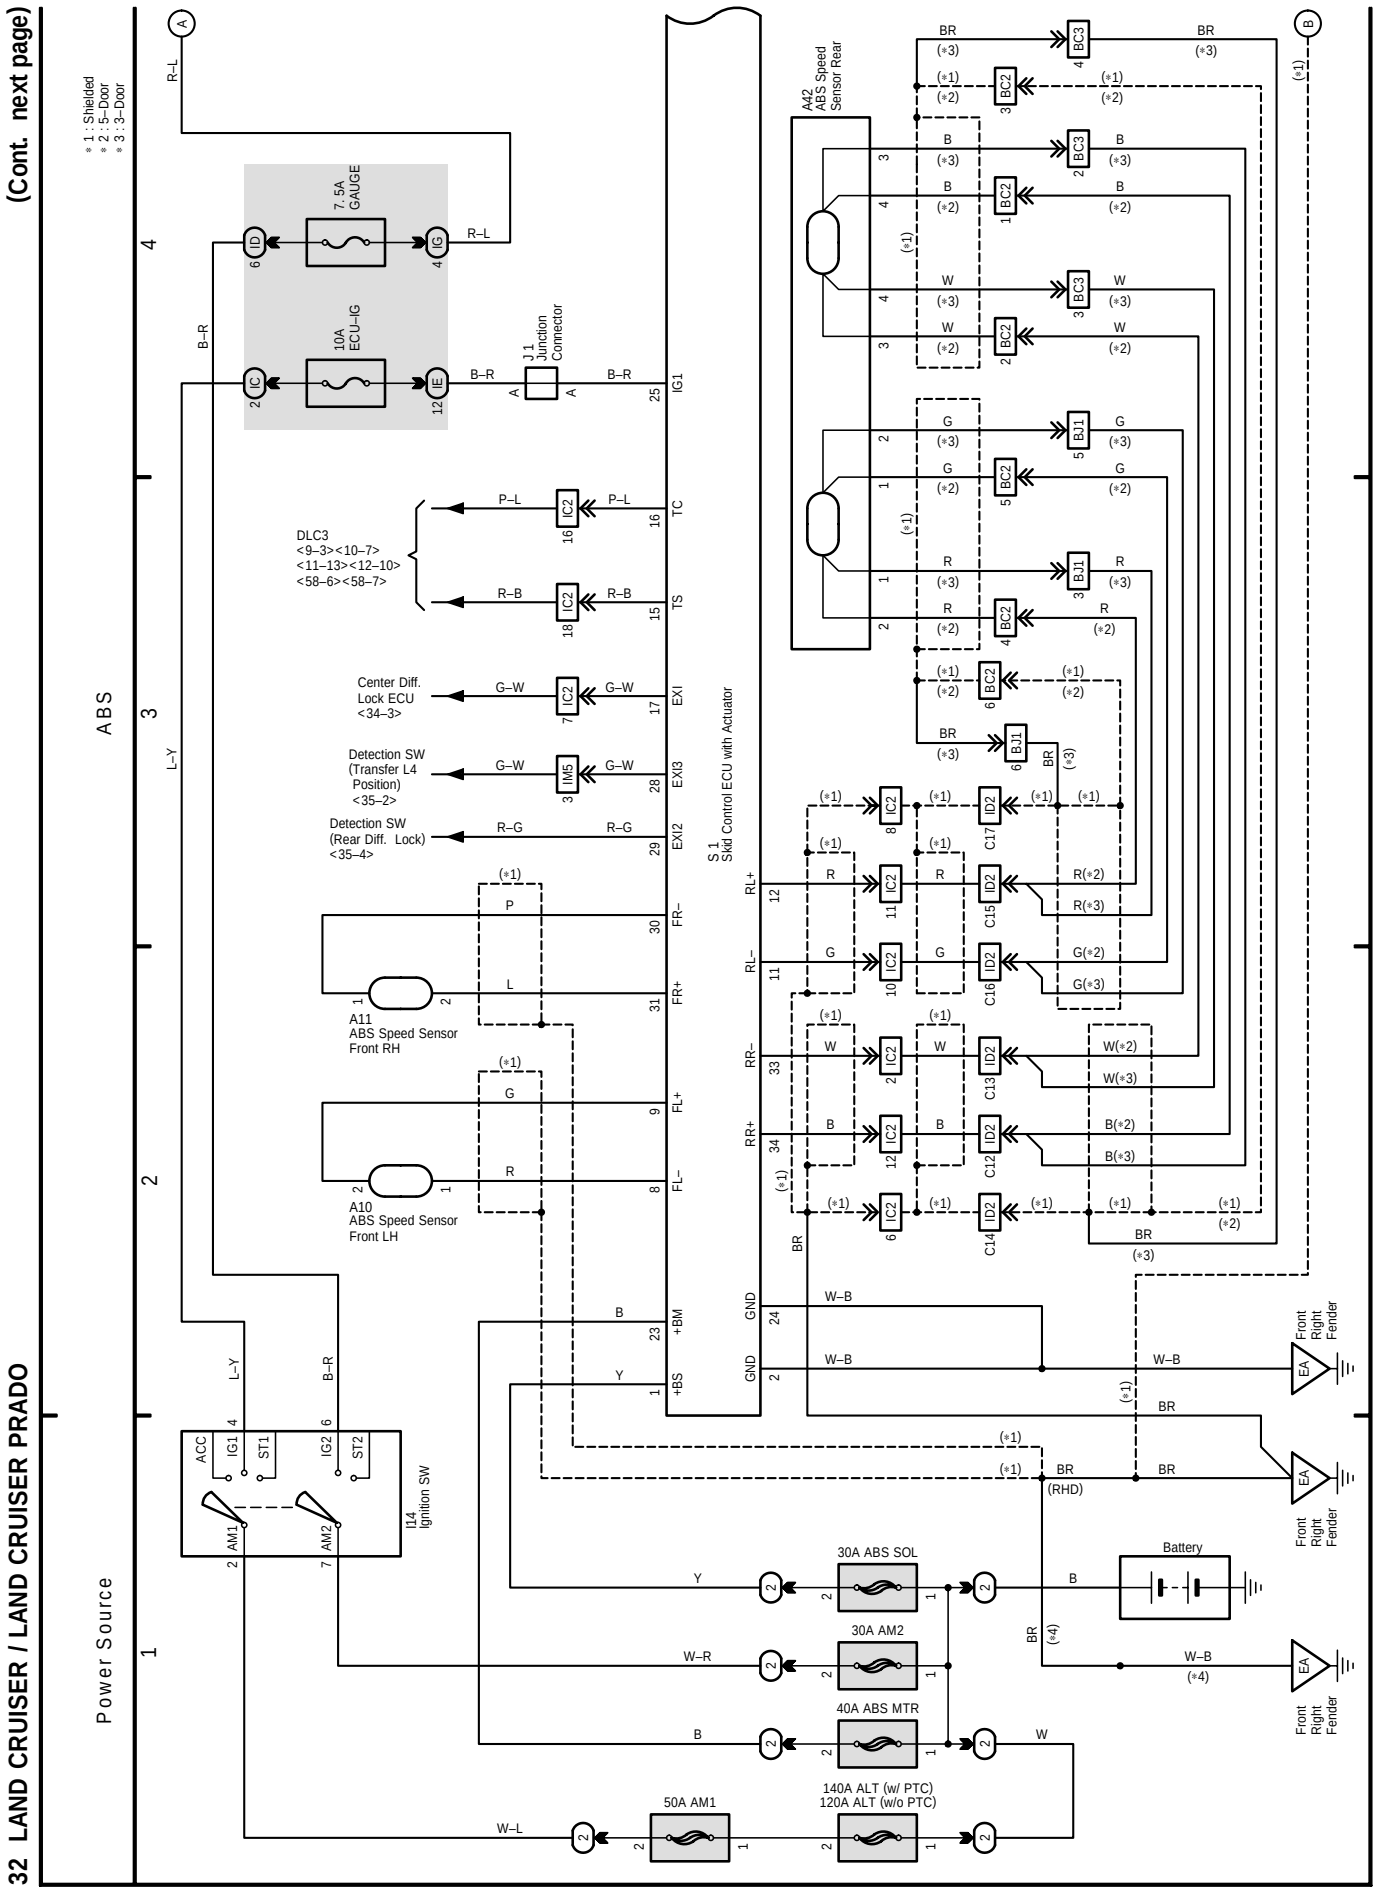

(Cont. next page)
*1 : Shielded
*2 : 5–Door
*3 : 3–Door
ABS
Power Source
32 LAND CRUISER / LAND CRUISER PRADO
7.5A GAUGE
10A ECU–IG
J1 Junction Connector
DLC3
<9–3><10–7>
<11–13><12–10>
<58–6><58–7>
Center Diff. Lock ECU <34–3>
Detection SW (Transfer L4 Position) <35–2>
Detection SW (Rear Diff. Lock) <35–4>
A11 ABS Speed Sensor Front RH
A10 ABS Speed Sensor Front LH
A42 ABS Speed Sensor Rear
S1 Skid Control ECU with Actuator
I14 Ignition SW
30A ABS SOL
30A AM2
40A ABS MTR
50A AM1
140A ALT (w/ PTC)
120A ALT (w/o PTC)
Battery
Front Right Fender

32 LAND CRUISER / LAND CRUISER PRADO (Cont' d)

