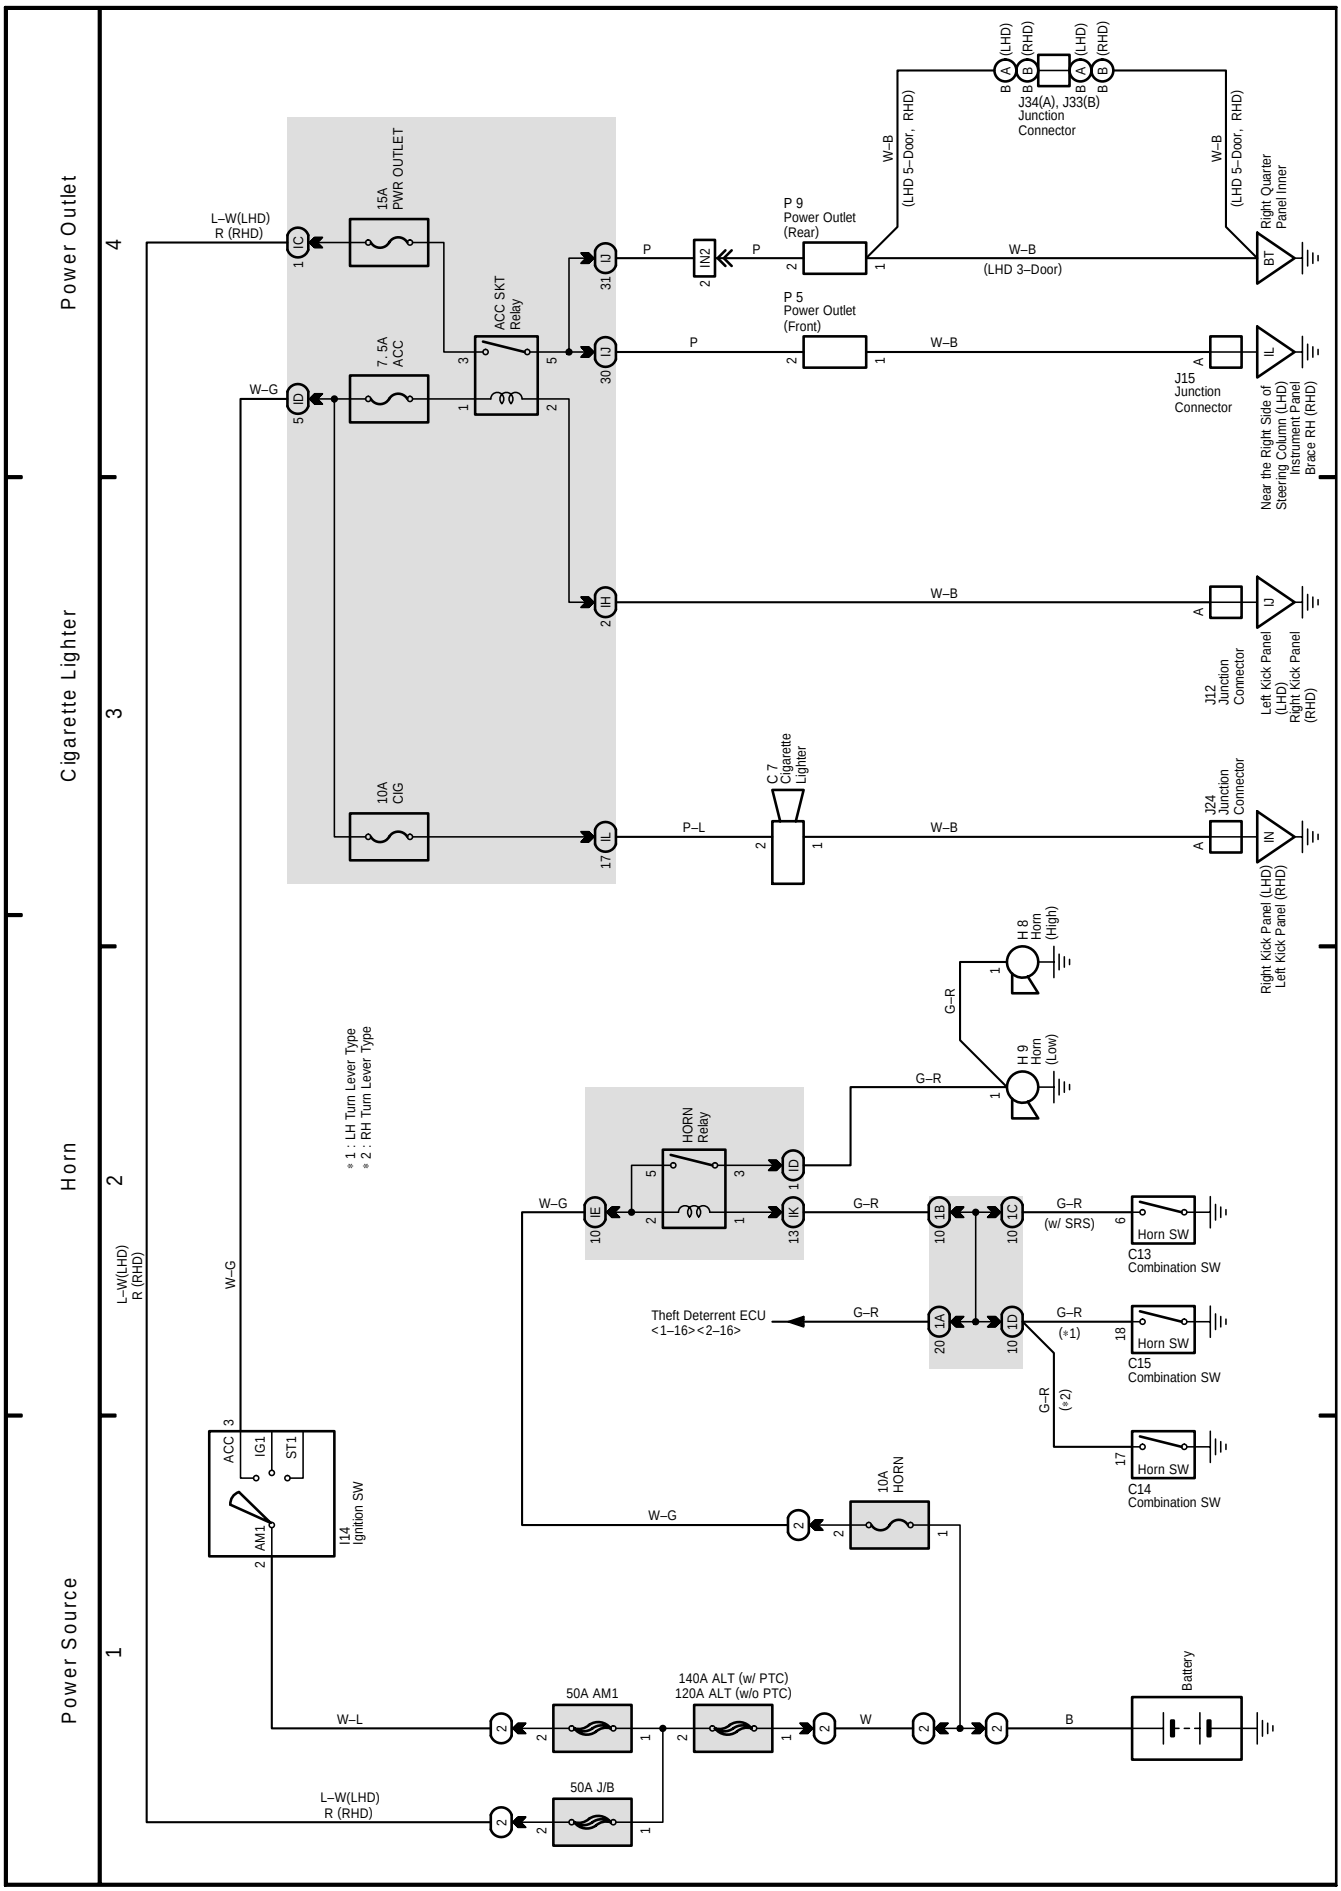

Power Outlet
Cigarette Lighter
Horn
Power Source
15A PWR OUTLET
7.5A ACC
ACC SKT Relay
10A CIG
P 9 Power Outlet (Rear)
P 5 Power Outlet (Front)
J34(A), J33(B) Junction Connector
J15 Junction Connector
J12 Junction Connector
J24 Junction Connector
C7 Cigarette Lighter
Right Quarter Panel Inner
Near the Right Side of Steering Column (LHD) Instrument Panel Brace RH (RHD)
Left Kick Panel (LHD) Right Kick Panel (RHD)
Right Kick Panel (LHD) Left Kick Panel (RHD)
H8 Horn (High)
H9 Horn (Low)
HORN Relay
10A HORN
I14 Ignition SW
ACC
IG1
ST1
AM1
Theft Deterrent ECU <1–16><2–16>
C13 Combination SW
C15 Combination SW
C14 Combination SW
Horn SW
(w/ SRS)
(*1)
(*2)
* 1 : LH Turn Lever Type
* 2 : RH Turn Lever Type
50A AM1
50A J/B
140A ALT (w/ PTC)
120A ALT (w/o PTC)
Battery
L–W(LHD) R (RHD)
W–G
W–B
W–L
G–R
P
P–L
W
B
(LHD 5–Door, RHD)
(LHD 3–Door)