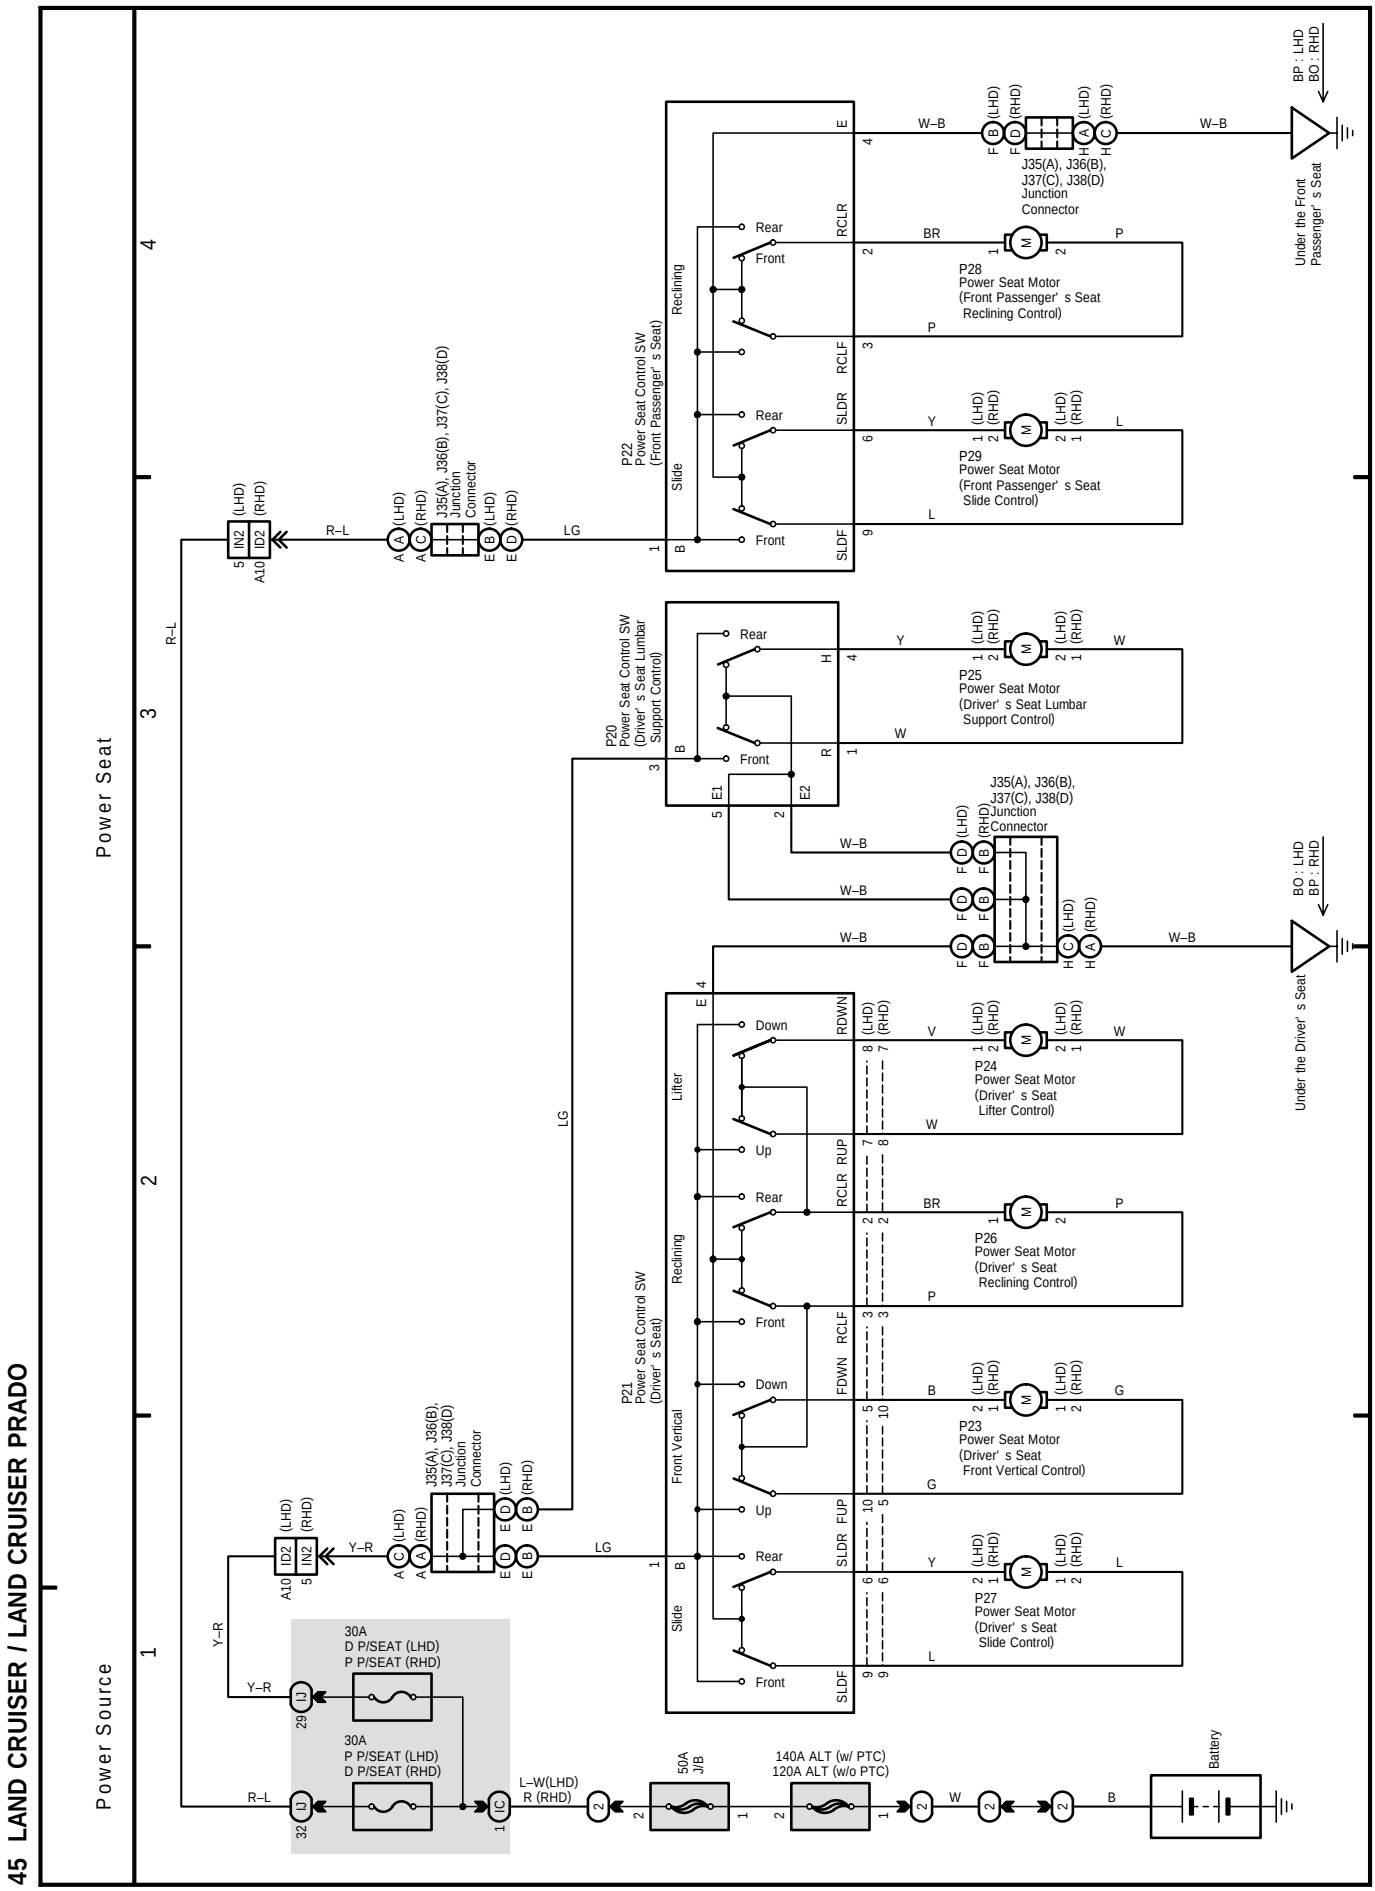

45 LAND CRUISER / LAND CRUISER PRADO
Power Source
Power Seat
1
2
3
4
30A
D P/SEAT (LHD)
P P/SEAT (RHD)
30A
P P/SEAT (LHD)
D P/SEAT (RHD)
50A
J/B
140A ALT (w/ PTC)
120A ALT (w/o PTC)
Battery
P20
Power Seat Control SW
(Driver' s Seat Lumbar
Support Control)
P21
Power Seat Control SW
(Driver' s Seat)
P22
Power Seat Control SW
(Front Passenger' s Seat)
P23
Power Seat Motor
(Driver' s Seat
Front Vertical Control)
P24
Power Seat Motor
(Driver' s Seat
Lifter Control)
P25
Power Seat Motor
(Driver' s Seat Lumbar
Support Control)
P26
Power Seat Motor
(Driver' s Seat
Reclining Control)
P27
Power Seat Motor
(Driver' s Seat
Slide Control)
P28
Power Seat Motor
(Front Passenger' s Seat
Reclining Control)
P29
Power Seat Motor
(Front Passenger' s Seat
Slide Control)
J35(A), J36(B),
J37(C), J38(D)
Junction
Connector
Under the Driver' s Seat
Under the Front
Passenger' s Seat
BP : LHD
BO : RHD
BO : LHD
BP : RHD
Rear
Front
Up
Down
Reclining
Slide
Lifter
Front Vertical
R–L
Y–R
LG
W–B
L–W(LHD)
R (RHD)