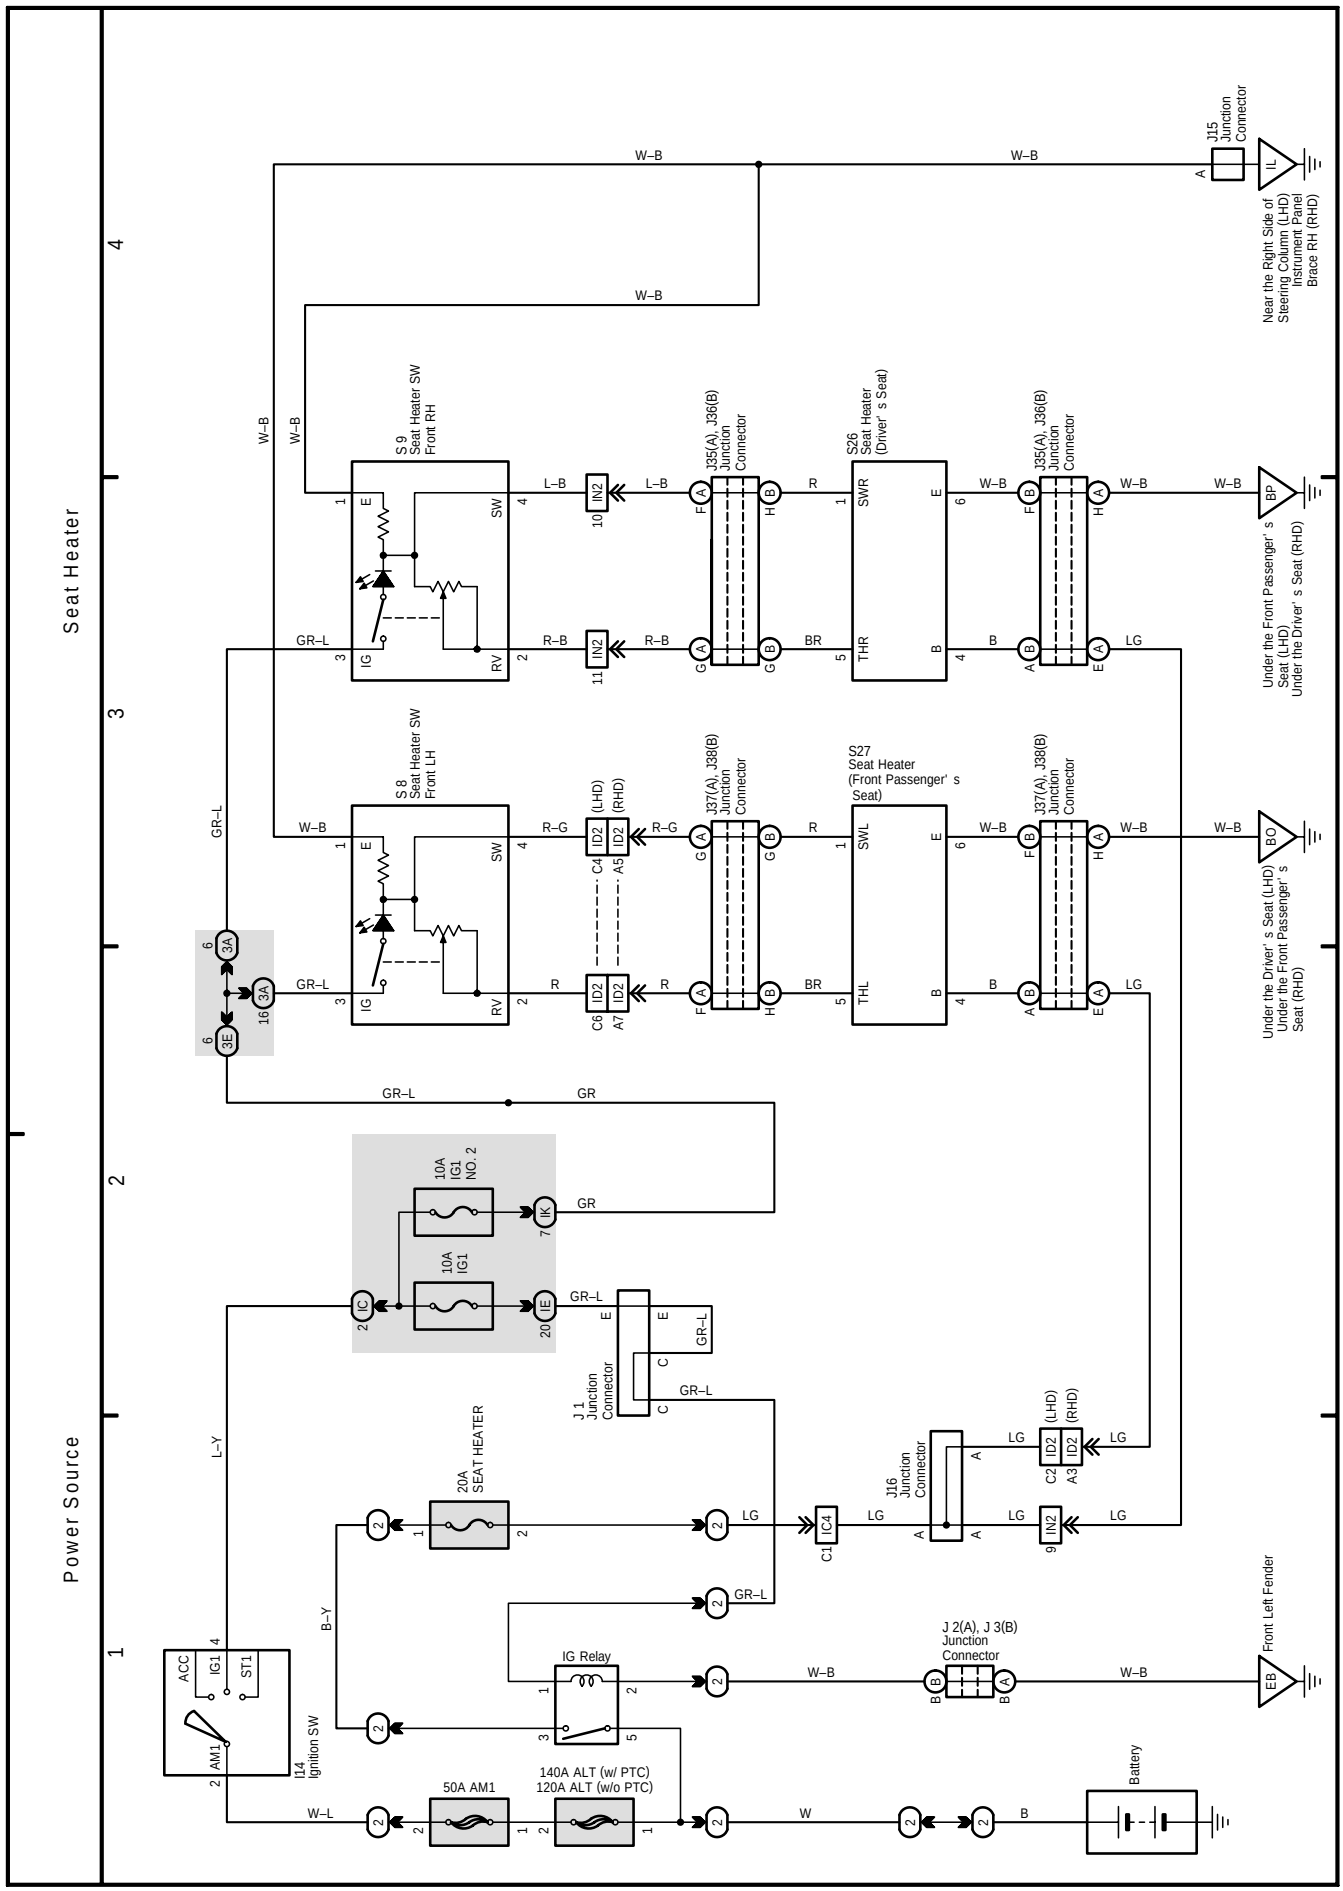

46 LAND CRUISER / LAND CRUISER PRADO
Power Source
Seat Heater
1
2
3
4
J15 Junction Connector
Near the Right Side of Steering Column (LHD) Instrument Panel Brace RH (RHD)
S 9 Seat Heater SW Front RH
S 8 Seat Heater SW Front LH
S26 Seat Heater (Driver' s Seat)
S27 Seat Heater (Front Passenger' s Seat)
J35(A), J36(B) Junction Connector
J37(A), J38(B) Junction Connector
Under the Front Passenger' s Seat (LHD) Under the Driver' s Seat (RHD)
Under the Driver' s Seat (LHD) Under the Front Passenger' s Seat (RHD)
10A IG1 NO. 2
10A IG1
20A SEAT HEATER
50A AM1
140A ALT (w/ PTC) 120A ALT (w/o PTC)
IG Relay
I14 Ignition SW
ACC
IG1
ST1
AM1
J 1 Junction Connector
J16 Junction Connector
J 2(A), J 3(B) Junction Connector
Front Left Fender
Battery
W–B
GR–L
GR
L–Y
B–Y
W–L
L–B
R–B
R–G
LG
W
B
R
BR