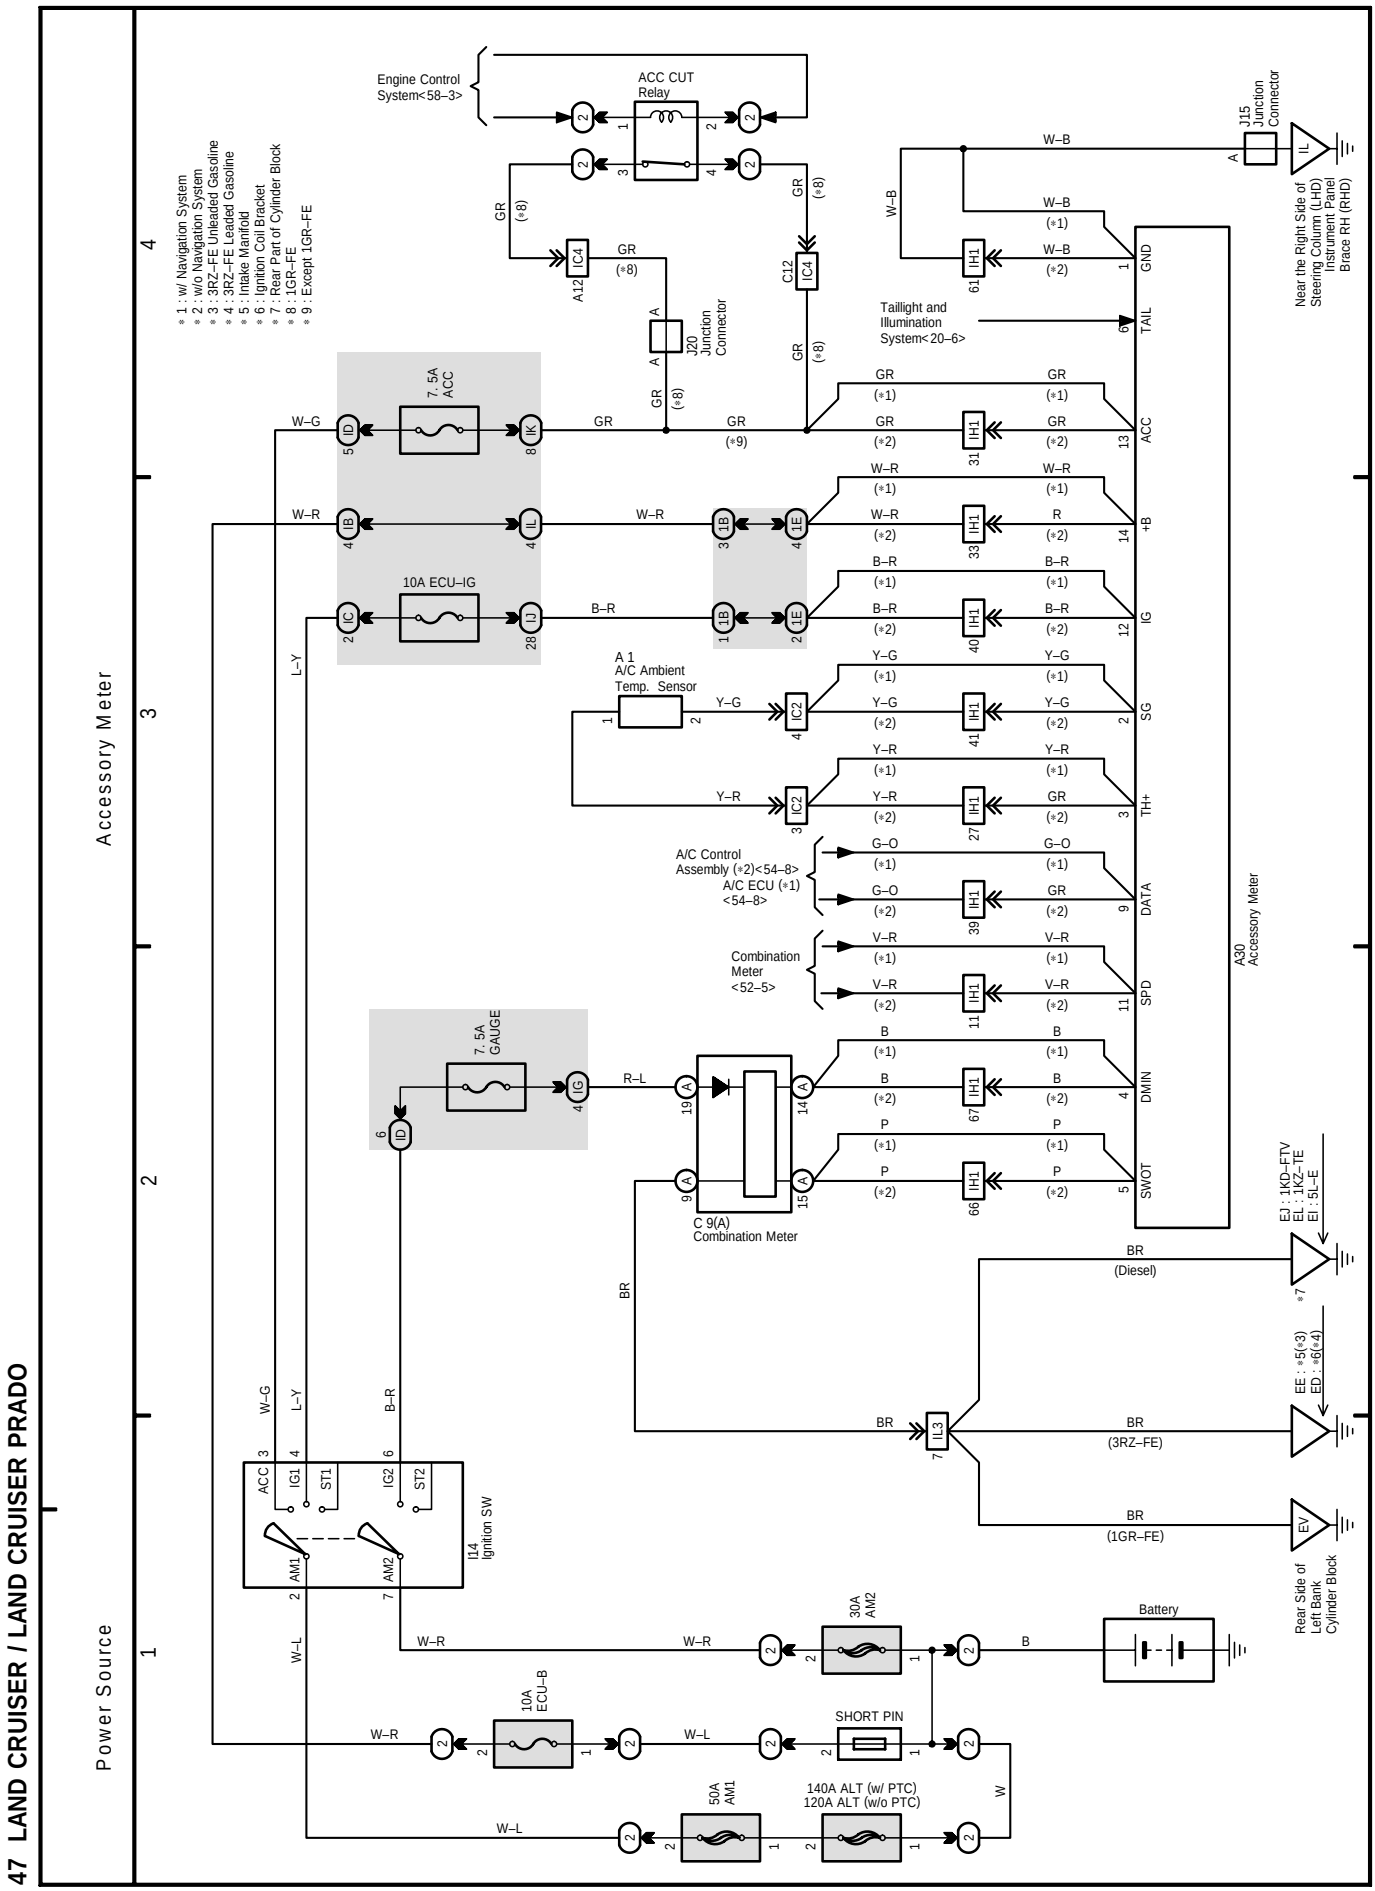

47 LAND CRUISER / LAND CRUISER PRADO
Power Source
Accessory Meter
Engine Control System<58–3>
ACC CUT Relay
J15 Junction Connector
Near the Right Side of Steering Column (LHD) Instrument Panel Brace RH (RHD)
Taillight and Illumination System< 20–6>
A30 Accessory Meter
GND
TAIL
ACC
+B
IG
SG
TH+
DATA
SPD
DMIN
SWOT
A 1 A/C Ambient Temp. Sensor
A/C Control Assembly (*2)<54–8>
A/C ECU (*1) <54–8>
Combination Meter <52–5>
C 9(A) Combination Meter
7. 5A ACC
10A ECU–IG
7. 5A GAUGE
I14 Ignition SW
ACC
IG1
ST1
IG2
ST2
AM1
AM2
30A AM2
Battery
10A ECU–B
SHORT PIN
50A AM1
140A ALT (w/ PTC)
120A ALT (w/o PTC)
J20 Junction Connector
EJ : 1KD–FTV
EL : 1KZ–TE
EI : 5L–E
EE : *5(*3)
ED : *6(*4)
BR (Diesel)
BR (3RZ–FE)
BR (1GR–FE)
EV
Rear Side of Left Bank Cylinder Block
* 1 : w/ Navigation System
* 2 : w/o Navigation System
* 3 : 3RZ–FE Unleaded Gasoline
* 4 : 3RZ–FE Leaded Gasoline
* 5 : Intake Manifold
* 6 : Ignition Coil Bracket
* 7 : Rear Part of Cylinder Block
* 8 : 1GR–FE
* 9 : Except 1GR–FE