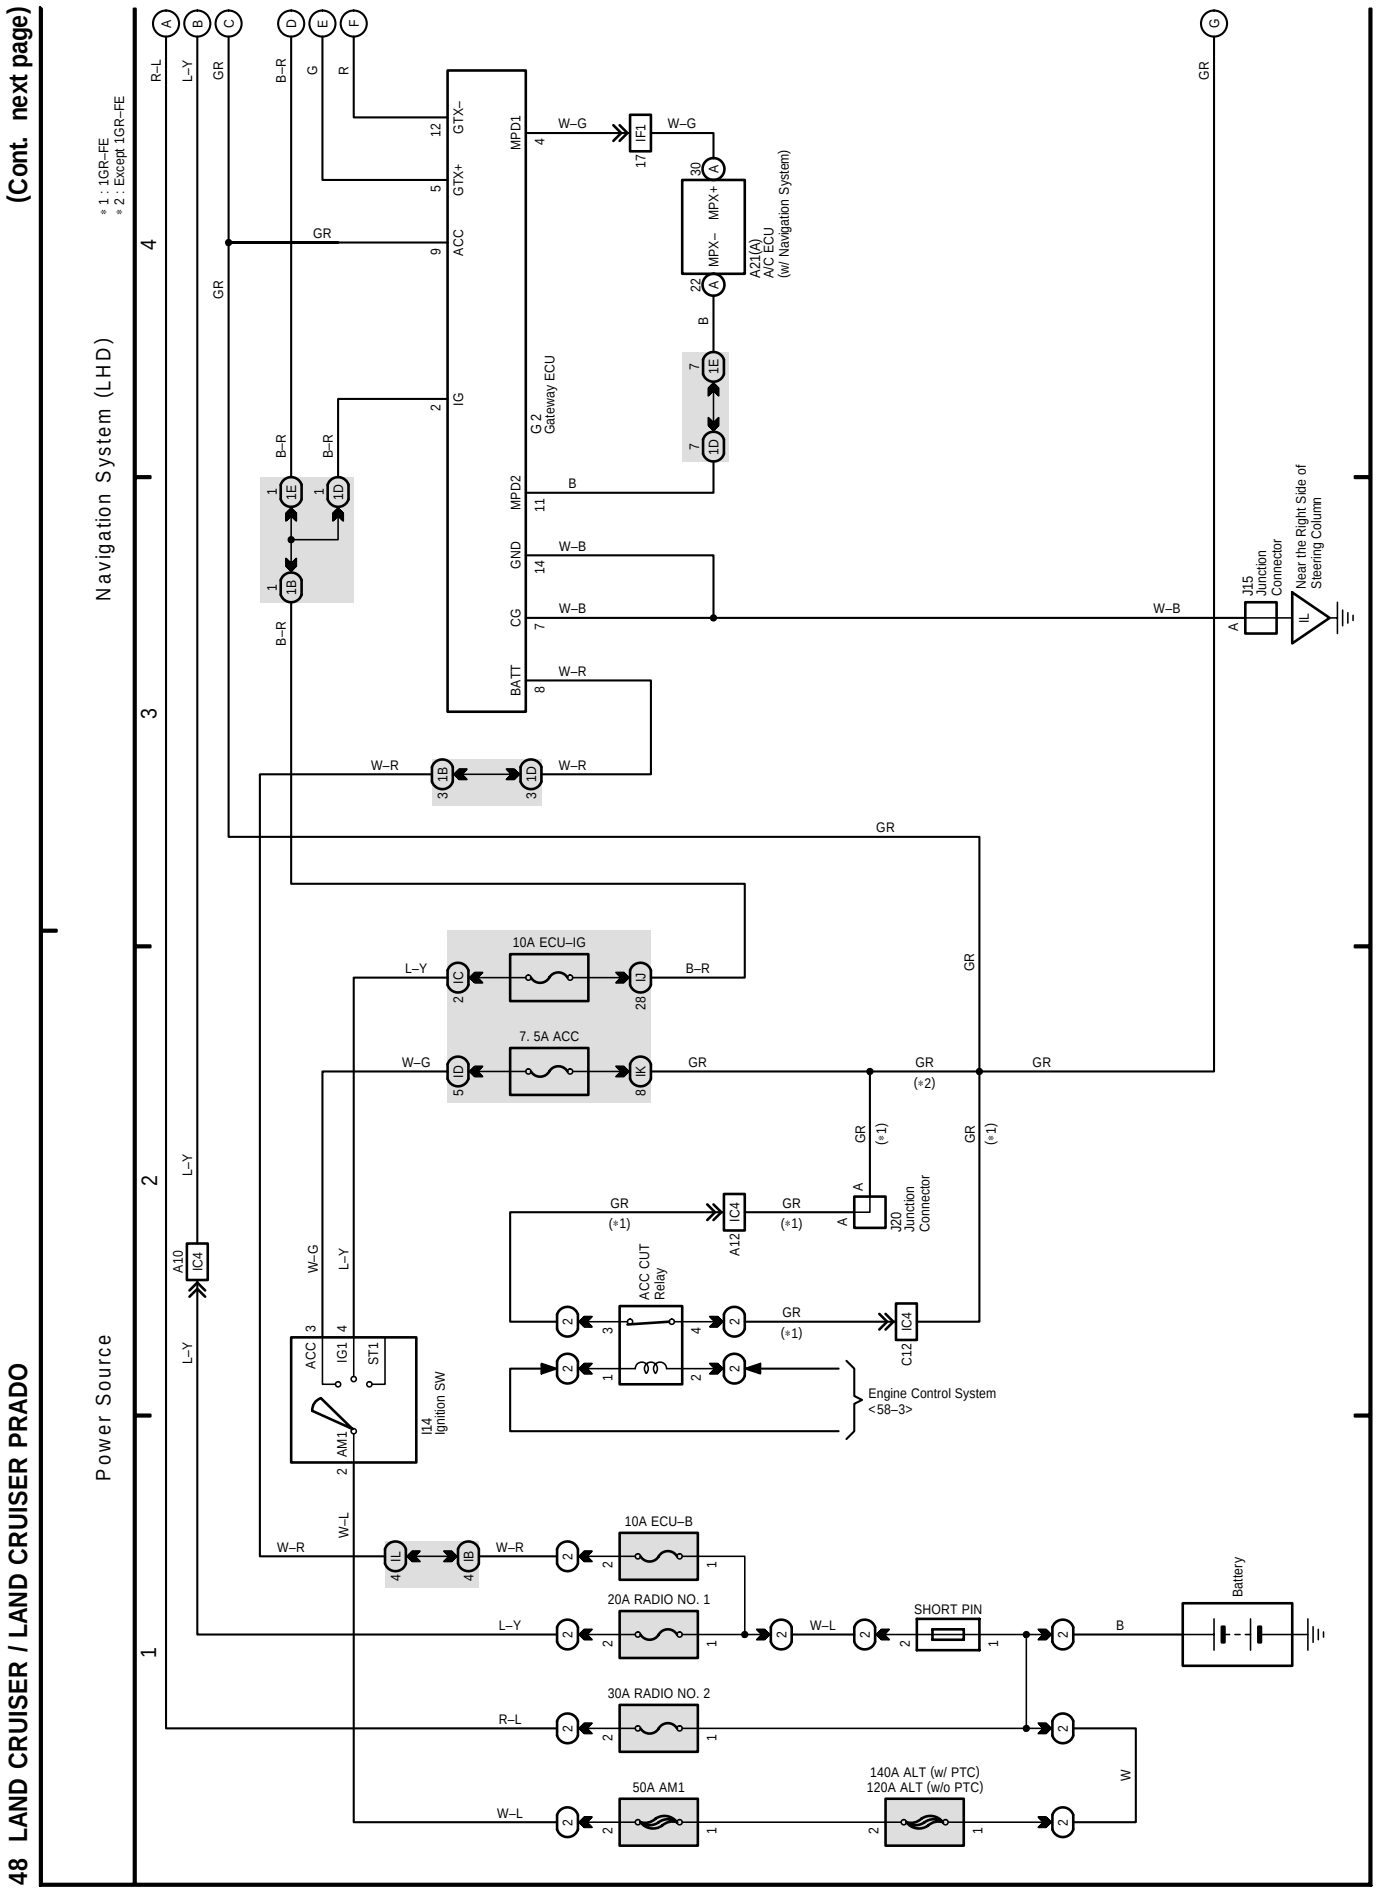

(Cont. next page)
48 LAND CRUISER / LAND CRUISER PRADO
Power Source
Navigation System (LHD)
* 1 : 1GR–FE
* 2 : Except 1GR–FE
G2 Gateway ECU
A21(A) A/C ECU (w/ Navigation System)
J15 Junction Connector
Near the Right Side of Steering Column
J20 Junction Connector
I14 Ignition SW
ACC CUT Relay
Engine Control System <58–3>
10A ECU–IG
7. 5A ACC
10A ECU–B
20A RADIO NO. 1
30A RADIO NO. 2
50A AM1
140A ALT (w/ PTC)
120A ALT (w/o PTC)
SHORT PIN
Battery

48 LAND CRUISER / LAND CRUISER PRADO (Cont' d)

