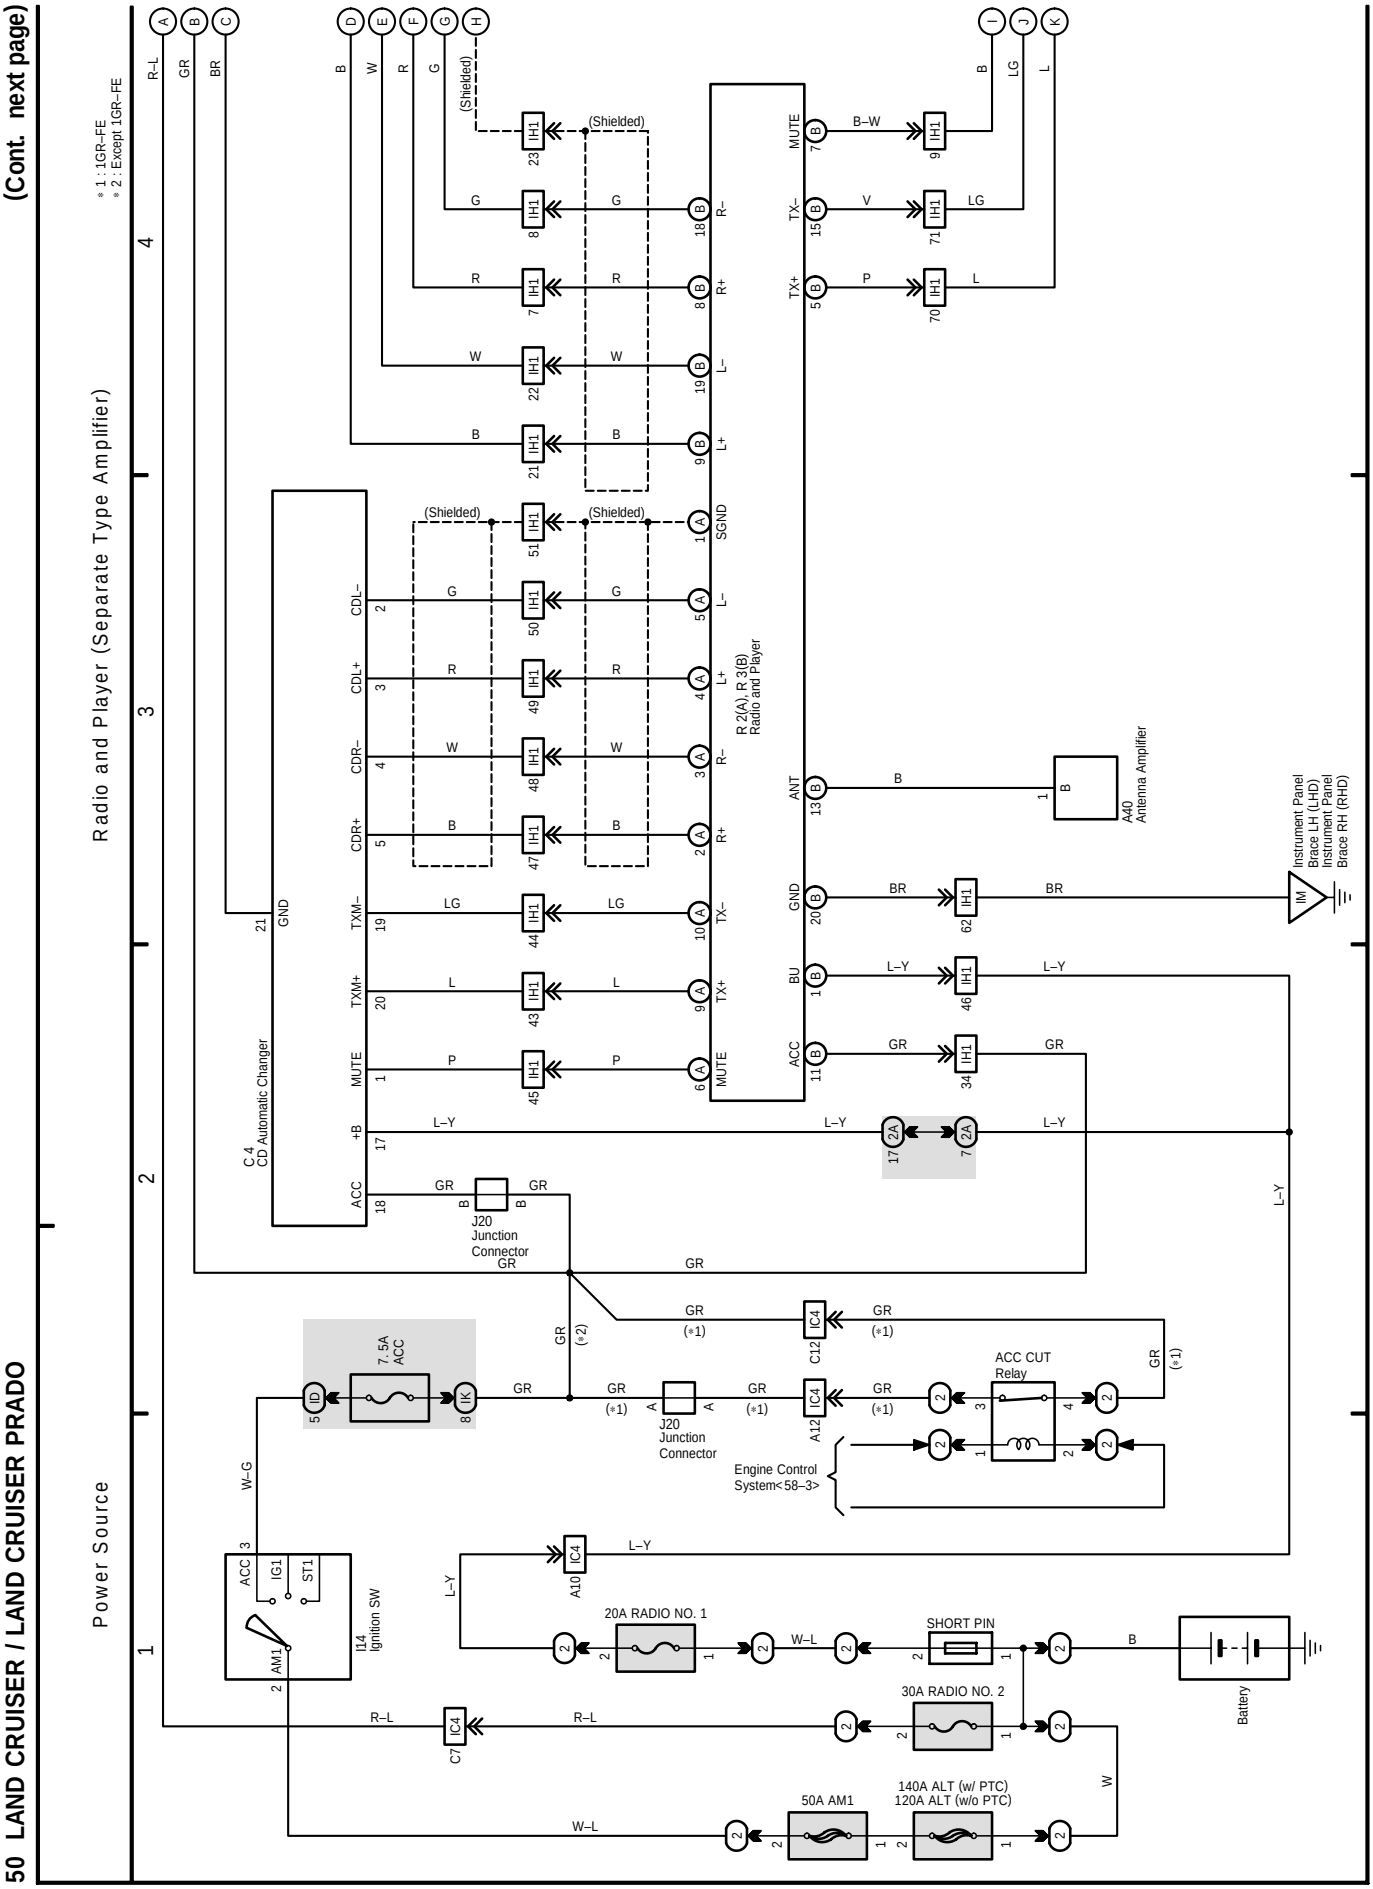
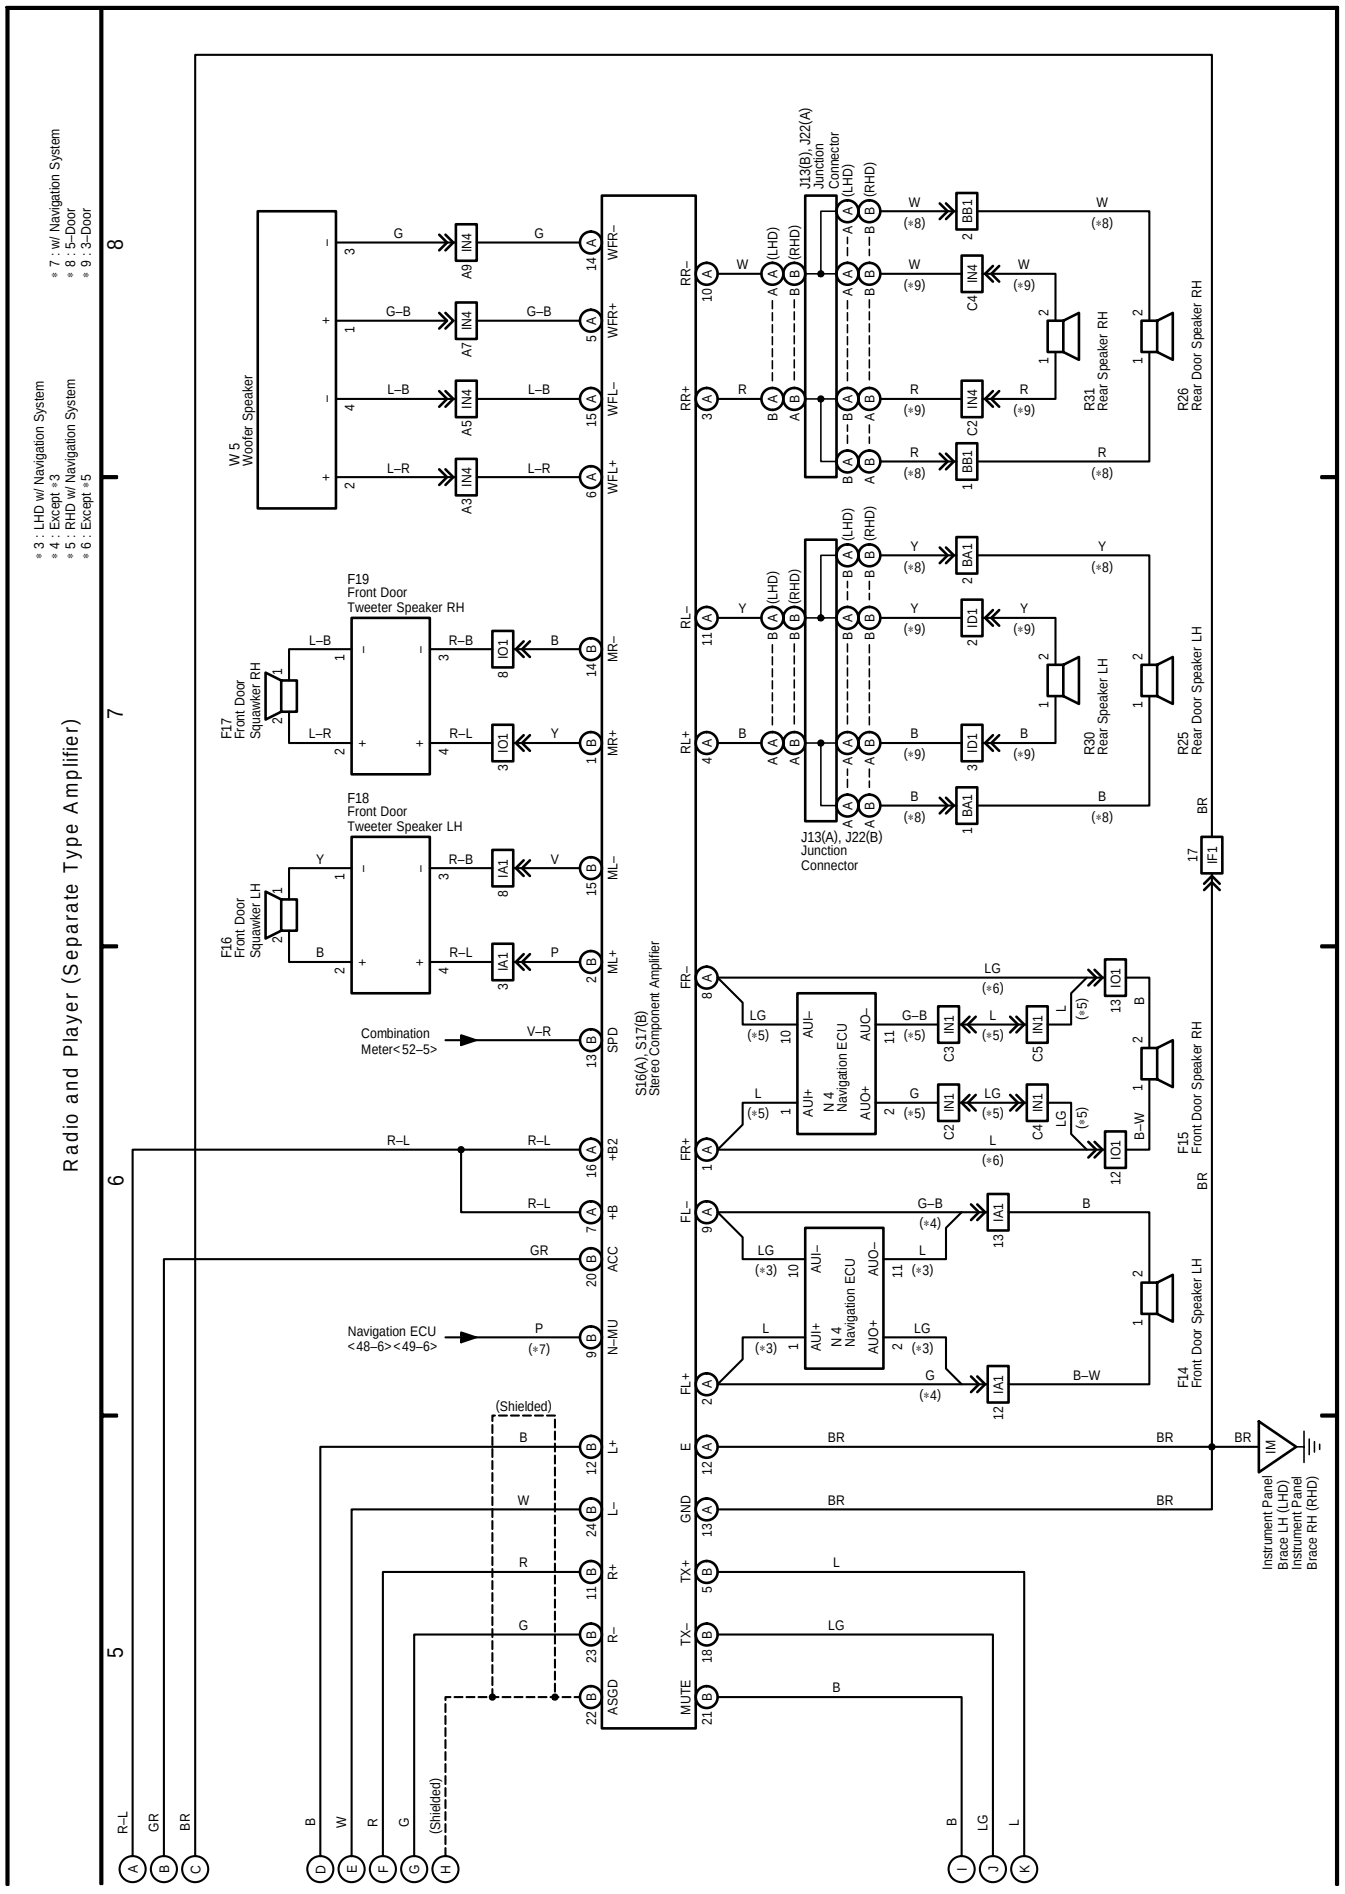

(Cont. next page)
50 LAND CRUISER / LAND CRUISER PRADO
Power Source
Radio and Player (Separate Type Amplifier)
* 1 : 1GR–FE
* 2 : Except 1GR–FE
C4 CD Automatic Changer
J20 Junction Connector
R 2(A), R 3(B) Radio and Player
A40 Antenna Amplifier
Instrument Panel Brace LH (LHD) Instrument Panel Brace RH (RHD)
7.5A ACC
ACC CUT Relay
Engine Control System< 58–3>
I14 Ignition SW
20A RADIO NO. 1
SHORT PIN
30A RADIO NO. 2
50A AM1
140A ALT (w/ PTC) 120A ALT (w/o PTC)
Battery


50 LAND CRUISER / LAND CRUISER PRADO (Cont' d)
Radio and Player (Separate Type Amplifier)
* 3 : LHD w/ Navigation System
* 4 : Except *3
* 5 : RHD w/ Navigation System
* 6 : Except *5
* 7 : w/ Navigation System
* 8 : 5–Door
* 9 : 3–Door
W 5
Woofer Speaker
F19
Front Door
Tweeter Speaker RH
F17
Front Door
Squawker RH
F18
Front Door
Tweeter Speaker LH
F16
Front Door
Squawker LH
Combination
Meter<52–5>
Navigation ECU
<48–6><49–6>
S16(A), S17(B)
Stereo Component Amplifier
J13(B), J22(A)
Junction
Connector
J13(A), J22(B)
Junction
Connector
R31
Rear Speaker RH
R26
Rear Door Speaker RH
R30
Rear Speaker LH
R25
Rear Door Speaker LH
F15
Front Door Speaker RH
F14
Front Door Speaker LH
Navigation ECU
N 4
AUI–
AUI+
AUO–
AUO+
IF1
IM
Instrument Panel
Brace LH (LHD)
Instrument Panel
Brace RH (RHD)
WFR–
WFR+
WFL–
WFL+
MR–
MR+
ML–
ML+
SPD
+B2
+B
ACC
N–MU
L+
L–
R+
R–
ASGD
MUTE
TX+
TX–
FR–
FR+
FL–
FL+
RR–
RR+
RL–
RL+
E
GND
(Shielded)