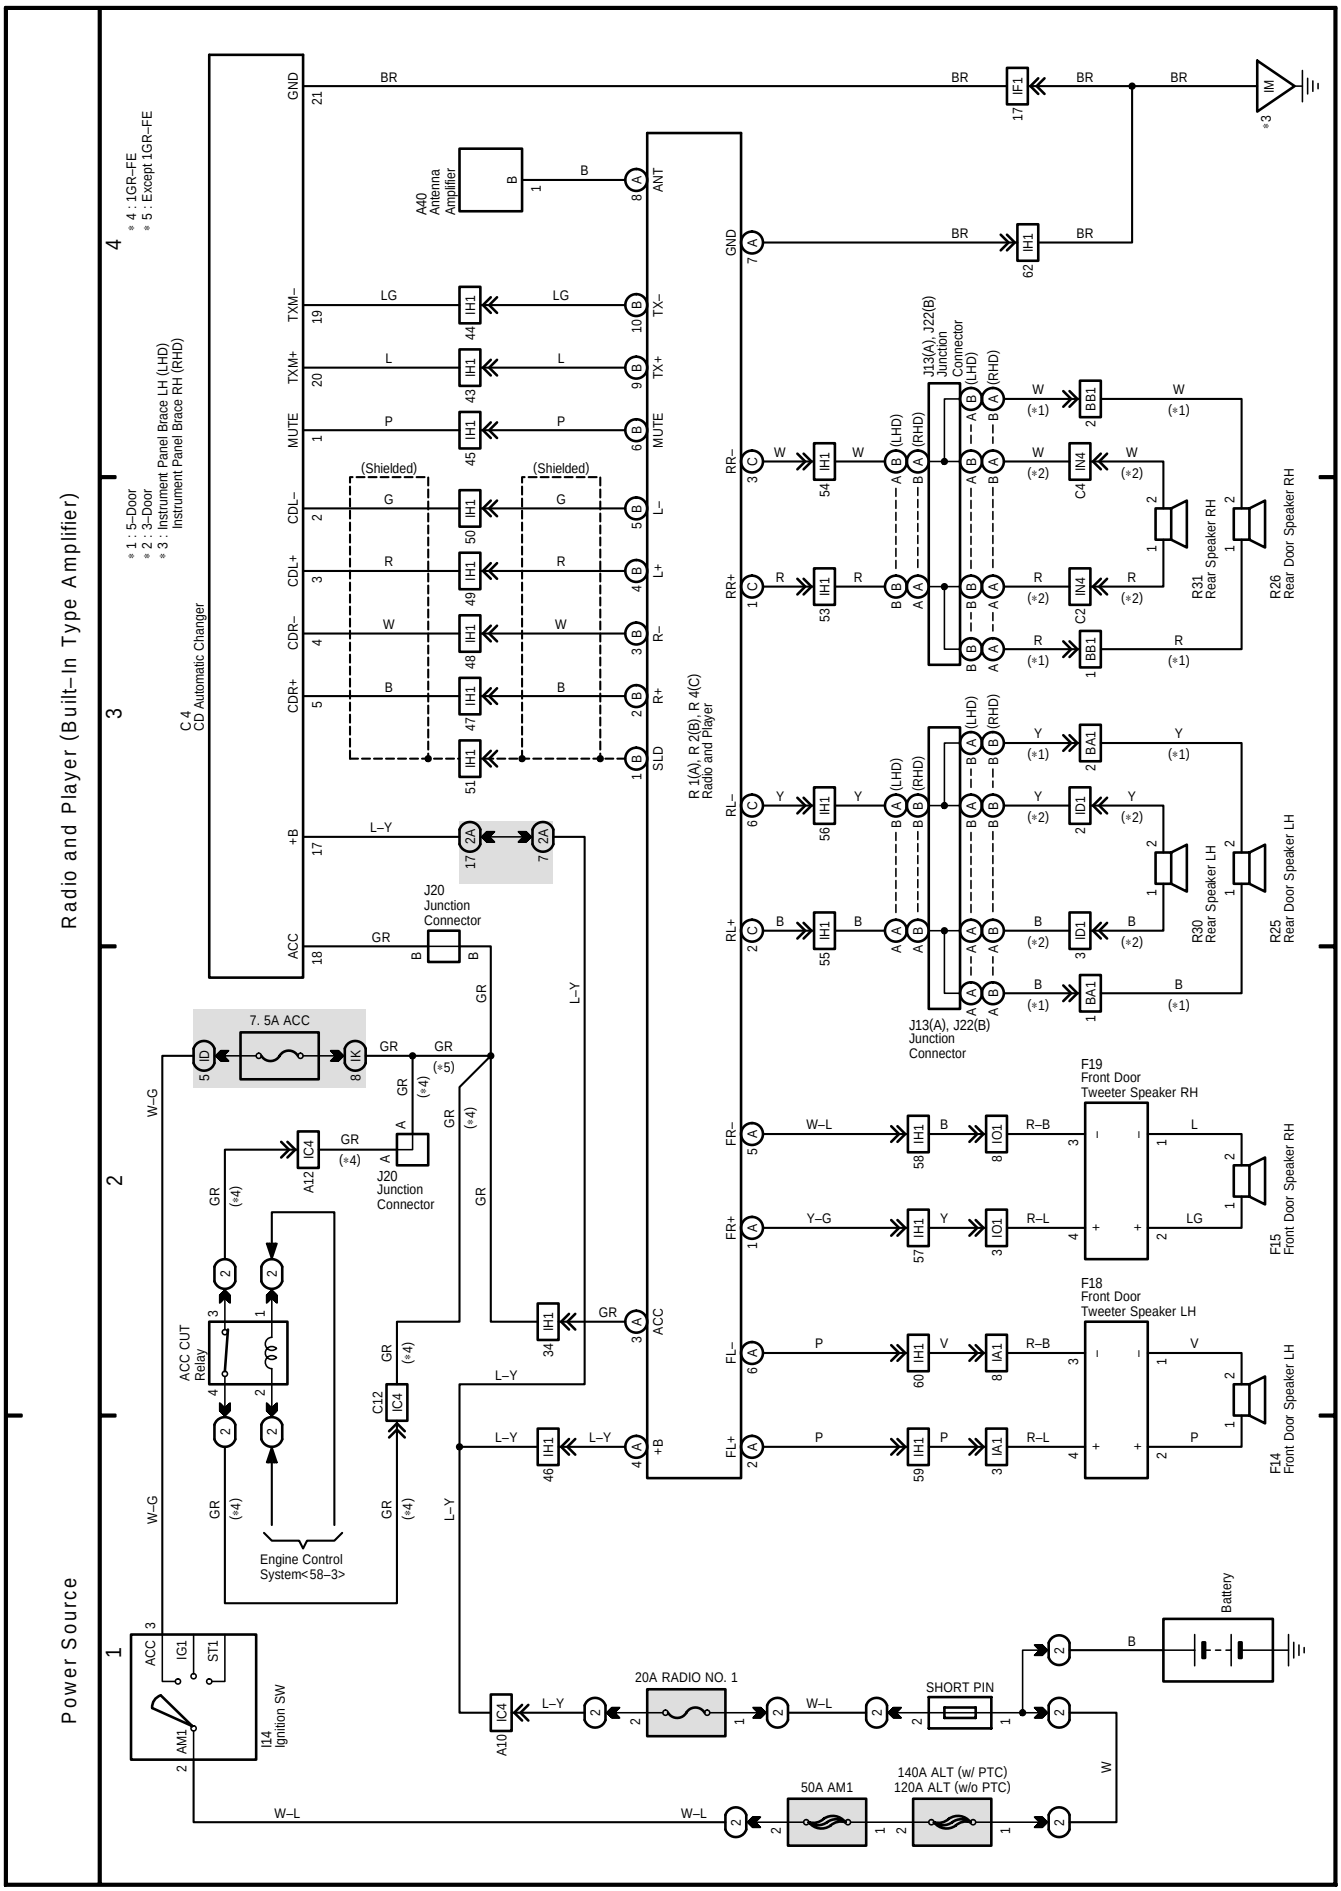

51 LAND CRUISER / LAND CRUISER PRADO
Power Source
Radio and Player (Built–In Type Amplifier)
1
2
3
4
*1 : 5–Door
*2 : 3–Door
*3 : Instrument Panel Brace LH (LHD)
Instrument Panel Brace RH (RHD)
*4 : 1GR–FE
*5 : Except 1GR–FE
C4
CD Automatic Changer
GND
CDL–
CDL+
CDR–
CDR+
MUTE
TXM–
TXM+
ACC
+B
(Shielded)
J20
Junction
Connector
7. 5A ACC
ACC CUT
Relay
Engine Control
System<58–3>
A40
Antenna
Amplifier
ANT
R 1(A), R 2(B), R 4(C)
Radio and Player
SLD
R–
R+
L–
L+
TX–
TX+
J13(A), J22(B)
Junction
Connector
(LHD)
(RHD)
R31
Rear Speaker RH
R26
Rear Door Speaker RH
R30
Rear Speaker LH
R25
Rear Door Speaker LH
F19
Front Door
Tweeter Speaker RH
F15
Front Door Speaker RH
F18
Front Door
Tweeter Speaker LH
F14
Front Door Speaker LH
I14
Ignition SW
ACC
IG1
ST1
AM1
20A RADIO NO. 1
SHORT PIN
50A AM1
140A ALT (w/ PTC)
120A ALT (w/o PTC)
Battery