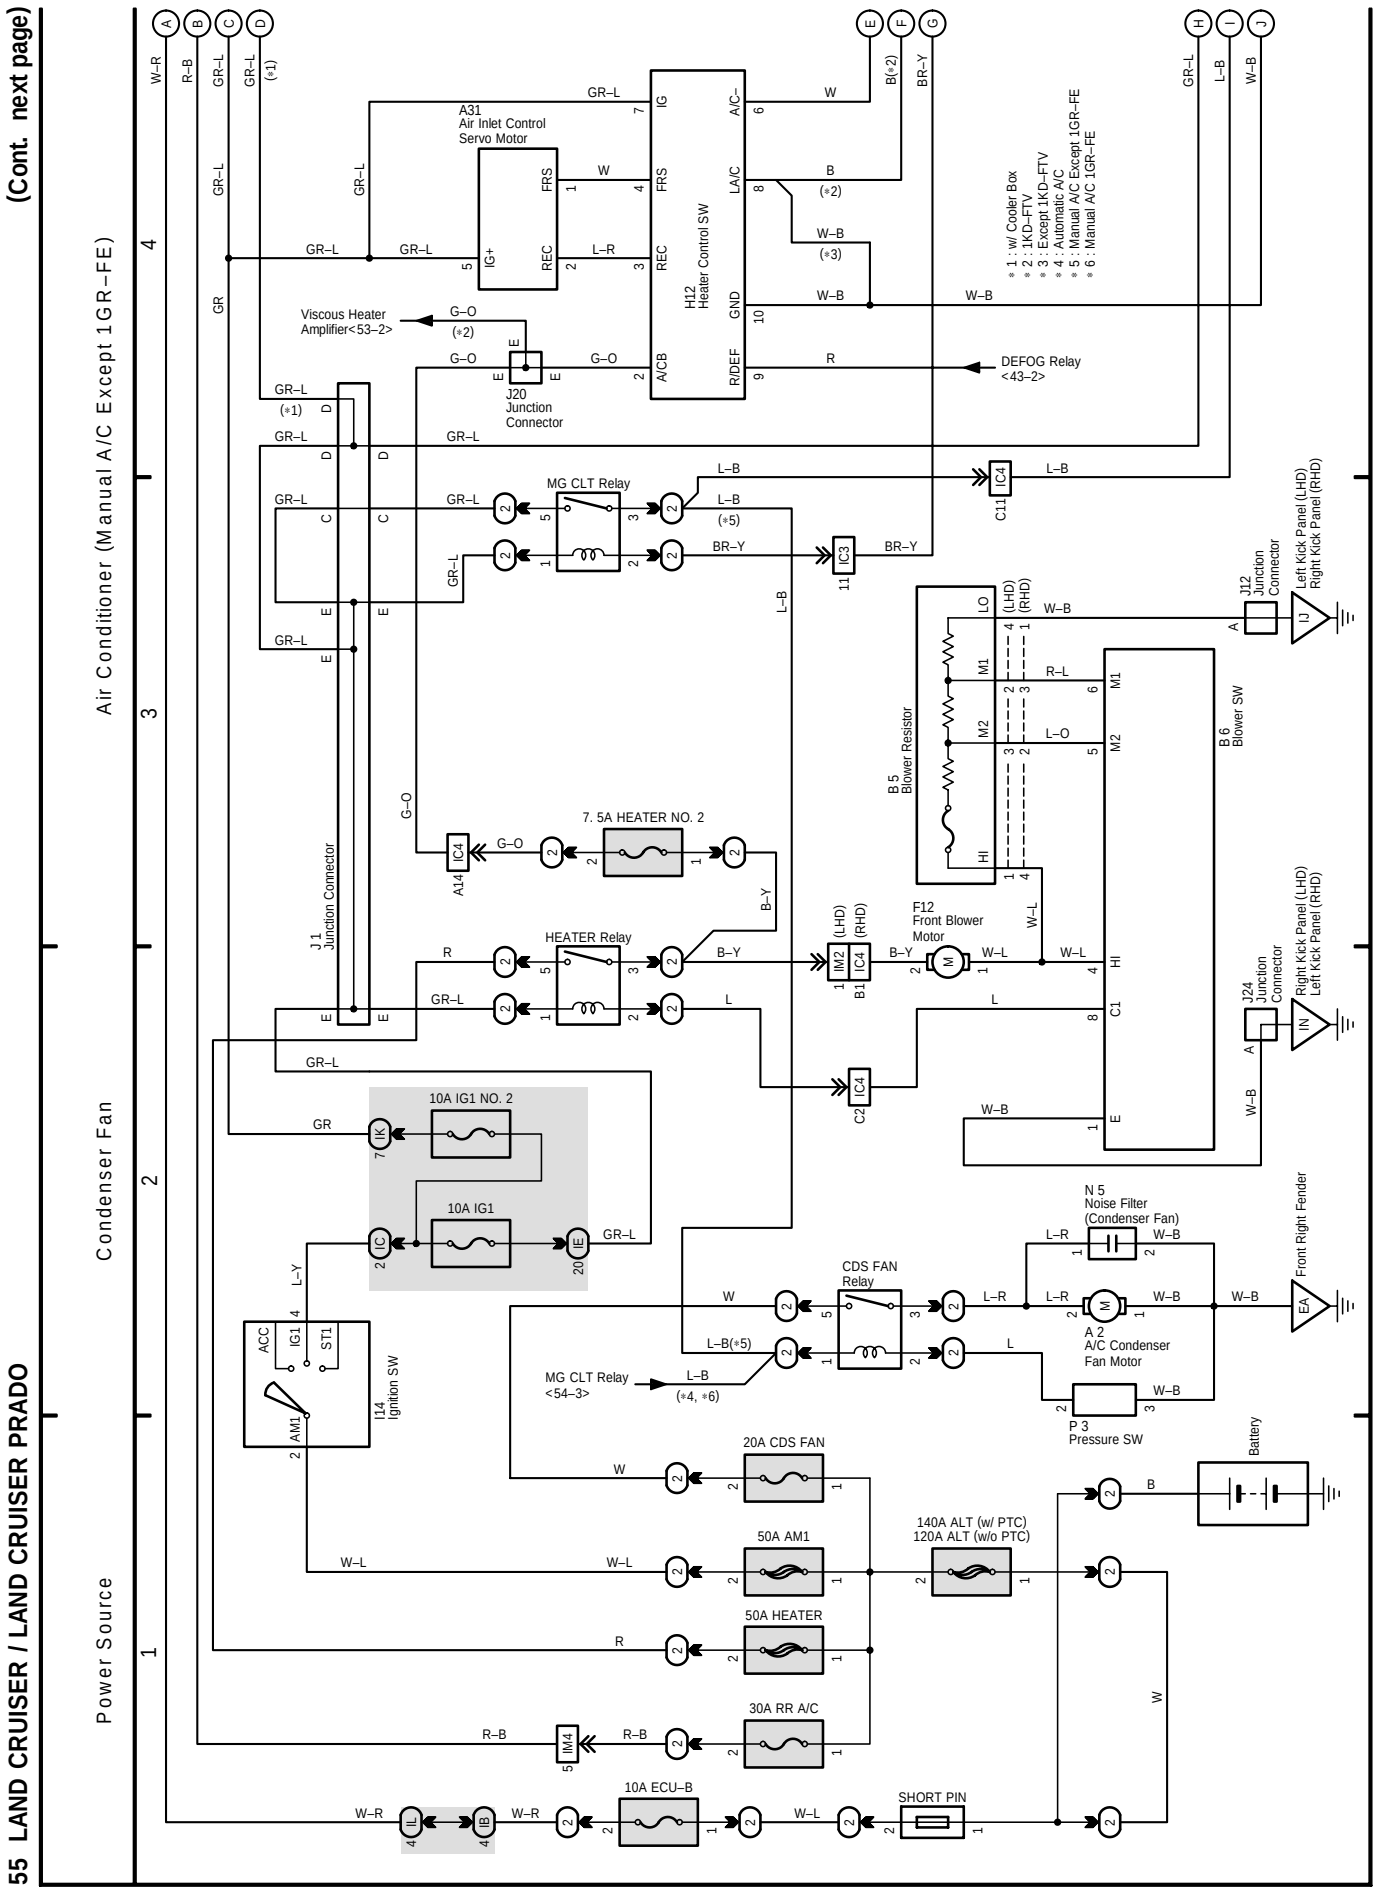
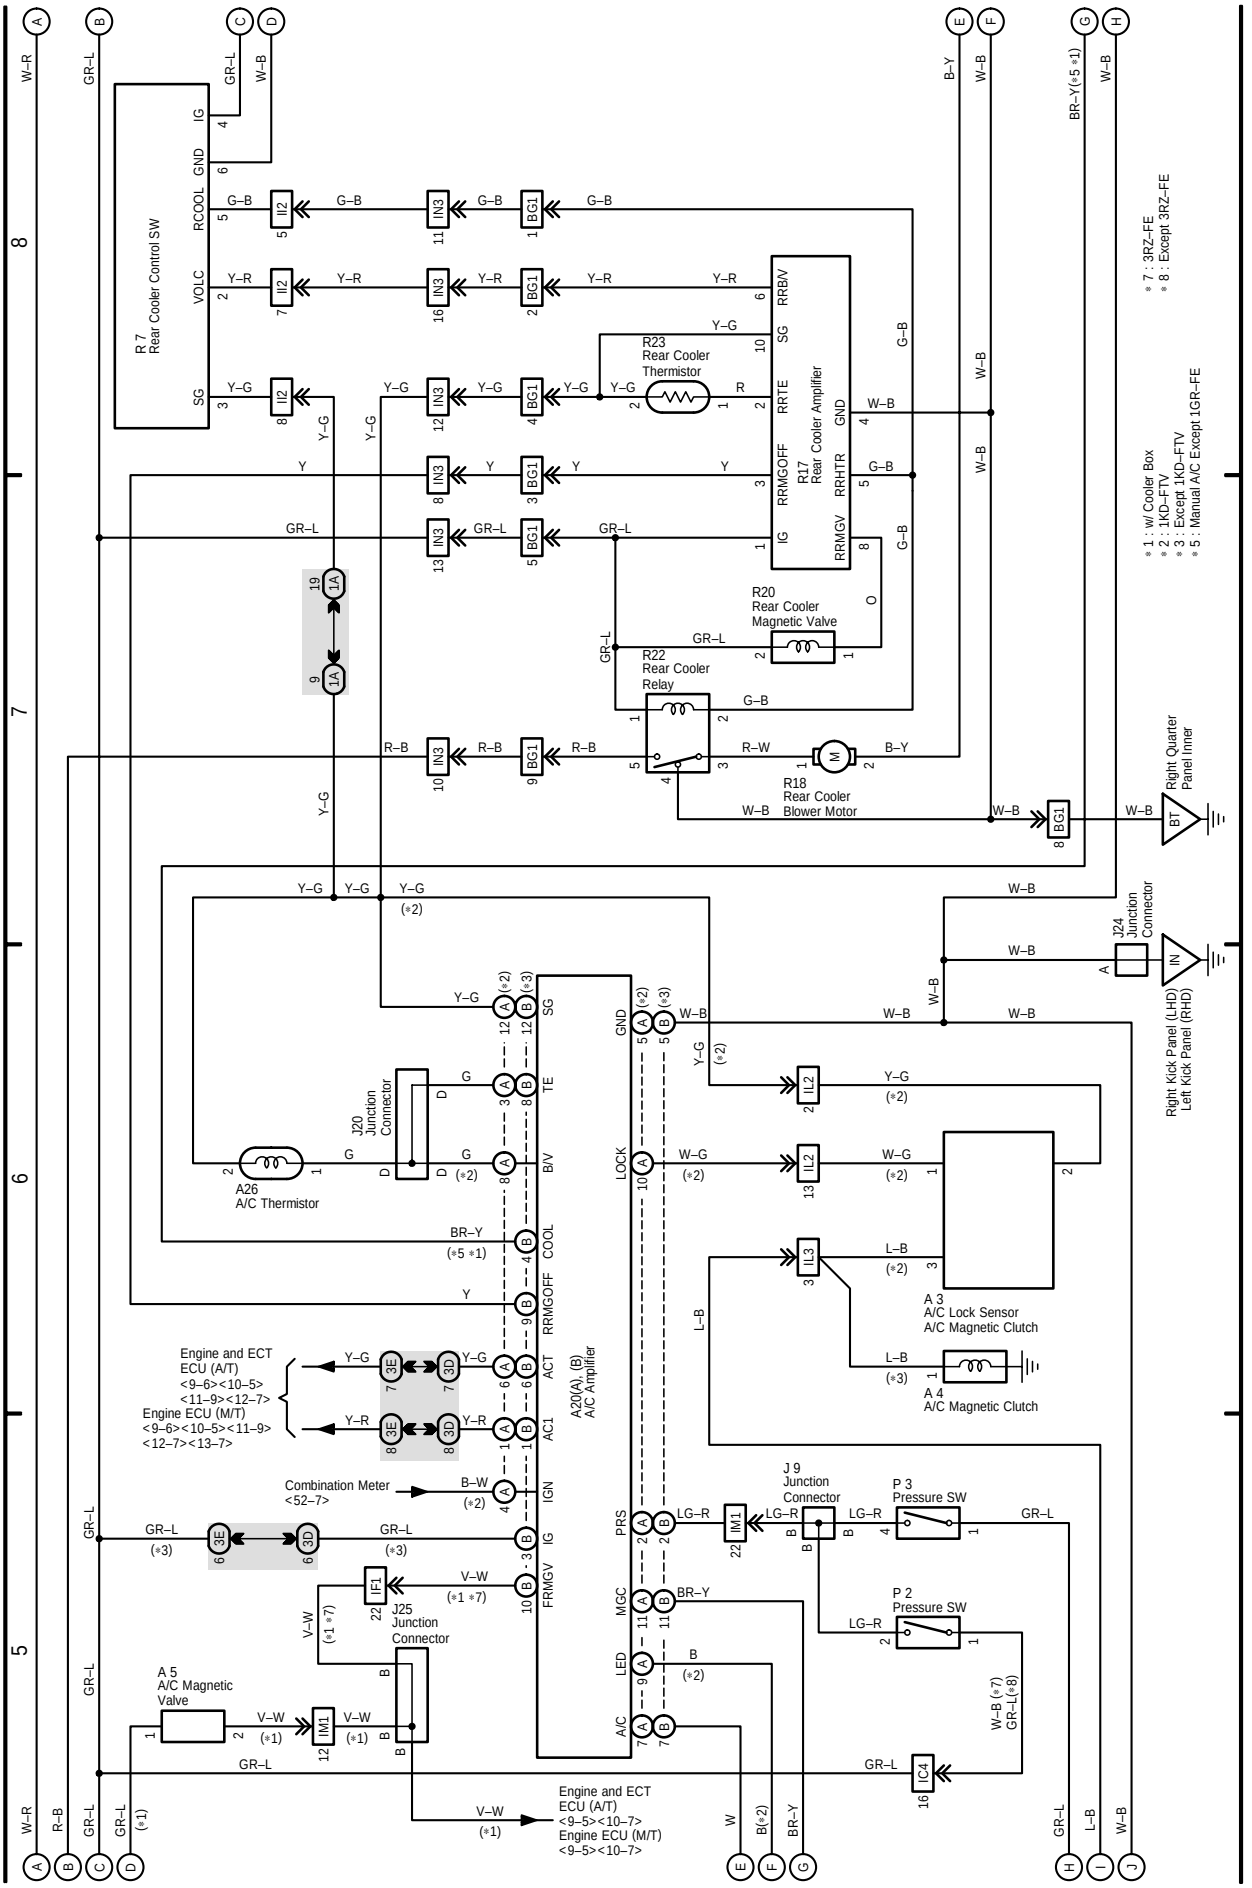
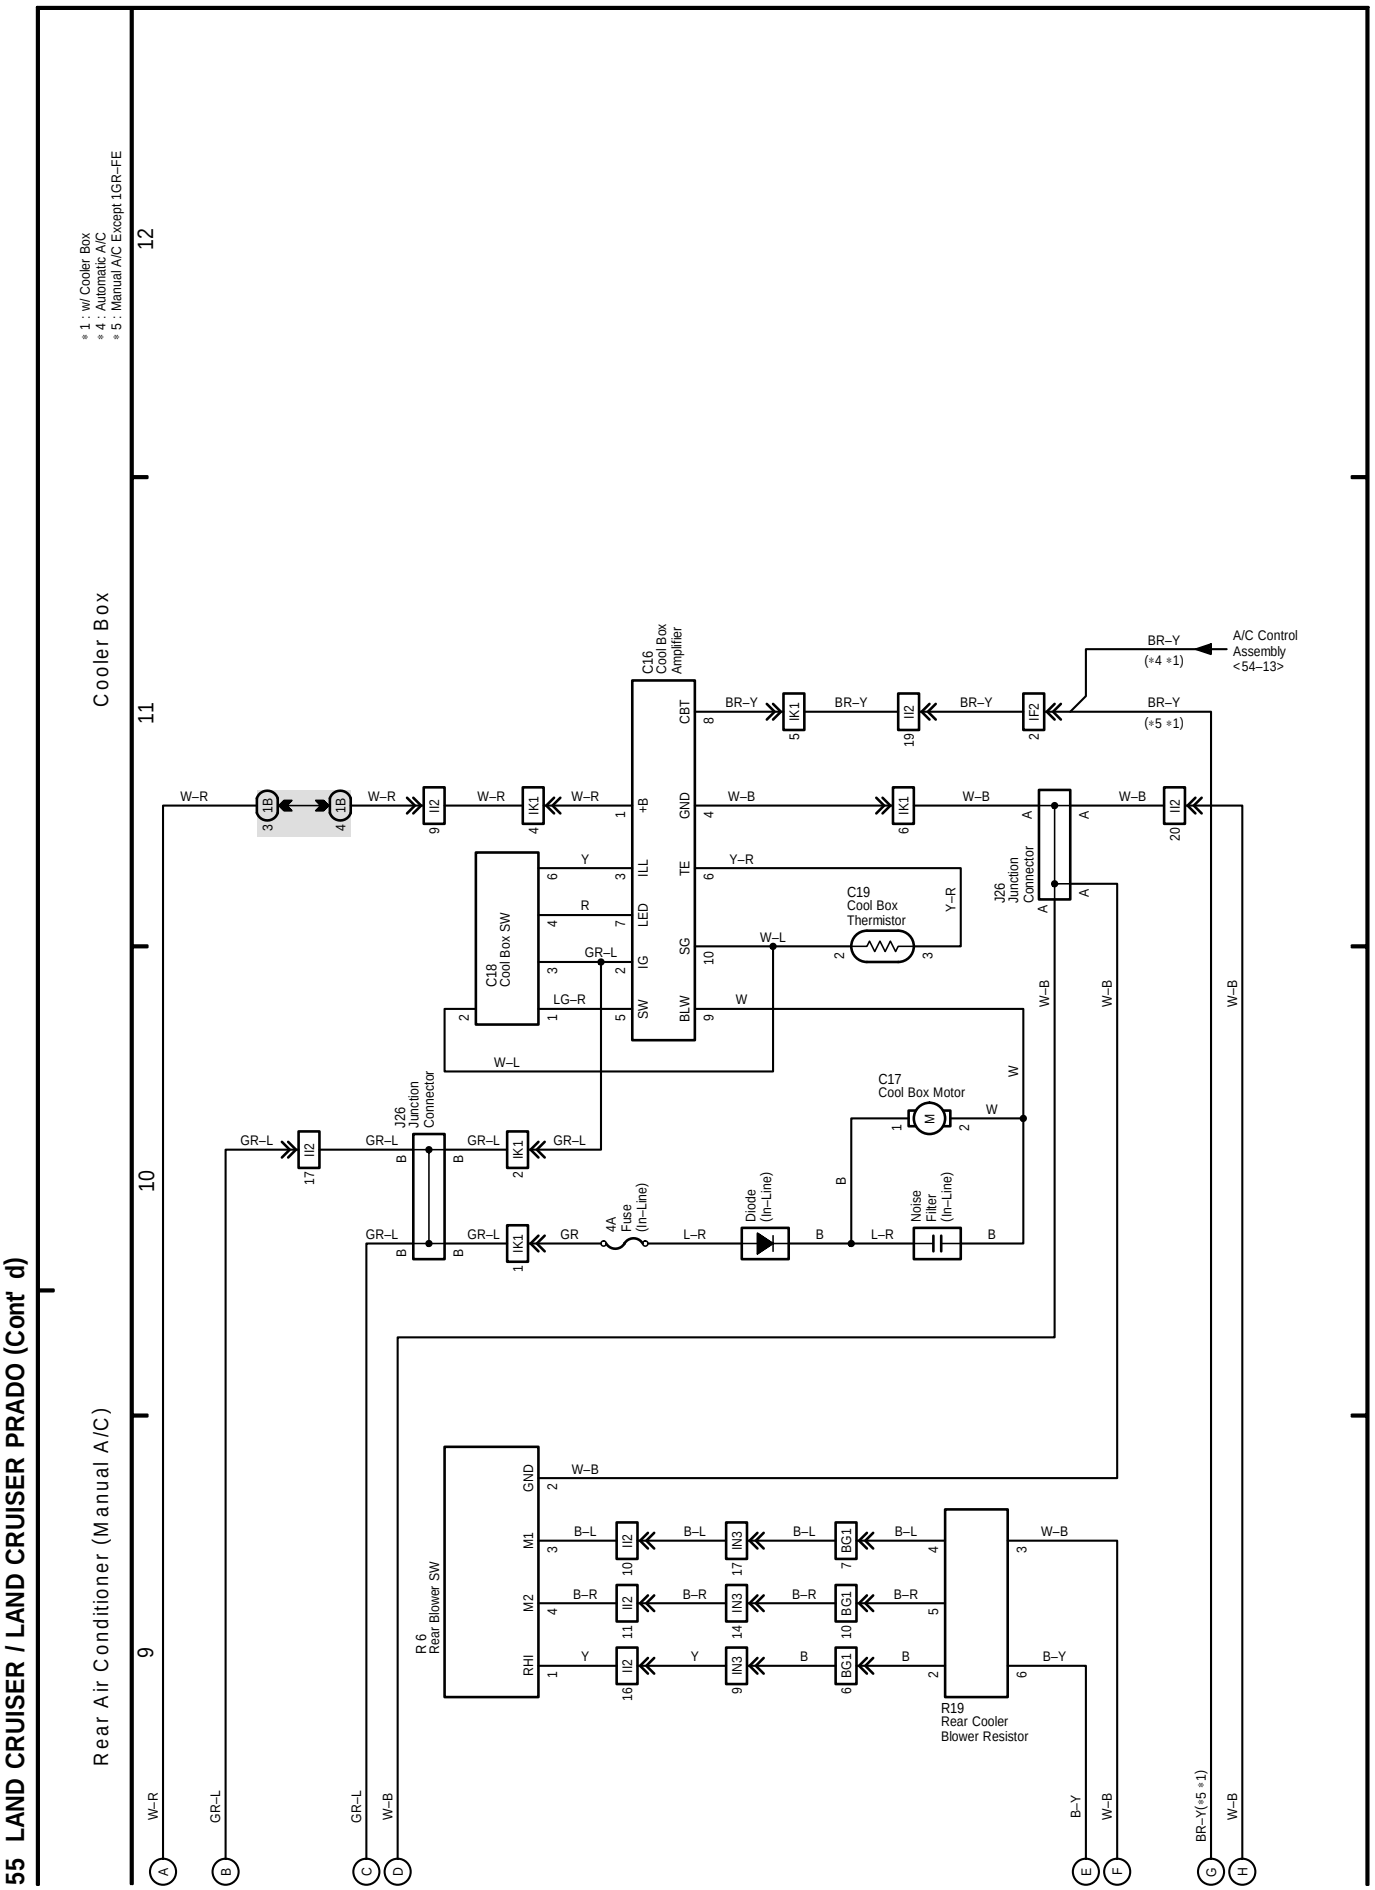

(Cont. next page)
55 LAND CRUISER / LAND CRUISER PRADO
Power Source
Condenser Fan
Air Conditioner (Manual A/C Except 1GR–FE)
A31
Air Inlet Control
Servo Motor
H12
Heater Control SW
Viscous Heater
Amplifier<53–2>
J20
Junction
Connector
DEFOG Relay
<43–2>
MG CLT Relay
HEATER Relay
7. 5A HEATER NO. 2
J1
Junction Connector
B 5
Blower Resistor
B 6
Blower SW
F12
Front Blower
Motor
J12
Junction
Connector
Left Kick Panel (LHD)
Right Kick Panel (RHD)
J24
Junction
Connector
Right Kick Panel (LHD)
Left Kick Panel (RHD)
N 5
Noise Filter
(Condenser Fan)
A 2
A/C Condenser
Fan Motor
P 3
Pressure SW
Front Right Fender
CDS FAN
Relay
MG CLT Relay
<54–3>
I14
Ignition SW
10A IG1 NO. 2
10A IG1
20A CDS FAN
50A AM1
50A HEATER
30A RR A/C
10A ECU–B
140A ALT (w/ PTC)
120A ALT (w/o PTC)
SHORT PIN
Battery
* 1 : w/ Cooler Box
* 2 : 1KD–FTV
* 3 : Except 1KD–FTV
* 4 : Automatic A/C
* 5 : Manual A/C Except 1GR–FE
* 6 : Manual A/C 1GR–FE

55 LAND CRUISER / LAND CRUISER PRADO (Cont' d)

(Cont. next page)




55 LAND CRUISER / LAND CRUISER PRADO (Cont' d)
Rear Air Conditioner (Manual A/C)
Cooler Box
* 1 : w/ Cooler Box
* 4 : Automatic A/C
* 5 : Manual A/C Except 1GR–FE
C16 Cool Box Amplifier
C18 Cool Box SW
C19 Cool Box Thermistor
C17 Cool Box Motor
J26 Junction Connector
R6 Rear Blower SW
R19 Rear Cooler Blower Resistor
4A Fuse (In–Line)
Diode (In–Line)
Noise Filter (In–Line)
A/C Control Assembly <54–13>
CBT
+B
GND
ILL
LED
IG
SG
SW
BLW
TE
M1
M2
RHI
W–R
GR–L
W–B
B–Y
BR–Y
Y–R
W–L
LG–R
GR
L–R
B–L
B–R
Y
R
W
B