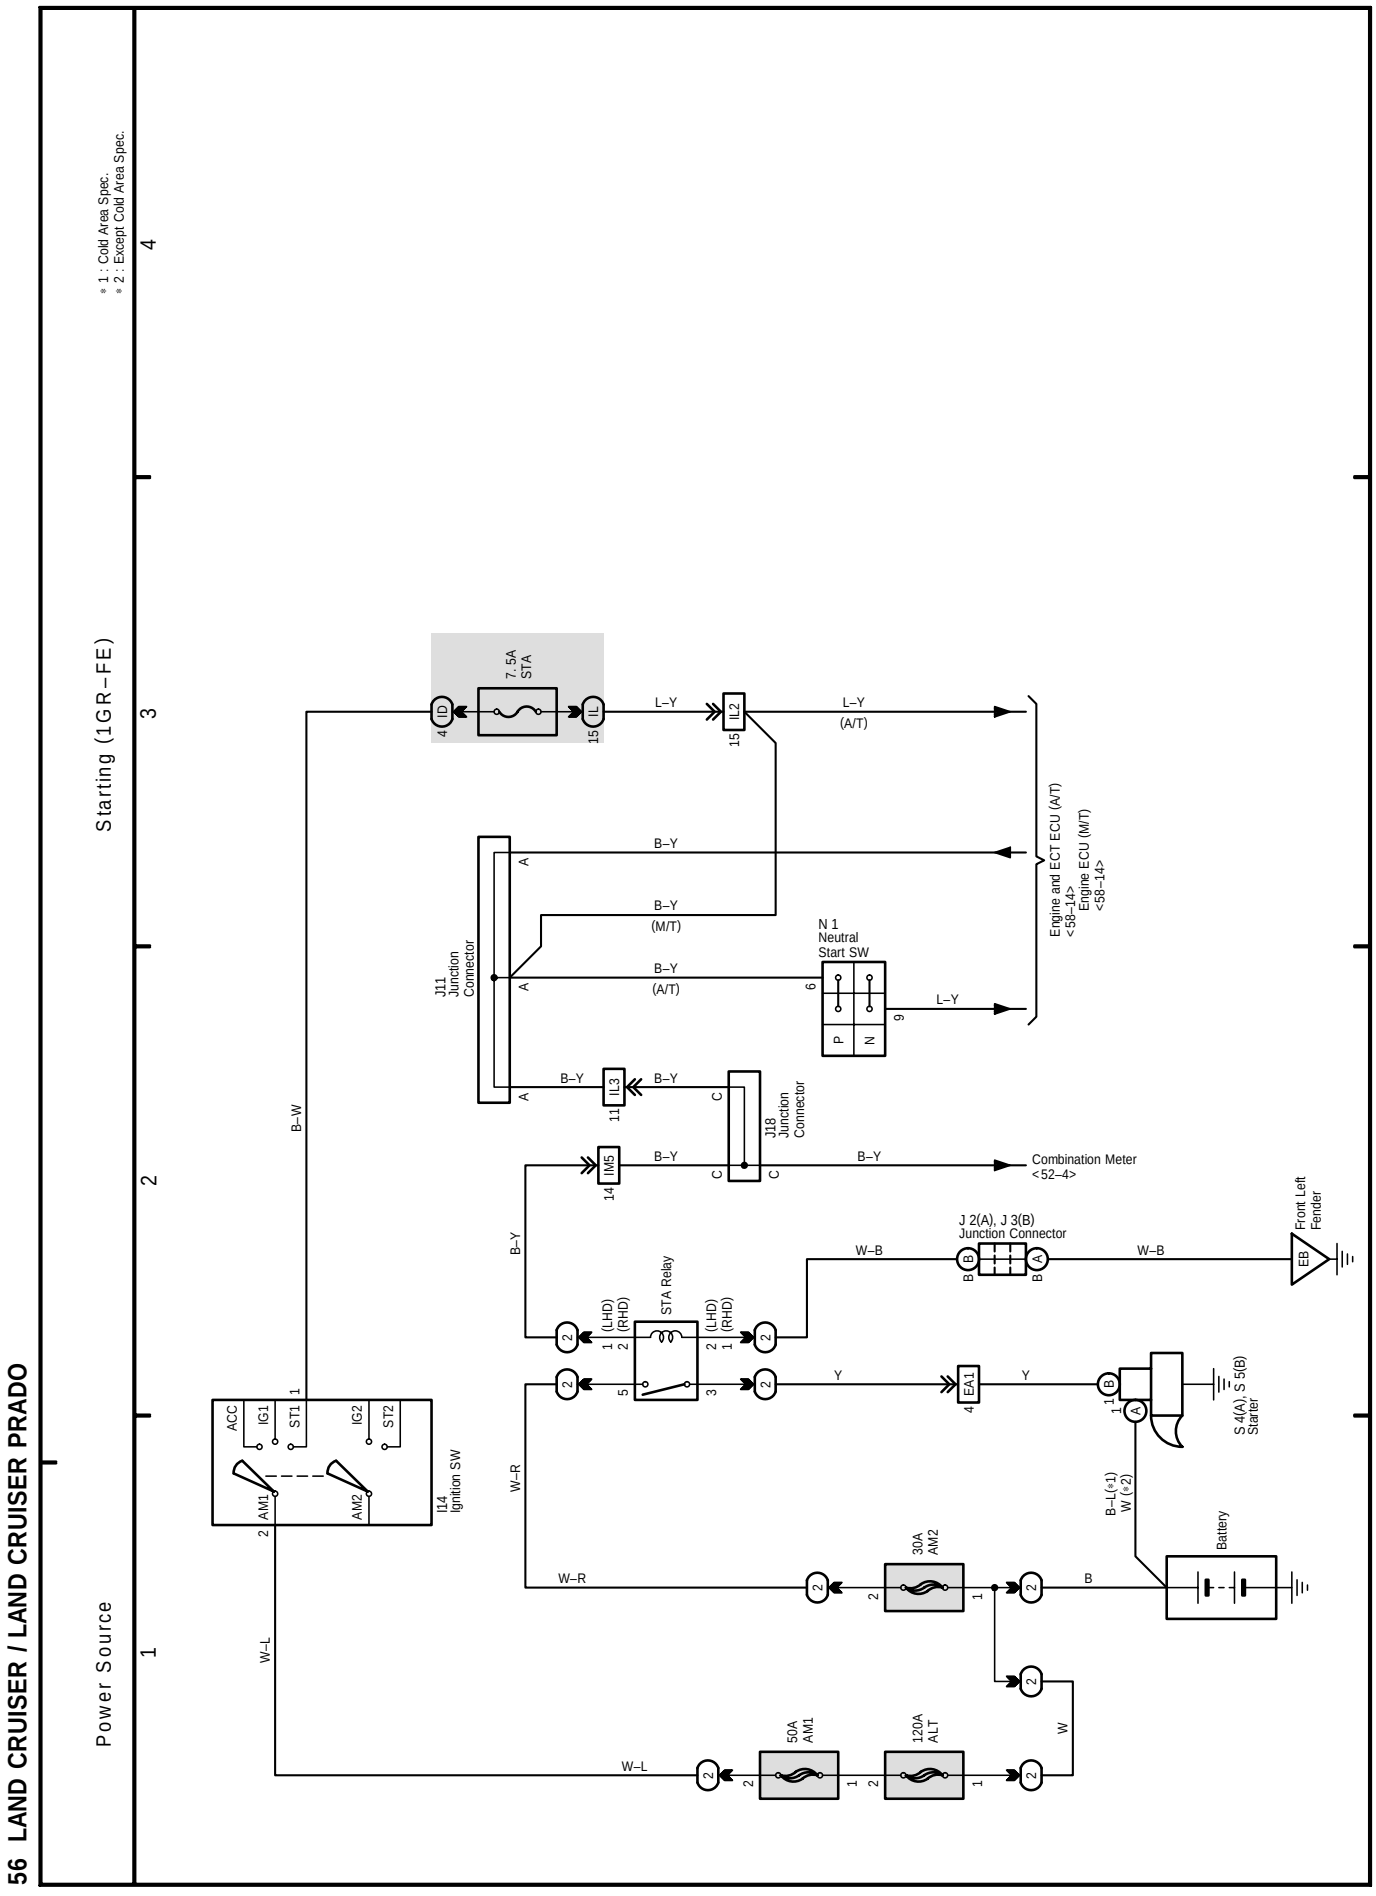

56 LAND CRUISER / LAND CRUISER PRADO
Power Source
Starting (1GR–FE)
1
2
3
4
* 1 : Cold Area Spec.
* 2 : Except Cold Area Spec.
7. 5A
STA
4 ID
15 IL
L–Y
15 IL2
L–Y
(A/T)
B–Y
B–Y
(M/T)
B–Y
(A/T)
J11
Junction
Connector
A
N 1
Neutral
Start SW
P
N
6
9
L–Y
Engine and ECT ECU (A/T)
<58–14>
Engine ECU (M/T)
<58–14>
B–Y
11 IL3
B–Y
C
J18
Junction
Connector
14 IM5
B–Y
B–Y
Combination Meter
<52–4>
B–W
B–Y
STA Relay
(LHD)
(RHD)
W–B
J 2(A), J 3(B)
Junction Connector
W–B
Front Left
Fender
EB
Y
4 EA1
Y
S 4(A), S 5(B)
Starter
W–R
B–L(*1)
W (*2)
ACC
IG1
ST1
IG2
ST2
AM1
AM2
I14
Ignition SW
30A
AM2
Battery
W–R
B
W–L
50A
AM1
120A
ALT
W–L
W