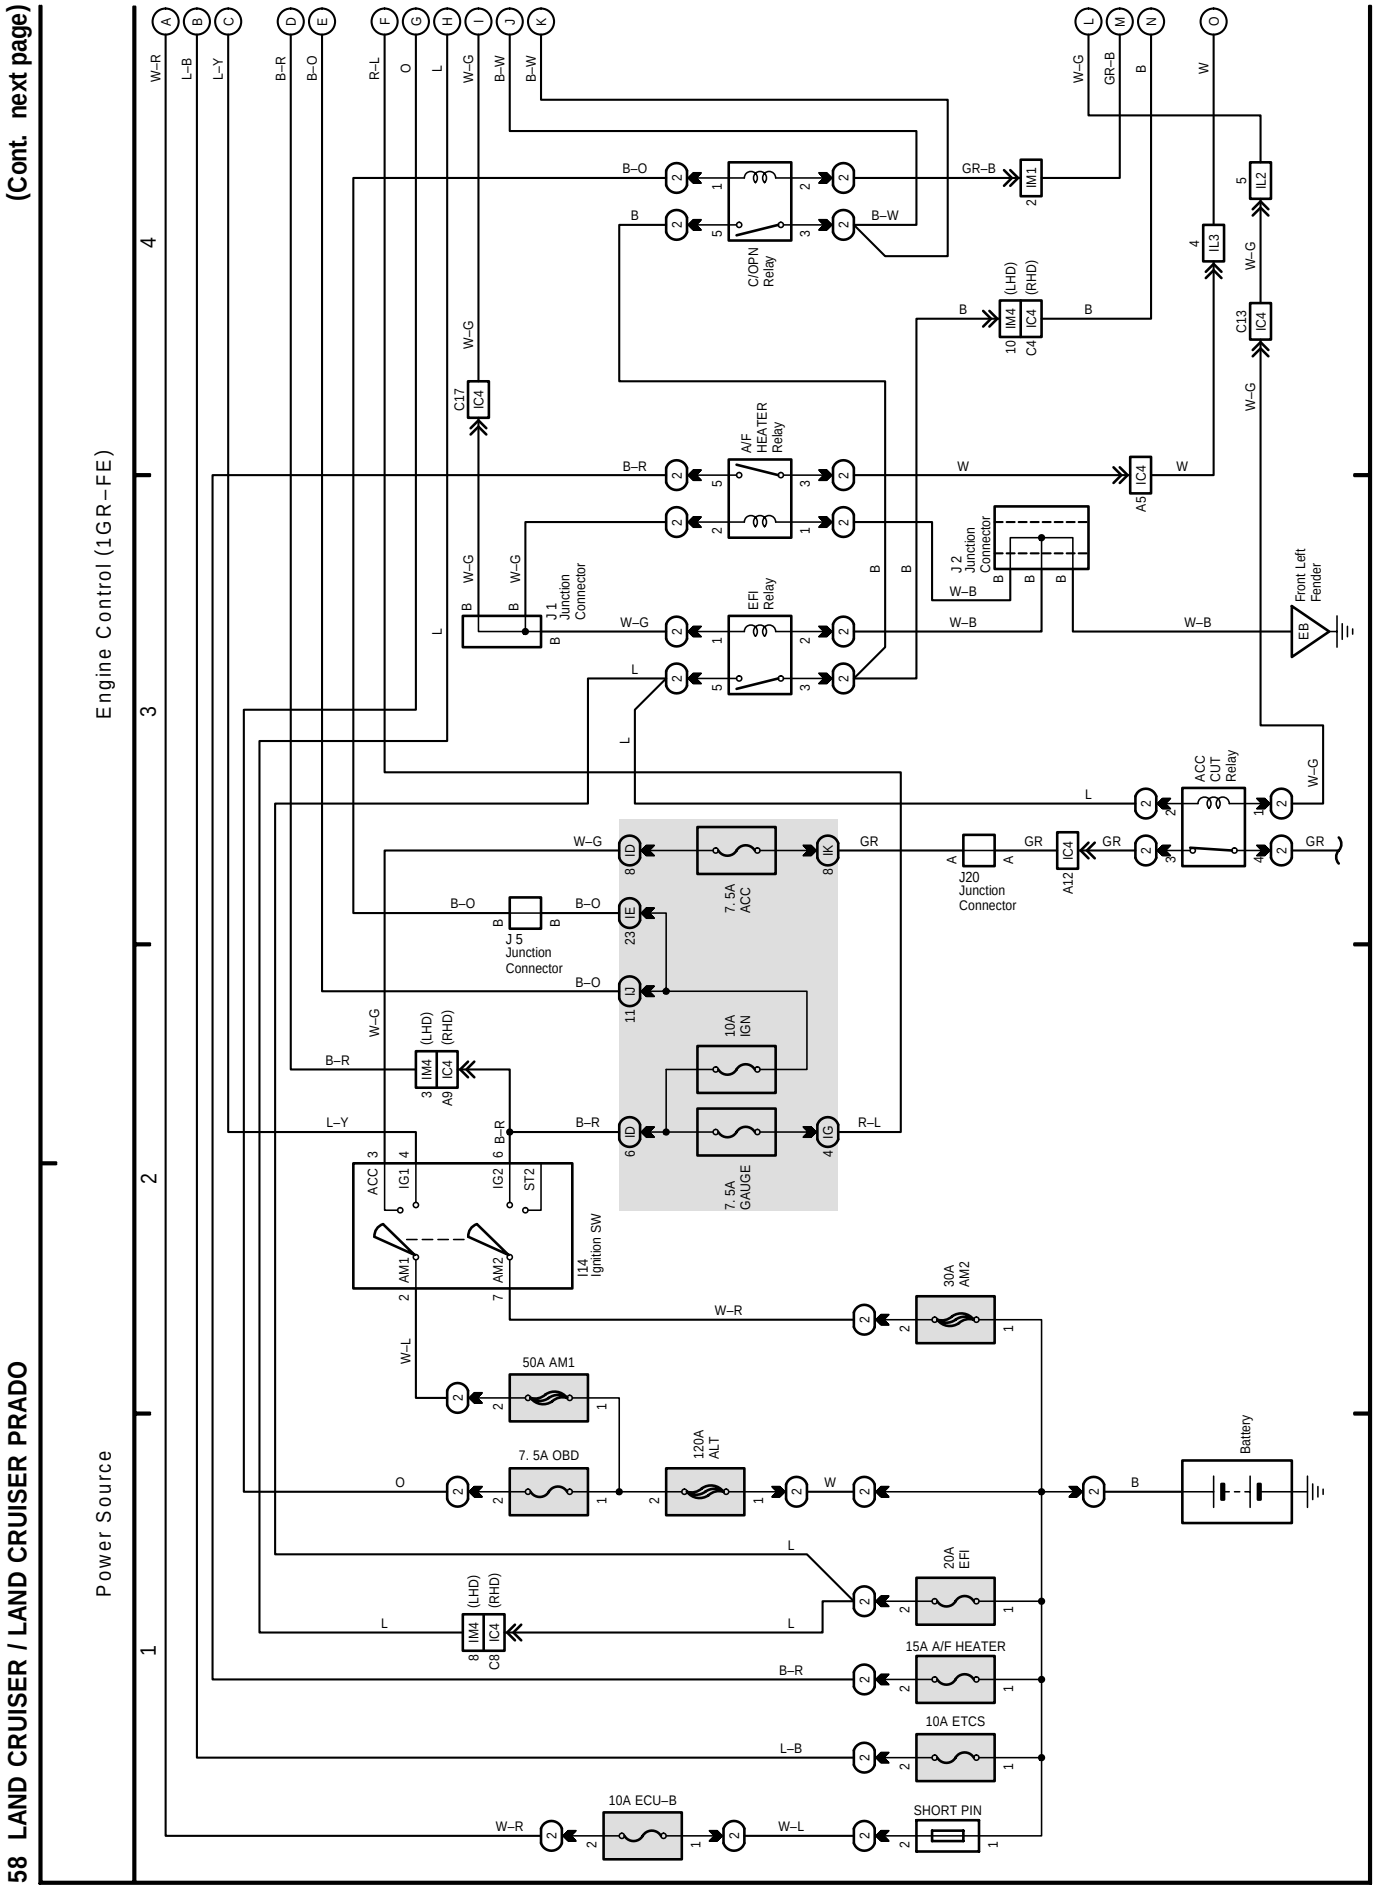
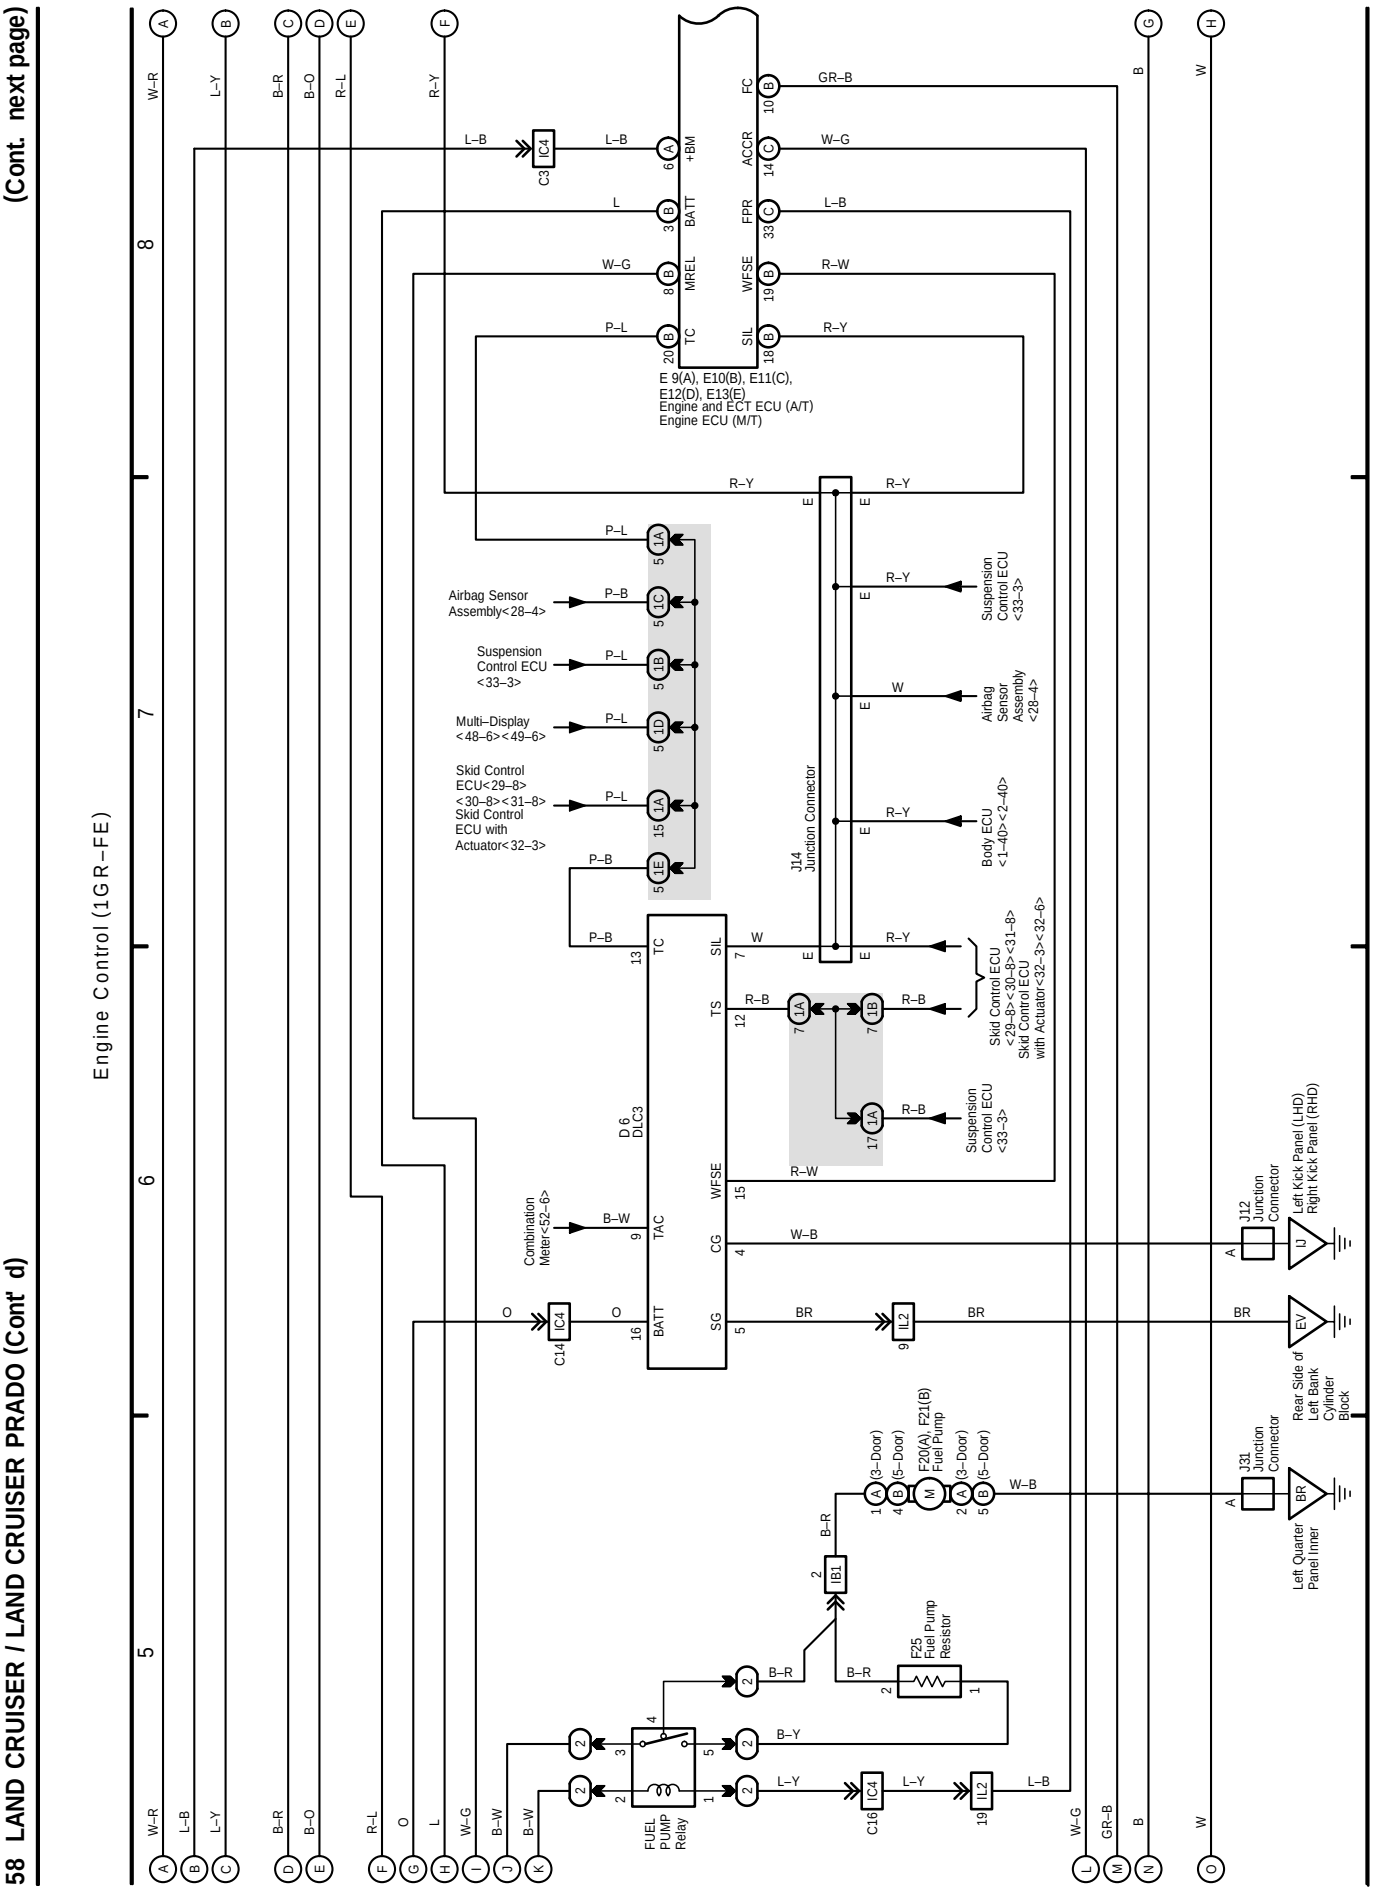
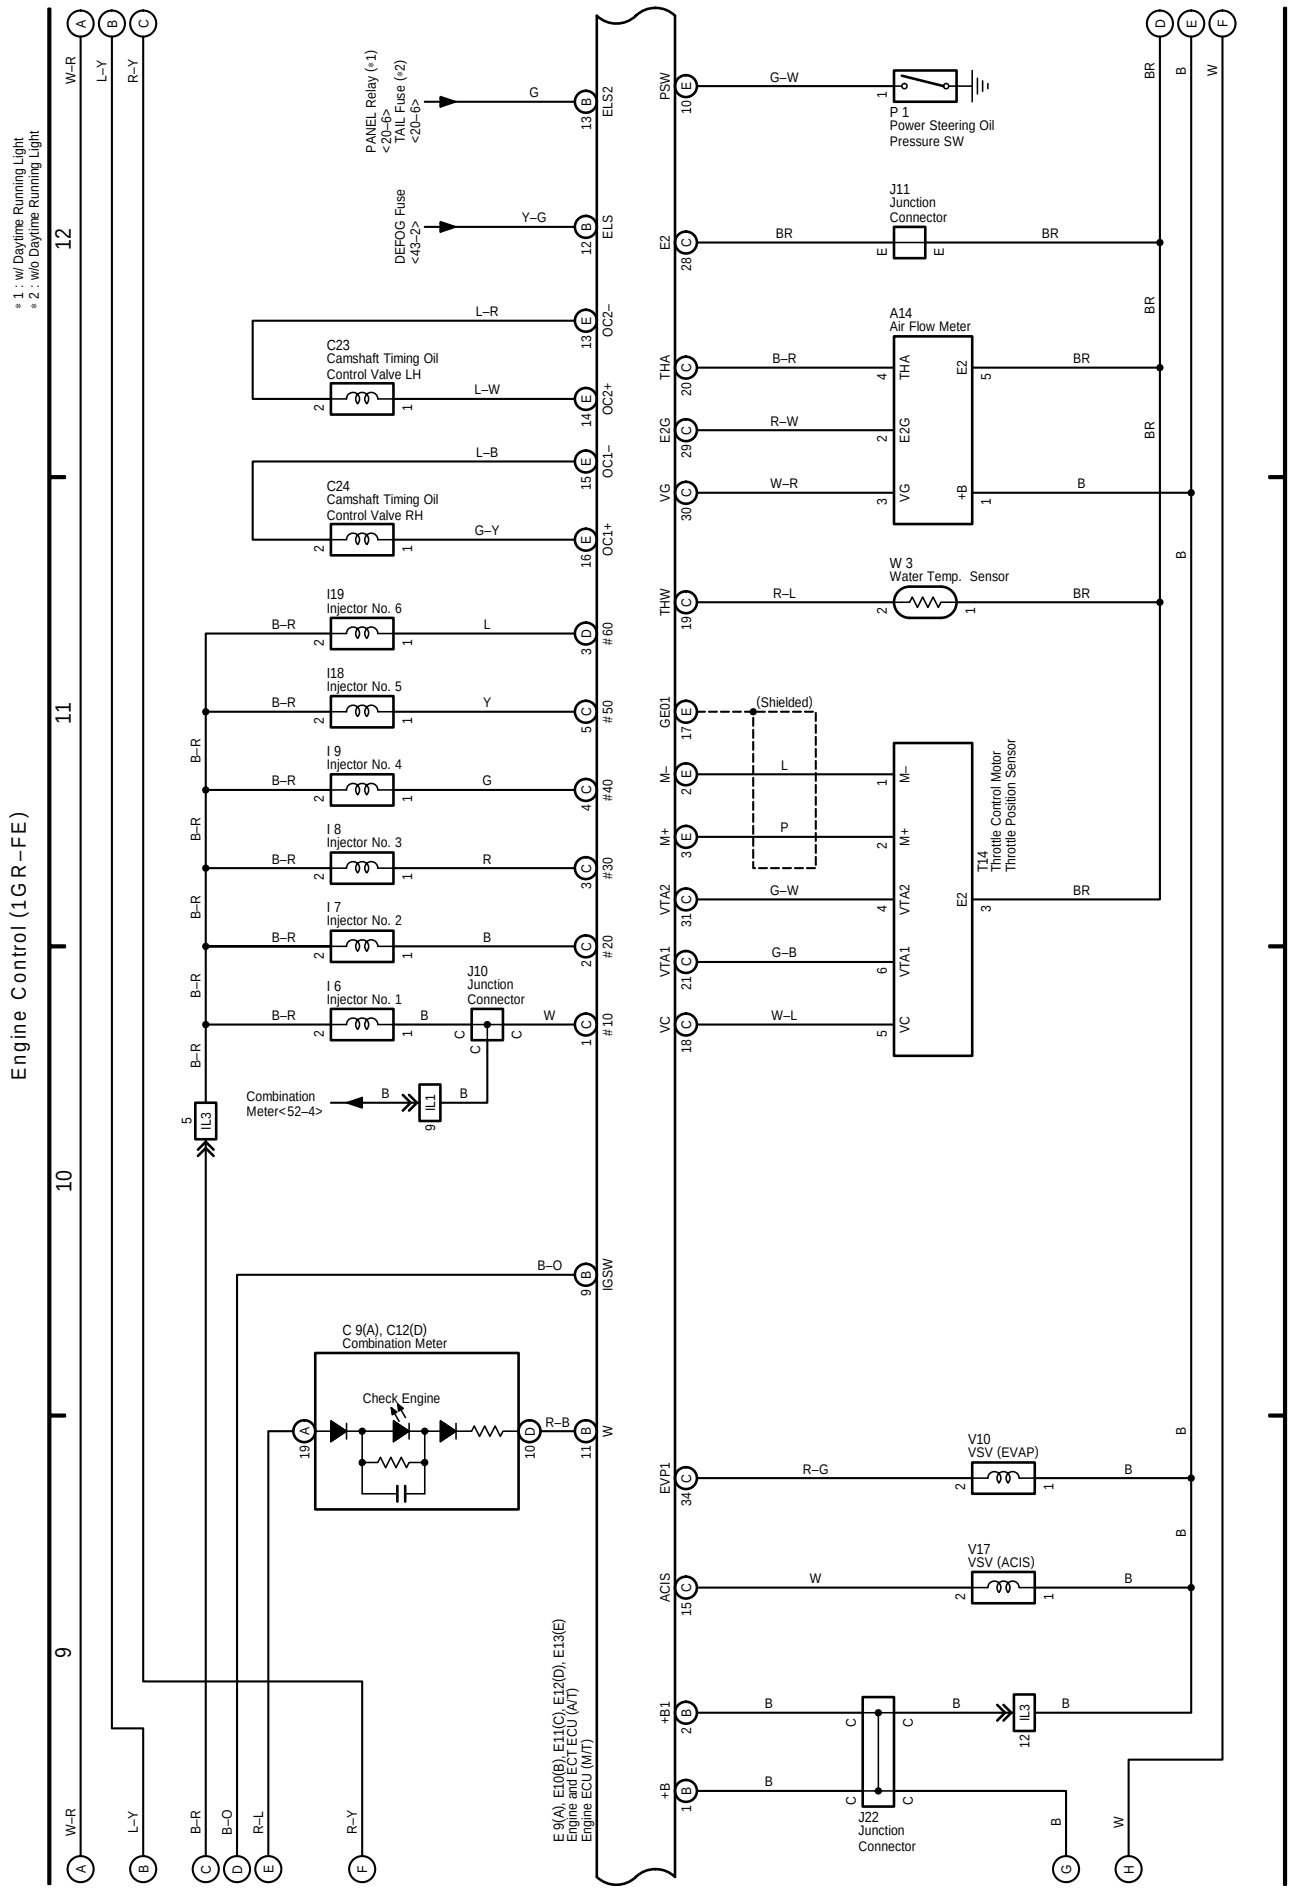
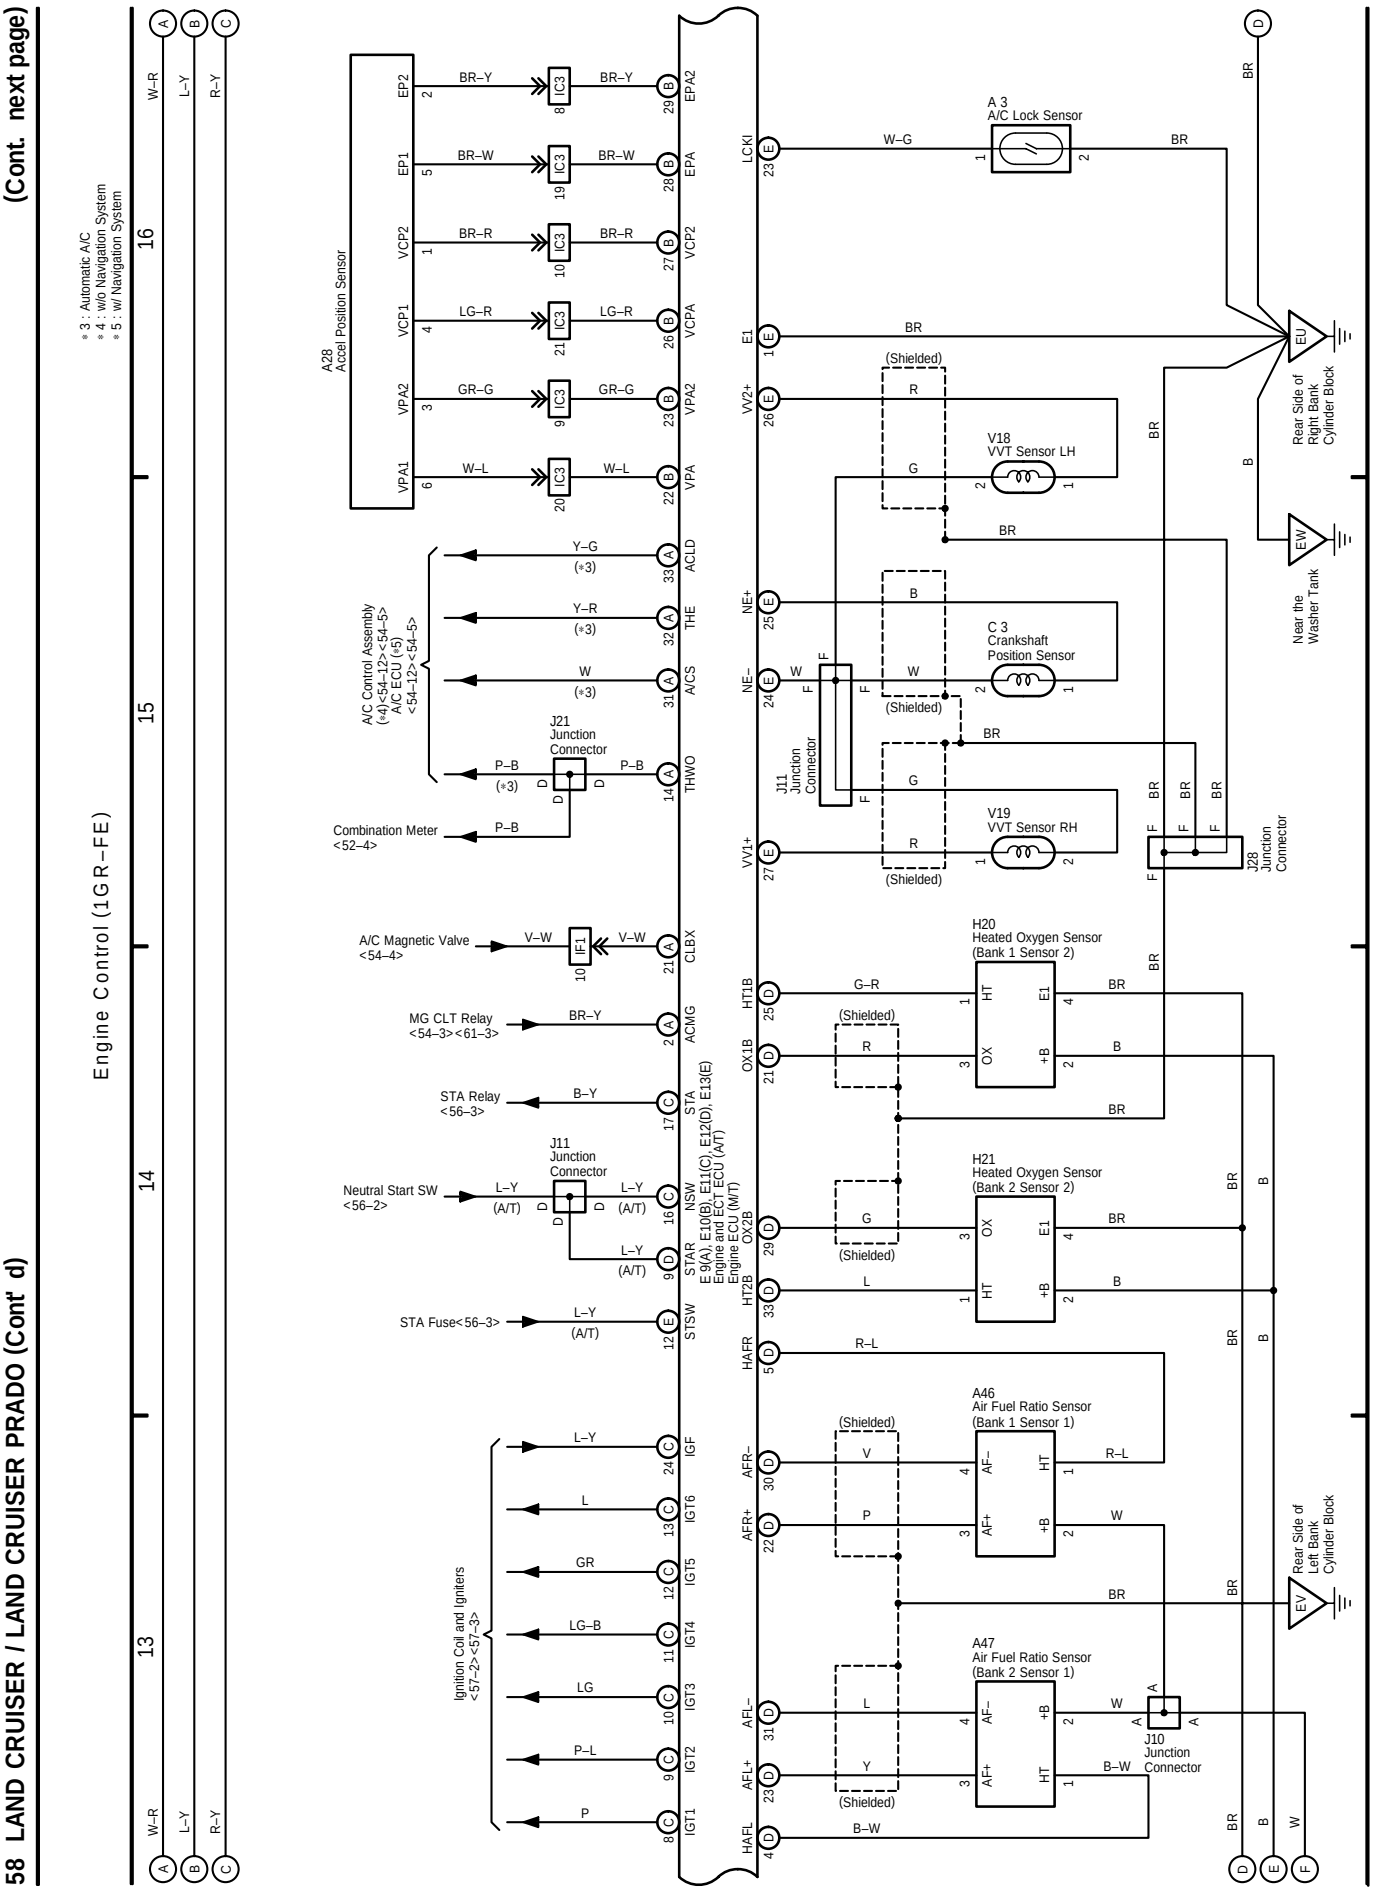

58 LAND CRUISER / LAND CRUISER PRADO
(Cont. next page)
Power Source
Engine Control (1GR–FE)
C/OPN Relay
A/F HEATER Relay
EFI Relay
ACC CUT Relay
J1 Junction Connector
J2 Junction Connector
J5 Junction Connector
J20 Junction Connector
Front Left Fender
7. 5A ACC
10A IGN
7. 5A GAUGE
I14 Ignition SW
30A AM2
50A AM1
7. 5A OBD
120A ALT
Battery
20A EFI
15A A/F HEATER
10A ETCS
10A ECU–B
SHORT PIN


58 LAND CRUISER / LAND CRUISER PRADO (Cont' d)
(Cont. next page)
Engine Control (1GR–FE)
E 9(A), E10(B), E11(C), E12(D), E13(E) Engine and ECT ECU (A/T) Engine ECU (M/T)
Airbag Sensor Assembly<28–4>
Suspension Control ECU <33–3>
Multi–Display <48–6><49–6>
Skid Control ECU<29–8><30–8><31–8> Skid Control ECU with Actuator<32–3>
J14 Junction Connector
Body ECU <1–40><2–40>
Airbag Sensor Assembly <28–4>
Skid Control ECU <29–8><30–8><31–8> Skid Control ECU with Actuator<32–3><32–6>
D6 DLC3
Combination Meter<52–6>
J12 Junction Connector
Left Kick Panel (LHD) Right Kick Panel (RHD)
J31 Junction Connector
Left Quarter Panel Inner
Rear Side of Left Bank Cylinder Block
F20(A), F21(B) Fuel Pump
F25 Fuel Pump Resistor
FUEL PUMP Relay
C3 IC4
C14 IC4
C16 IC4
IB1
IL2
EV
IJ
BR

58 LAND CRUISER / LAND CRUISER PRADO (Cont' d)

(Cont. next page)




(Cont. next page)
58 LAND CRUISER / LAND CRUISER PRADO (Cont' d)
Engine Control (1GR–FE)
* 3 : Automatic A/C
* 4 : w/o Navigation System
* 5 : w/ Navigation System
A28 Accel Position Sensor
A/C Control Assembly (*4)<54–12><54–5> A/C ECU (*5) <54–12><54–5>
Combination Meter <52–4>
A/C Magnetic Valve <54–4>
MG CLT Relay <54–3><61–3>
STA Relay <56–3>
Neutral Start SW <56–2>
STA Fuse<56–3>
Ignition Coil and Igniters <57–2><57–3>
J21 Junction Connector
J11 Junction Connector
A 3 A/C Lock Sensor
V18 VVT Sensor LH
V19 VVT Sensor RH
C 3 Crankshaft Position Sensor
H20 Heated Oxygen Sensor (Bank 1 Sensor 2)
H21 Heated Oxygen Sensor (Bank 2 Sensor 2)
A46 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
A47 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
J28 Junction Connector
J10 Junction Connector
Rear Side of Right Bank Cylinder Block
Near the Washer Tank
Rear Side of Left Bank Cylinder Block
E 9(A), E10(B), E11(C), E12(D), E13(E) Engine and ECT ECU (A/T) Engine ECU (M/T)
(Shielded)

58 LAND CRUISER / LAND CRUISER PRADO (Cont' d)

