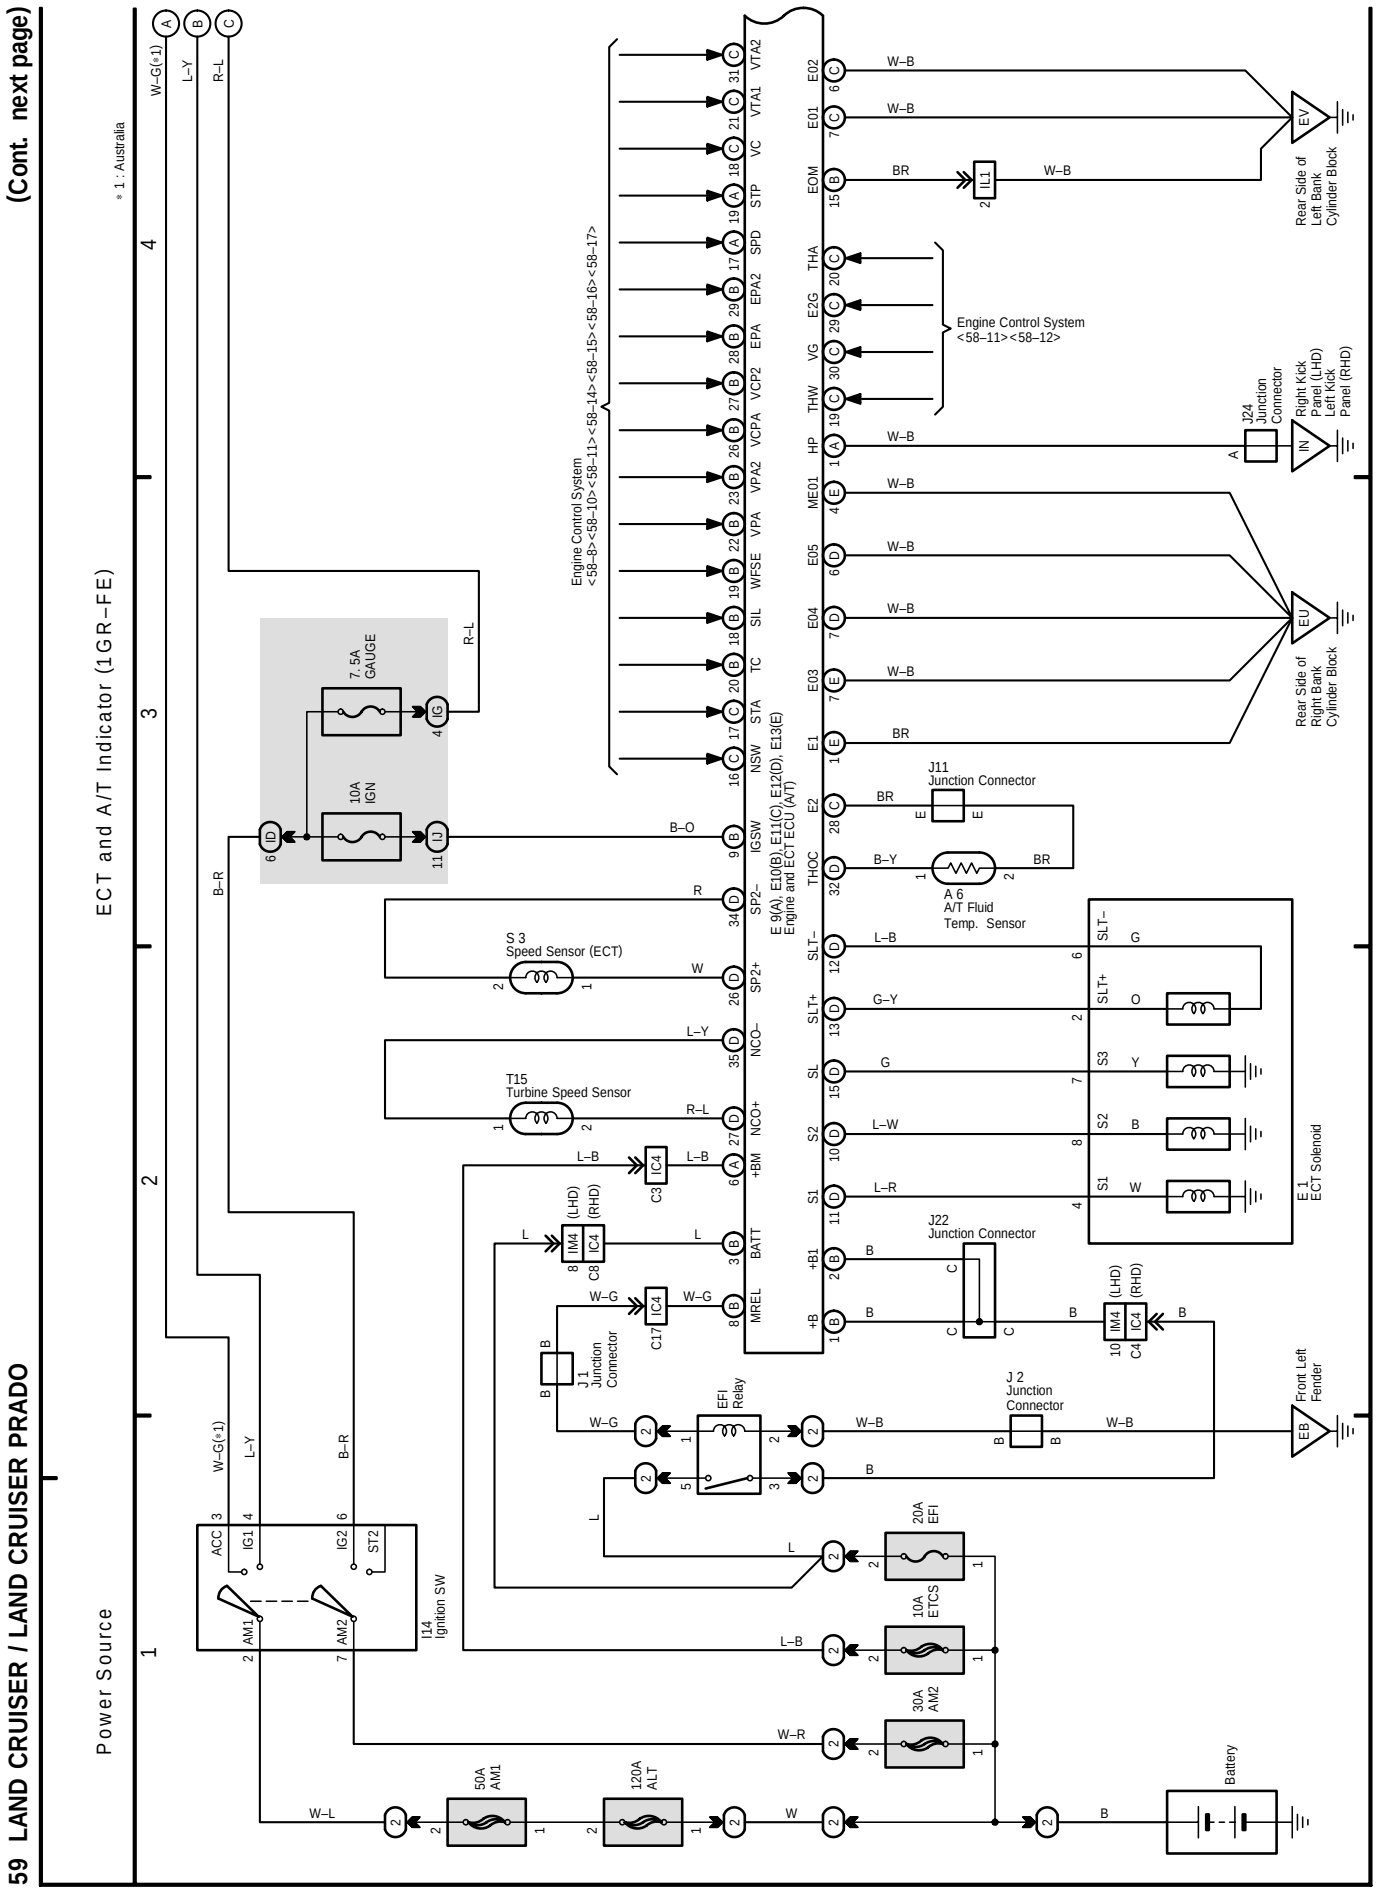
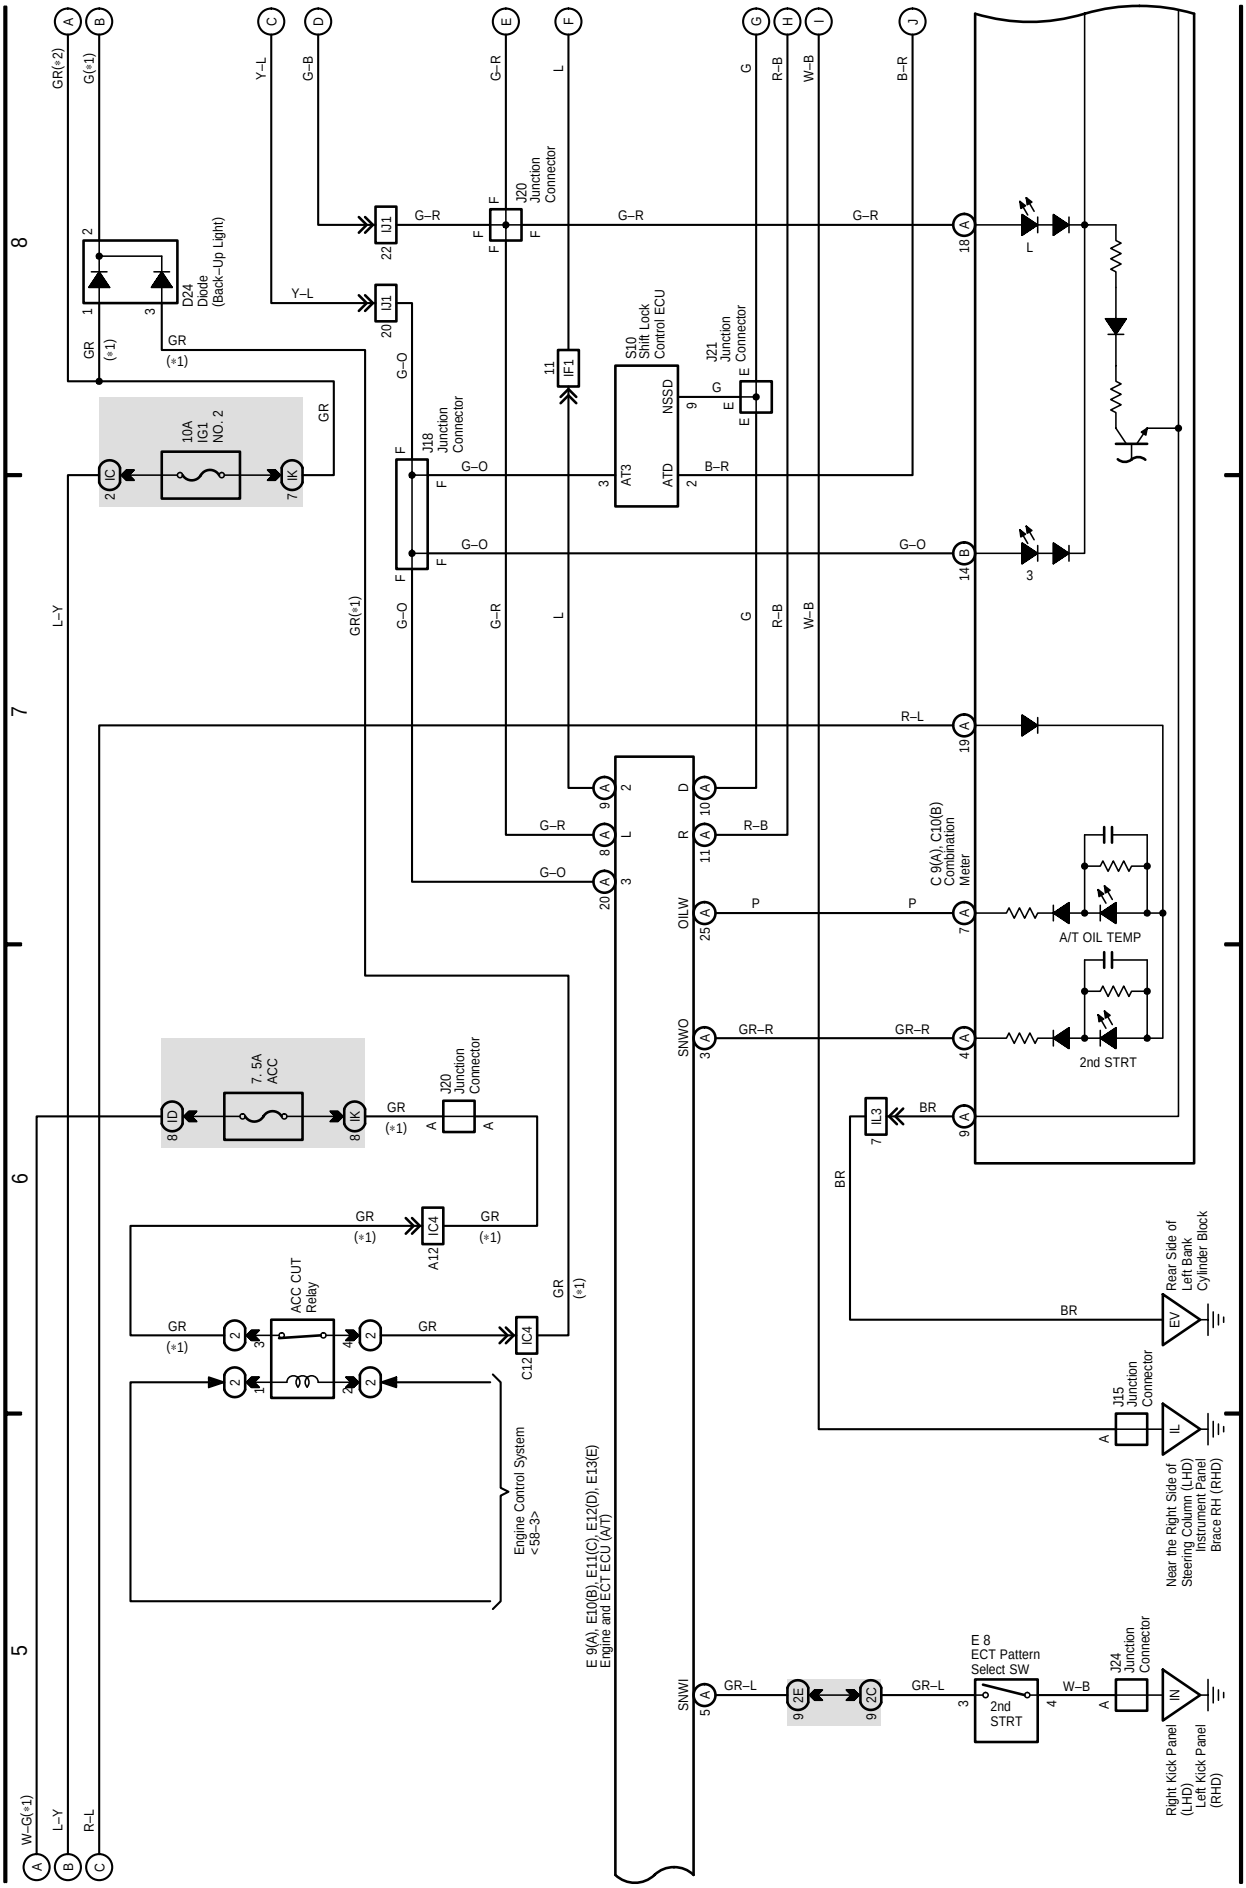
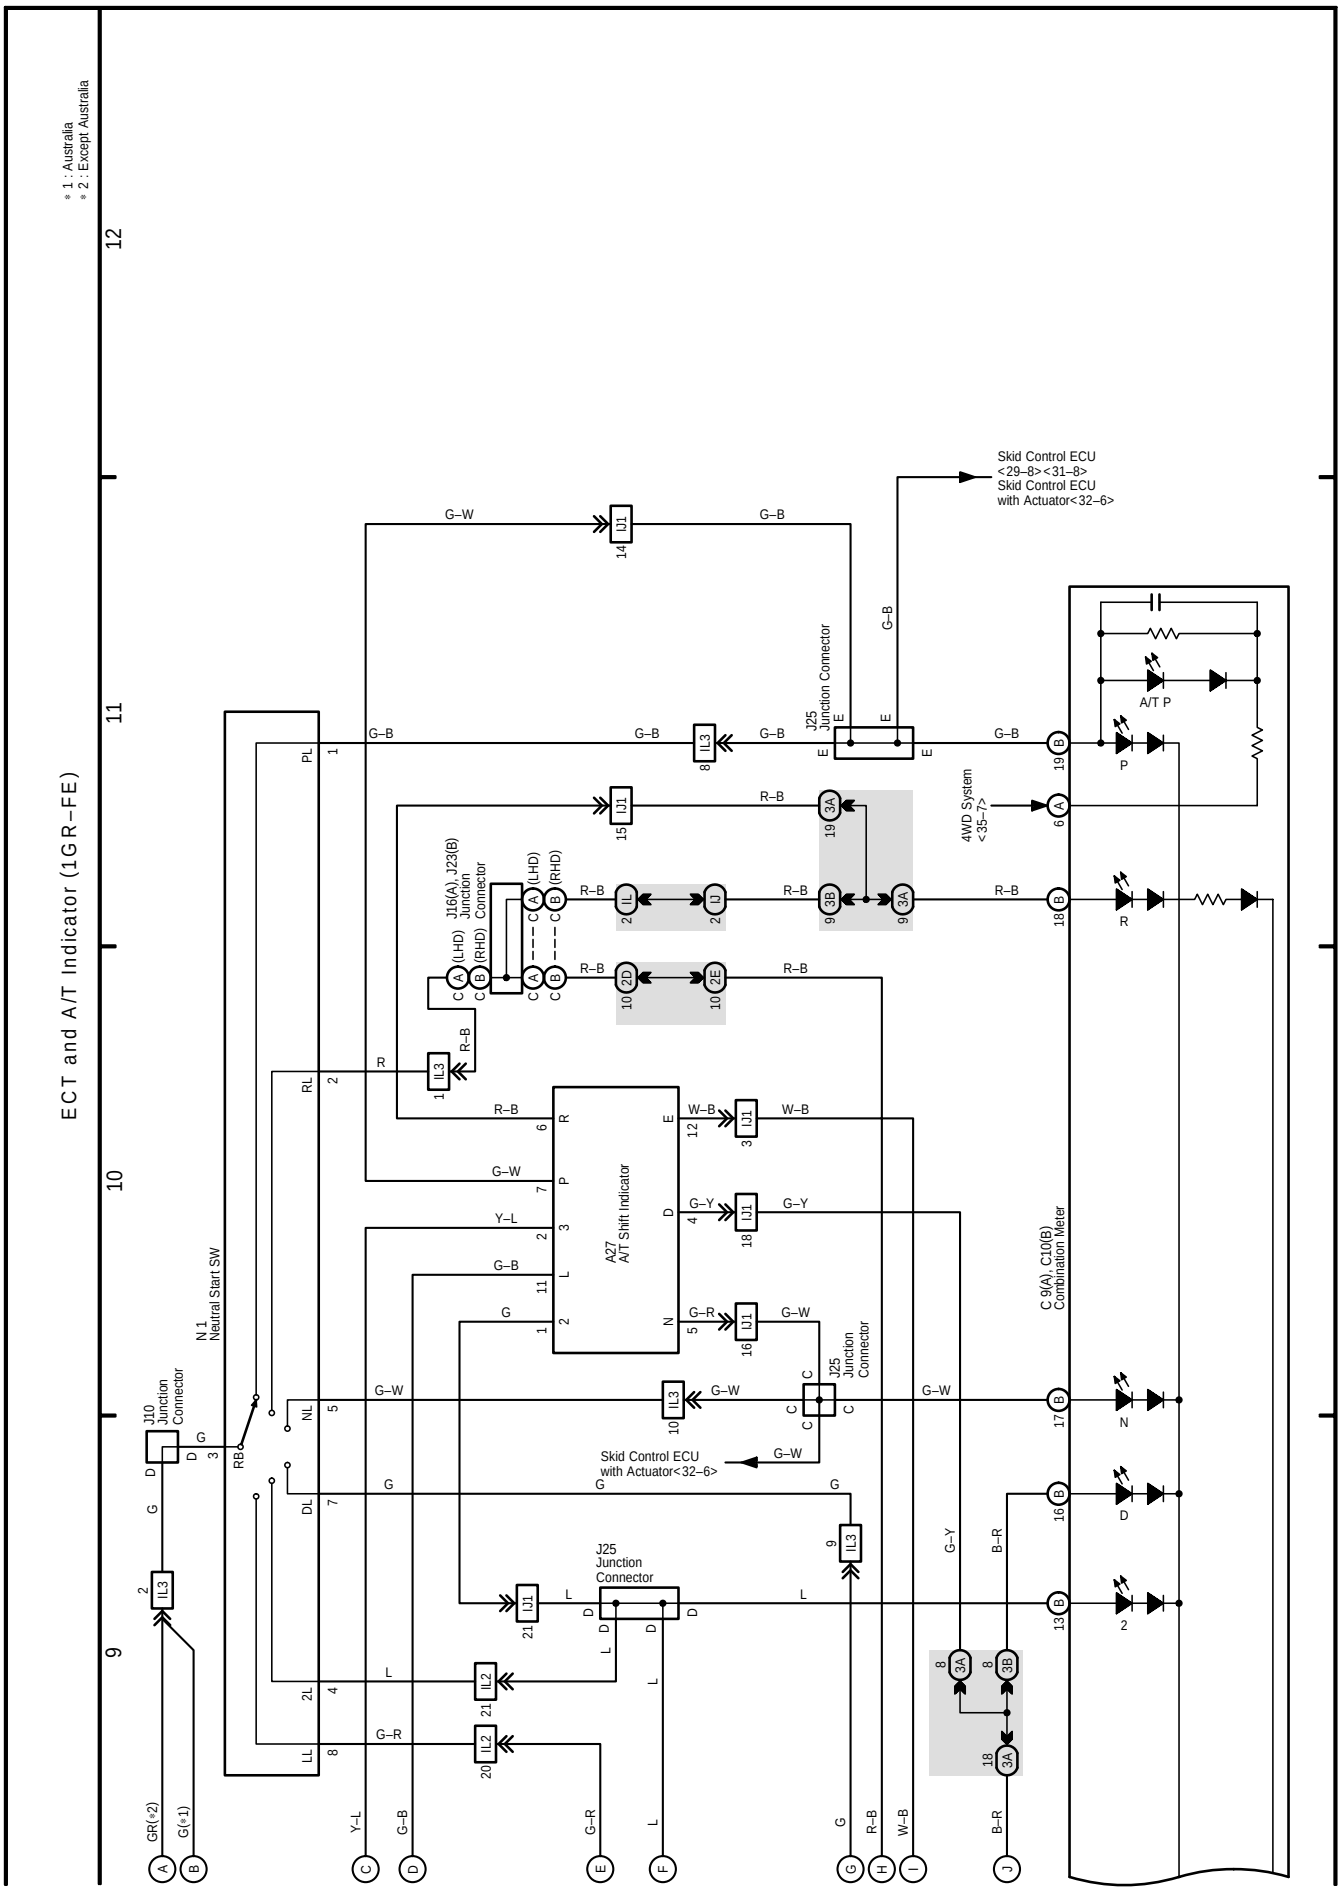

59 LAND CRUISER / LAND CRUISER PRADO
(Cont. next page)
Power Source
ECT and A/T Indicator (1GR–FE)
* 1 : Australia
Engine Control System <58–8><58–10><58–11><58–14><58–15><58–16><58–17>
Engine Control System <58–11><58–12>
E 9(A), E10(B), E11(C), E12(D), E13(E) Engine and ECT ECU (A/T)
J11 Junction Connector
A 6 A/T Fluid Temp. Sensor
S 3 Speed Sensor (ECT)
T15 Turbine Speed Sensor
E 1 ECT Solenoid
J22 Junction Connector
J 2 Junction Connector
J 1 Junction Connector
J24 Junction Connector
Right Kick Panel (LHD) Left Kick Panel (RHD)
Rear Side of Left Bank Cylinder Block
Rear Side of Right Bank Cylinder Block
Front Left Fender
EFI Relay
I14 Ignition SW
7.5A GAUGE
10A IGN
20A EFI
10A ETCS
30A AM2
50A AM1
120A ALT
Battery

59 LAND CRUISER / LAND CRUISER PRADO (Cont' d)

(Cont. next page)




59 LAND CRUISER / LAND CRUISER PRADO (Cont' d)
ECT and A/T Indicator (1GR–FE)
* 1 : Australia
* 2 : Except Australia
Skid Control ECU <29–8><31–8>
Skid Control ECU with Actuator<32–6>
J25 Junction Connector
4WD System <35–7>
A/T P
P
R
N
D
2
J16(A), J23(B) Junction Connector
(LHD)
(RHD)
A27 A/T Shift Indicator
N 1 Neutral Start SW
J10 Junction Connector
C 9(A), C10(B) Combination Meter
IL3
IL2
IJ1
3A
3B
2D
2E
GR(*2)
G(*1)
Y–L
G–B
G–R
L
R–B
W–B
B–R
G–W
G–Y