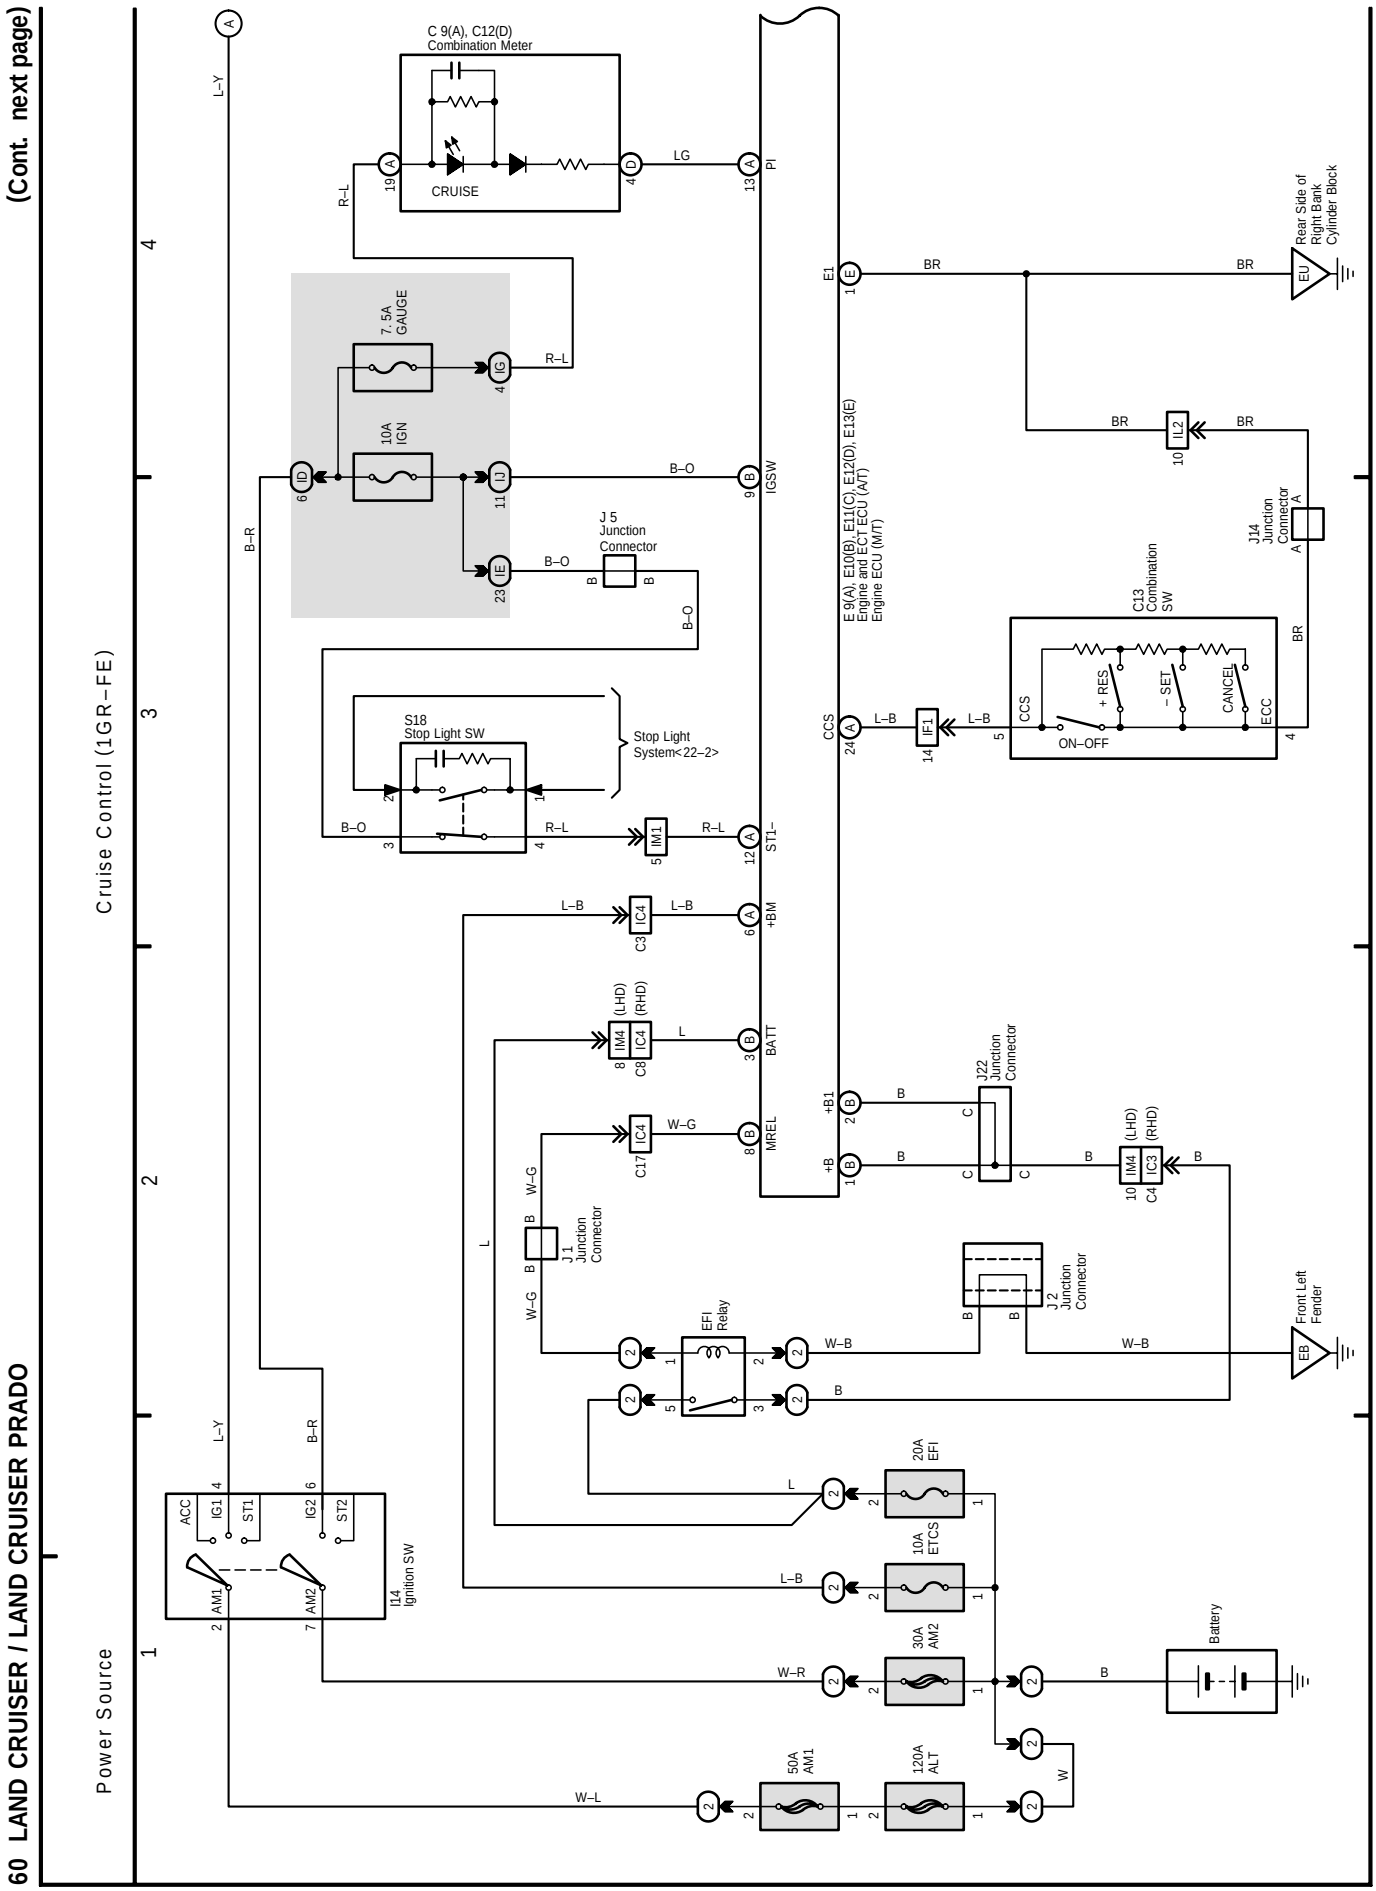

(Cont. next page)
60 LAND CRUISER / LAND CRUISER PRADO
Power Source
Cruise Control (1GR–FE)
C 9(A), C12(D)
Combination Meter
CRUISE
7. 5A GAUGE
10A IGN
J 5 Junction Connector
S18 Stop Light SW
Stop Light System<22–2>
E 9(A), E10(B), E11(C), E12(D), E13(E) Engine and ECT ECU (A/T) Engine ECU (M/T)
C13 Combination SW
+ RES
– SET
CANCEL
ON–OFF
J14 Junction Connector
Rear Side of Right Bank Cylinder Block
J22 Junction Connector
J1 Junction Connector
J2 Junction Connector
EFI Relay
Front Left Fender
I14 Ignition SW
ACC
IG1
ST1
IG2
ST2
20A EFI
10A ETCS
30A AM2
50A AM1
120A ALT
Battery

60 LAND CRUISER / LAND CRUISER PRADO (Cont' d)

