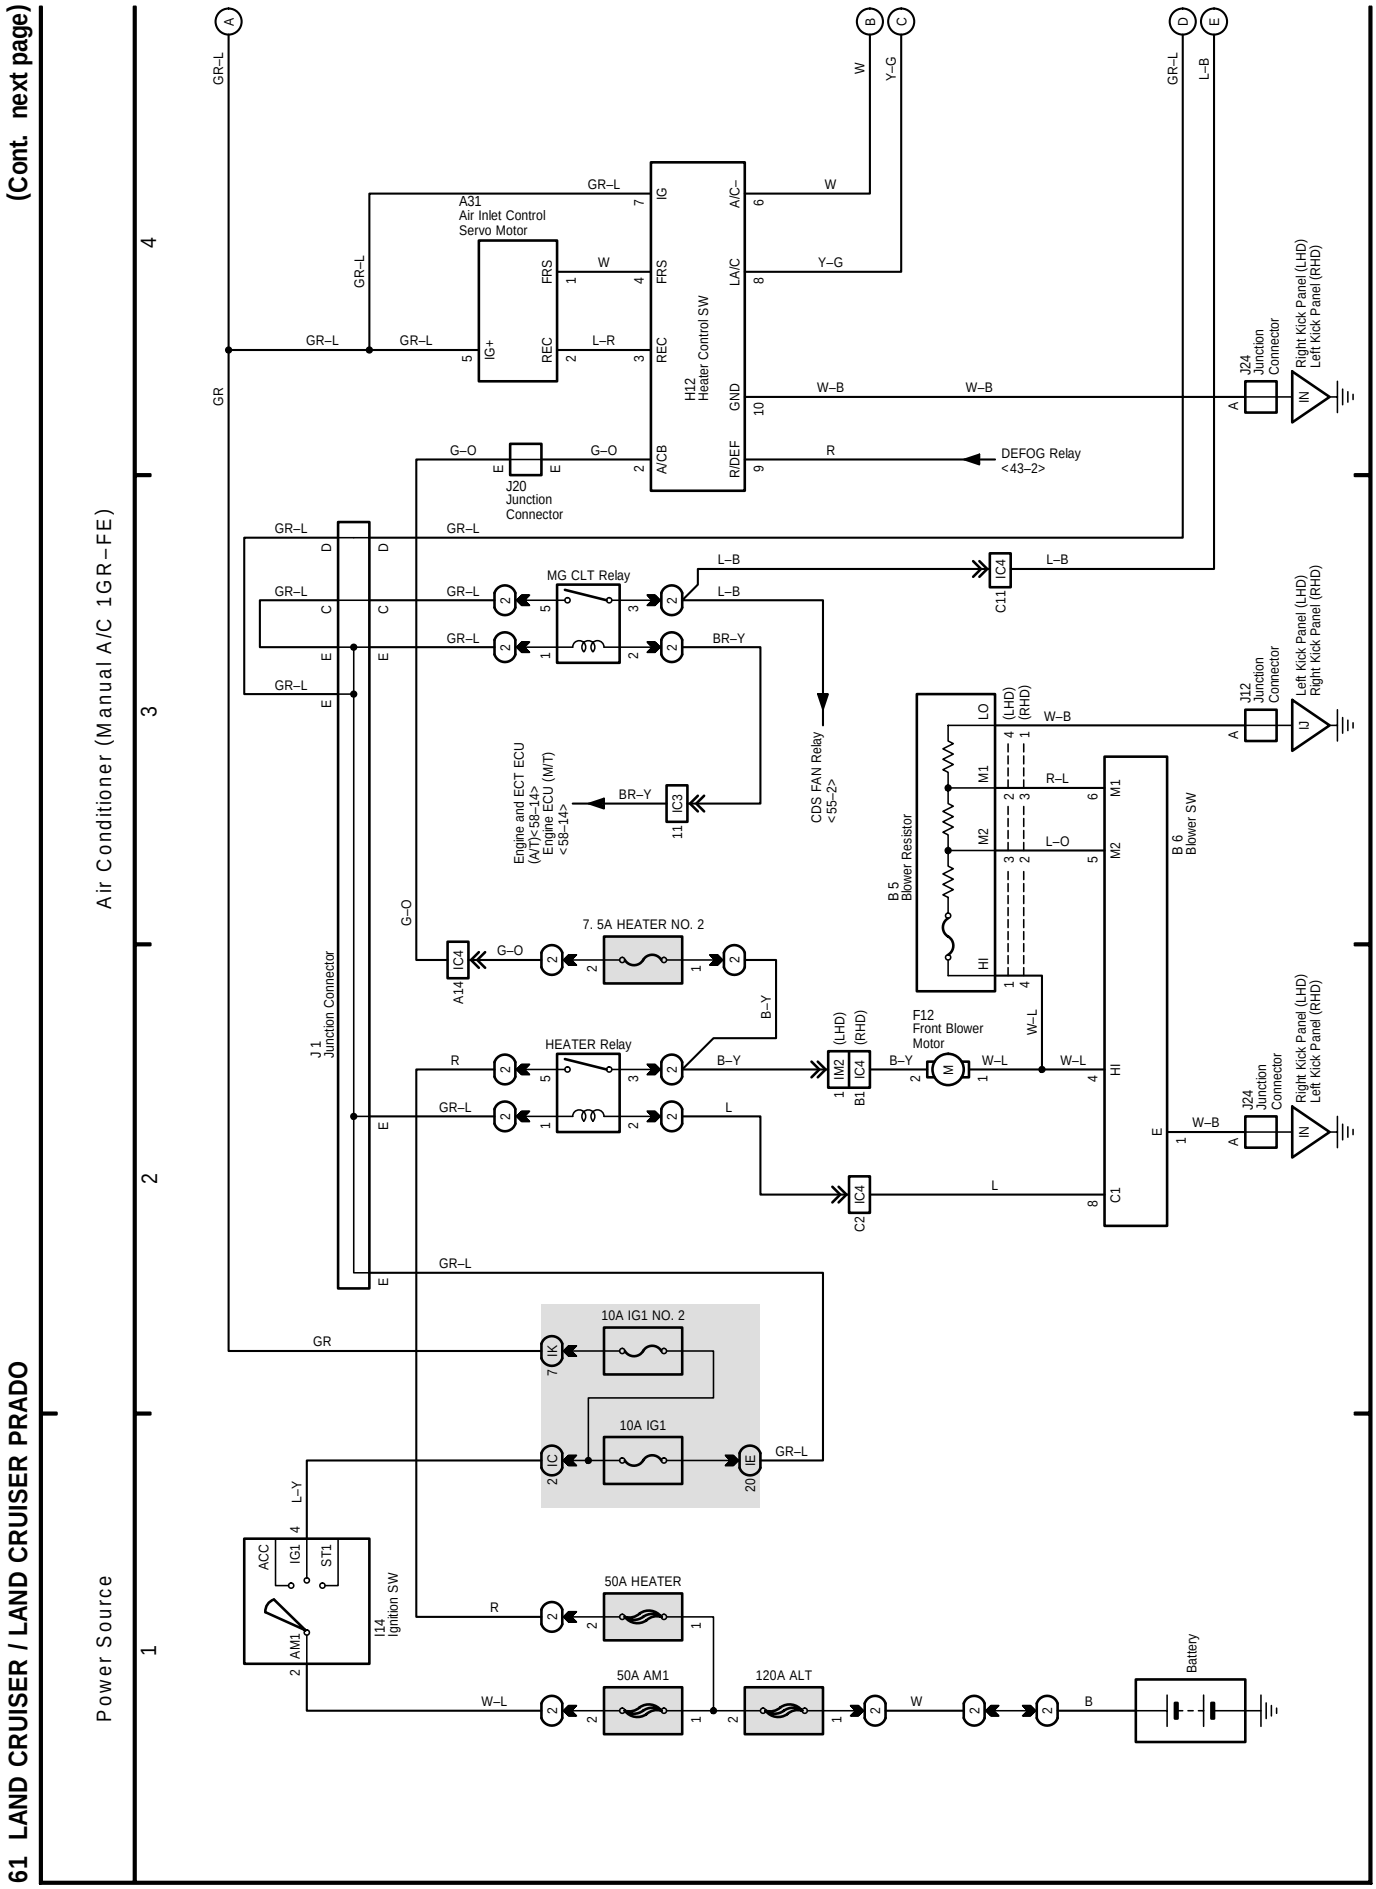

(Cont. next page)
61 LAND CRUISER / LAND CRUISER PRADO
Power Source
Air Conditioner (Manual A/C 1GR–FE)
A31
Air Inlet Control
Servo Motor
H12
Heater Control SW
J20
Junction
Connector
DEFOG Relay
<43–2>
MG CLT Relay
CDS FAN Relay
<55–2>
Engine and ECT ECU
(A/T)<58–14>
Engine ECU (M/T)
<58–14>
7. 5A HEATER NO. 2
HEATER Relay
J1
Junction Connector
B 5
Blower Resistor
B 6
Blower SW
F12
Front Blower
Motor
J12
Junction
Connector
Left Kick Panel (LHD)
Right Kick Panel (RHD)
J24
Junction
Connector
Right Kick Panel (LHD)
Left Kick Panel (RHD)
10A IG1 NO. 2
10A IG1
I14
Ignition SW
50A HEATER
50A AM1
120A ALT
Battery

61 LAND CRUISER / LAND CRUISER PRADO (Cont' d)

