
Connector Joining Wire Harness and Wire Harness

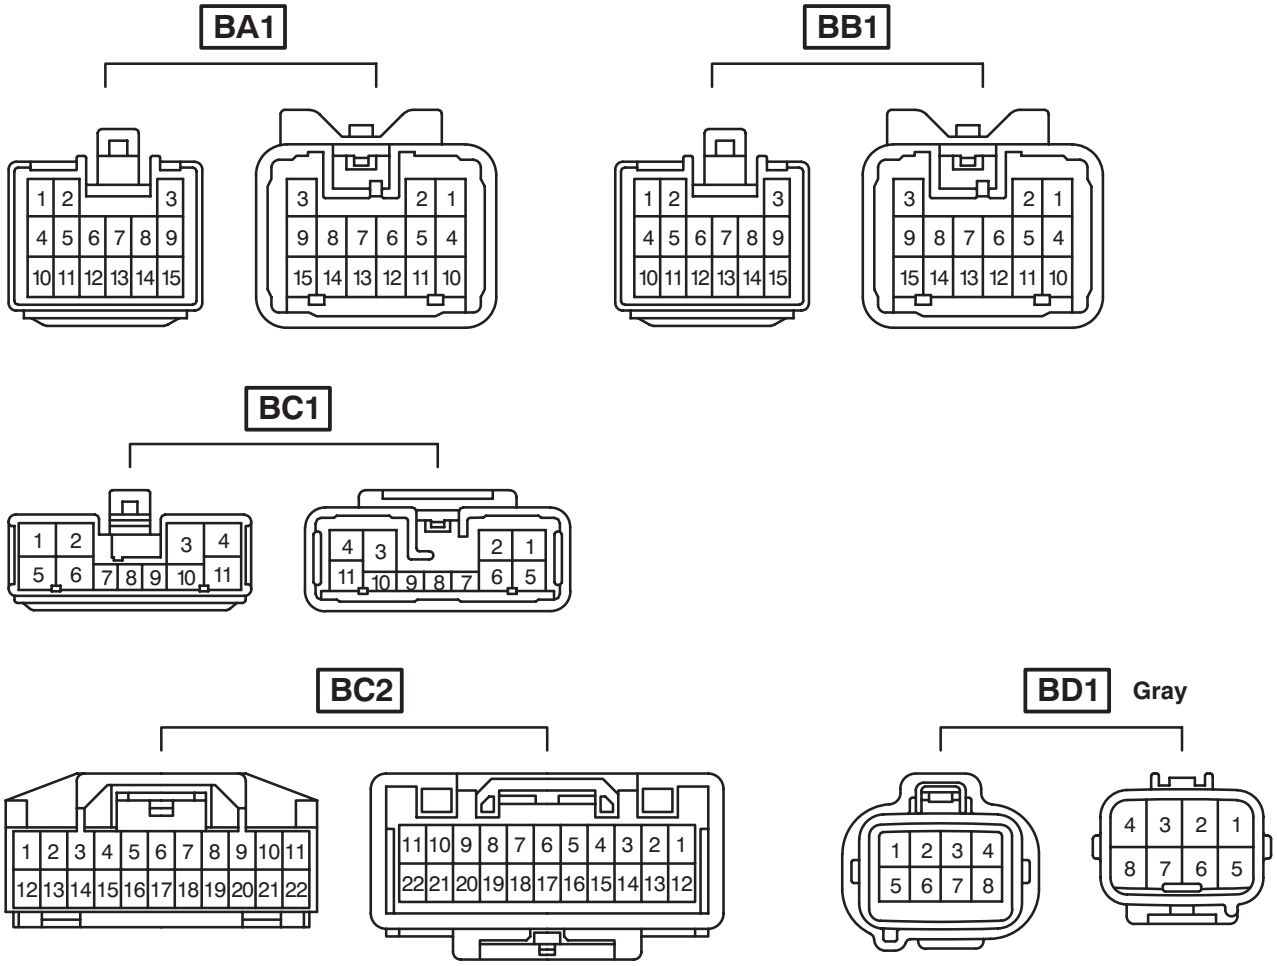

Code	Joining Wire Harness and Wire Harness (Connector Location)
BA1	Rear Door LH Wire and Instrument Panel Wire (Center Pillar LH)
BB1	Rear Door RH Wire and Instrument Panel Wire (Center Pillar RH)
BC1	Frame Wire and Floor No.2 Wire (Under the Left Side of Rear Seat Cushion)
BC2	
BD1	Frame Wire and Differential Wire (Left Side of the No.6 Cross Member)