
Position of Parts in Engine Compartment

[LHD : 2TR–FE]

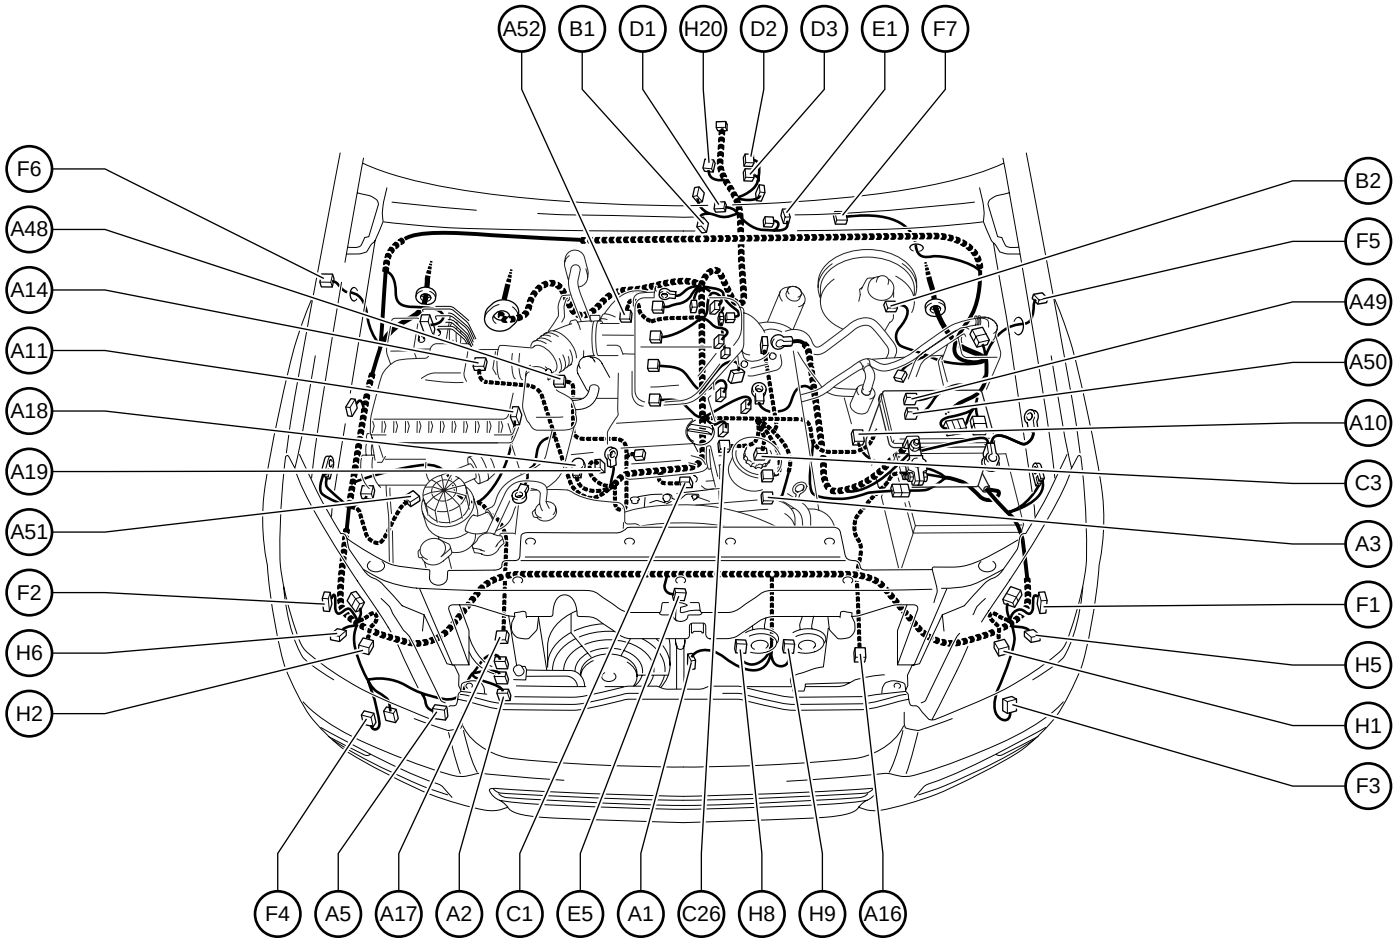

A 1 A/C Ambient Temp. Sensor
A 2 A/C Condenser Fan Motor
A 3 A/C Lock Sensor
A/C Magnetic Clutch
A 5 A/C Magnetic Valve
A10 ABS Speed Sensor Front LH
A11 ABS Speed Sensor Front RH
A14 Air Flow Meter
A16 Airbag Sensor Front LH
A17 Airbag Sensor Front RH
A18 Alternator
A19 Alternator
A48 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
A49 Air Injection Control Driver
A50 Air Injection Control Driver
A51 Air Pump
A52 Air Switching Valve

B 1 Back–Up Light SW
B 2 Brake Fluid Level Warning SW

C 1 Camshaft Position Sensor
C 3 Crankshaft Position Sensor
C26 Camshaft Timing Oil Control Valve

D 1 Detection SW (Transfer 4WD Position)
D 2 Detection SW (Transfer L4 Position)
D 3 Detection SW (Transfer Neutral Position)

E 1 ECT Solenoid
E 5 Engine Hood Courtesy SW

F 1 Front Clearance Light LH
Front Turn Signal Light LH
F 2 Front Clearance Light RH
Front Turn Signal Light RH
F 3 Front Fog Light LH
F 4 Front Fog Light RH
F 5 Front Side Turn Signal Light LH
F 6 Front Side Turn Signal Light RH
F 7 Front Wiper Motor

H 1 Headlight Beam Level Control Actuator LH
H 2 Headlight Beam Level Control Actuator RH
H 5 Headlight LH
H 6 Headlight RH
H 8 Horn (High)
H 9 Horn (Low)
H20 Heated Oxygen Sensor (Bank 1 Sensor 2)