
Position of Parts in Seat

[LHD : 8 Way Power Seat]

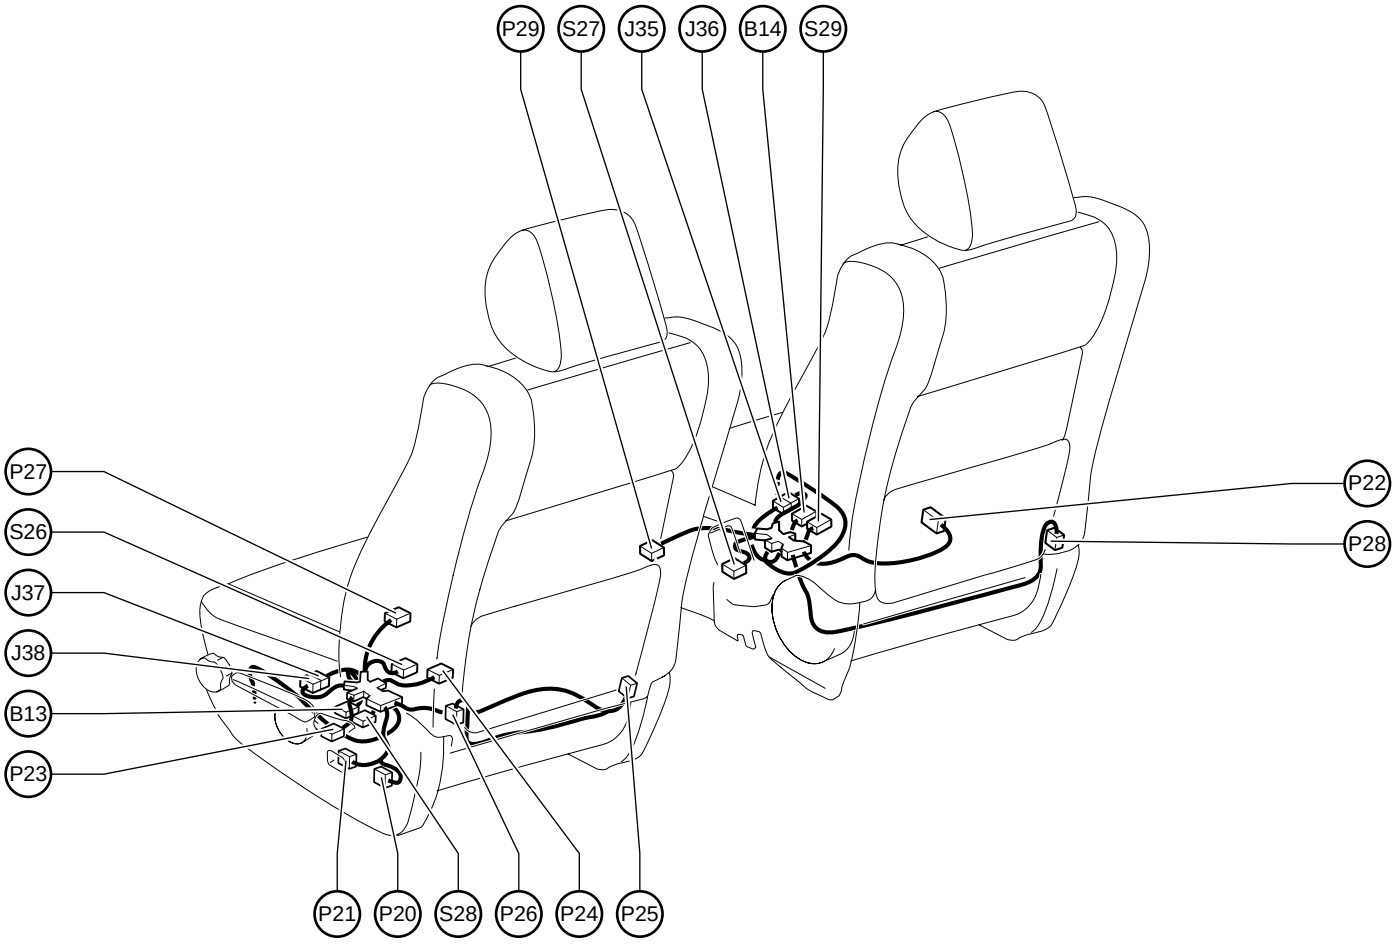

B13 Buckle SW LH
Seat Position Sensor
B14 Buckle SW RH
Occupant Detection Sensor

J 35 Junction Connector
J 36 Junction Connector
J 37 Junction Connector
J 38 Junction Connector

P20 Power Seat Control SW
(Driver's Seat Lumbar Support Control)
P21 Power Seat Control SW (Driver's Seat)
P22 Power Seat Control SW (Front Passenger's Seat)
P23 Power Seat Motor (Driver's Seat Front Vertical Control)
P24 Power Seat Motor (Driver's Seat Lifter Control)
P25 Power Seat Motor
(Driver's Seat Lumbar Support Control)
P26 Power Seat Motor (Driver's Seat Reclining Control)
P27 Power Seat Motor (Driver's Seat Slide Control)
P28 Power Seat Motor
(Front Passenger's Seat Reclining Control)
P29 Power Seat Motor
(Front Passenger's Seat Slide Control)

S26 Seat Heater (Driver's Seat)
S27 Seat Heater (Front Passenger's Seat)
S28 Side Airbag Squib LH
S29 Side Airbag Squib RH