
Position of Parts in Seat

[LHD : Except 8 Way Power Seat]

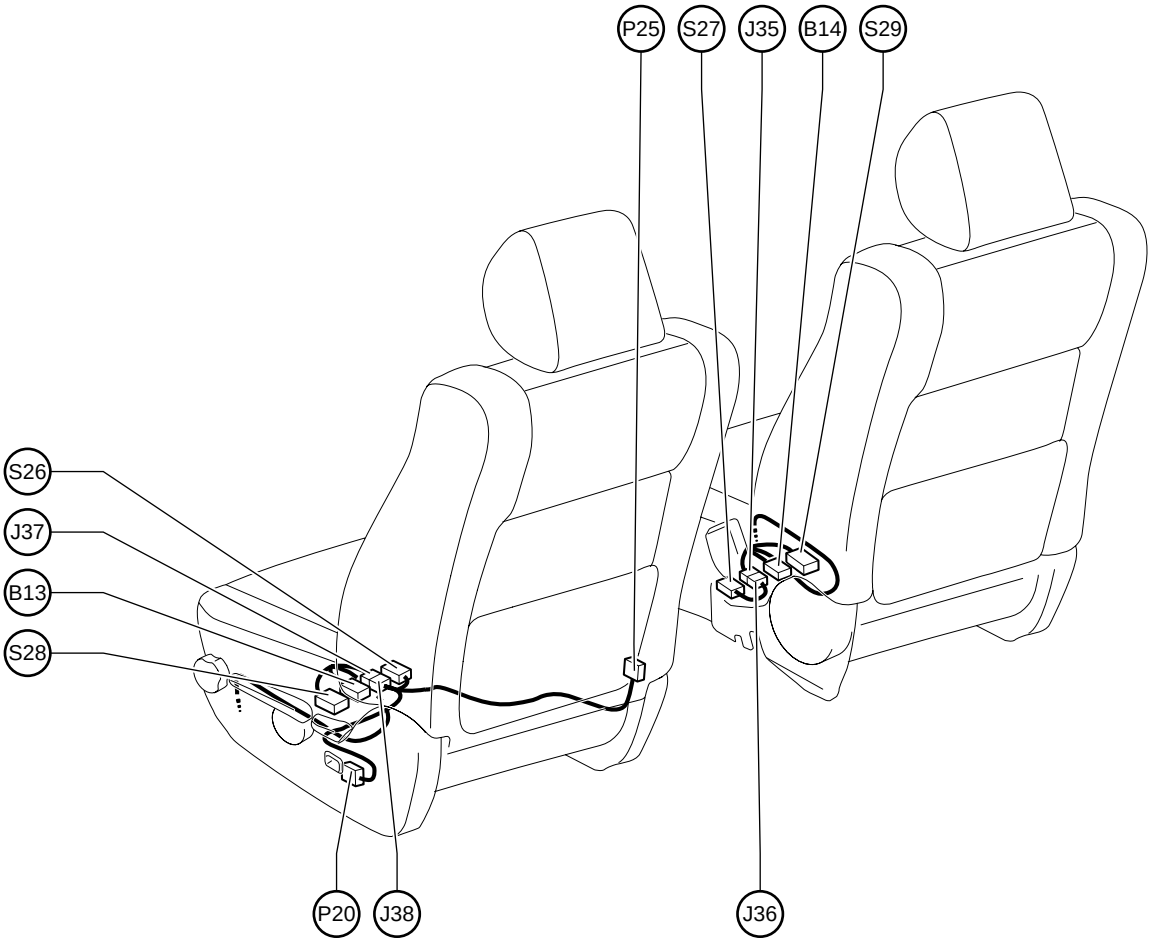

B13 Buckle SW LH
Seat Position Sensor
B14 Buckle SW RH
Occupant Detection Sensor

J 35 Junction Connector
J 36 Junction Connector
J 37 Junction Connector
J 38 Junction Connector

P20 Power Seat Control SW
(Driver's Seat Lumbar Support Control)
P25 Power Seat Motor
(Driver's Seat Lumbar Support Control)

S26 Seat Heater (Driver's Seat)
S27 Seat Heater (Front Passenger's Seat)
S28 Side Airbag Squib LH
S29 Side Airbag Squib RH