
Position of Parts in Engine Compartment

[RHD : 1GR–FE]

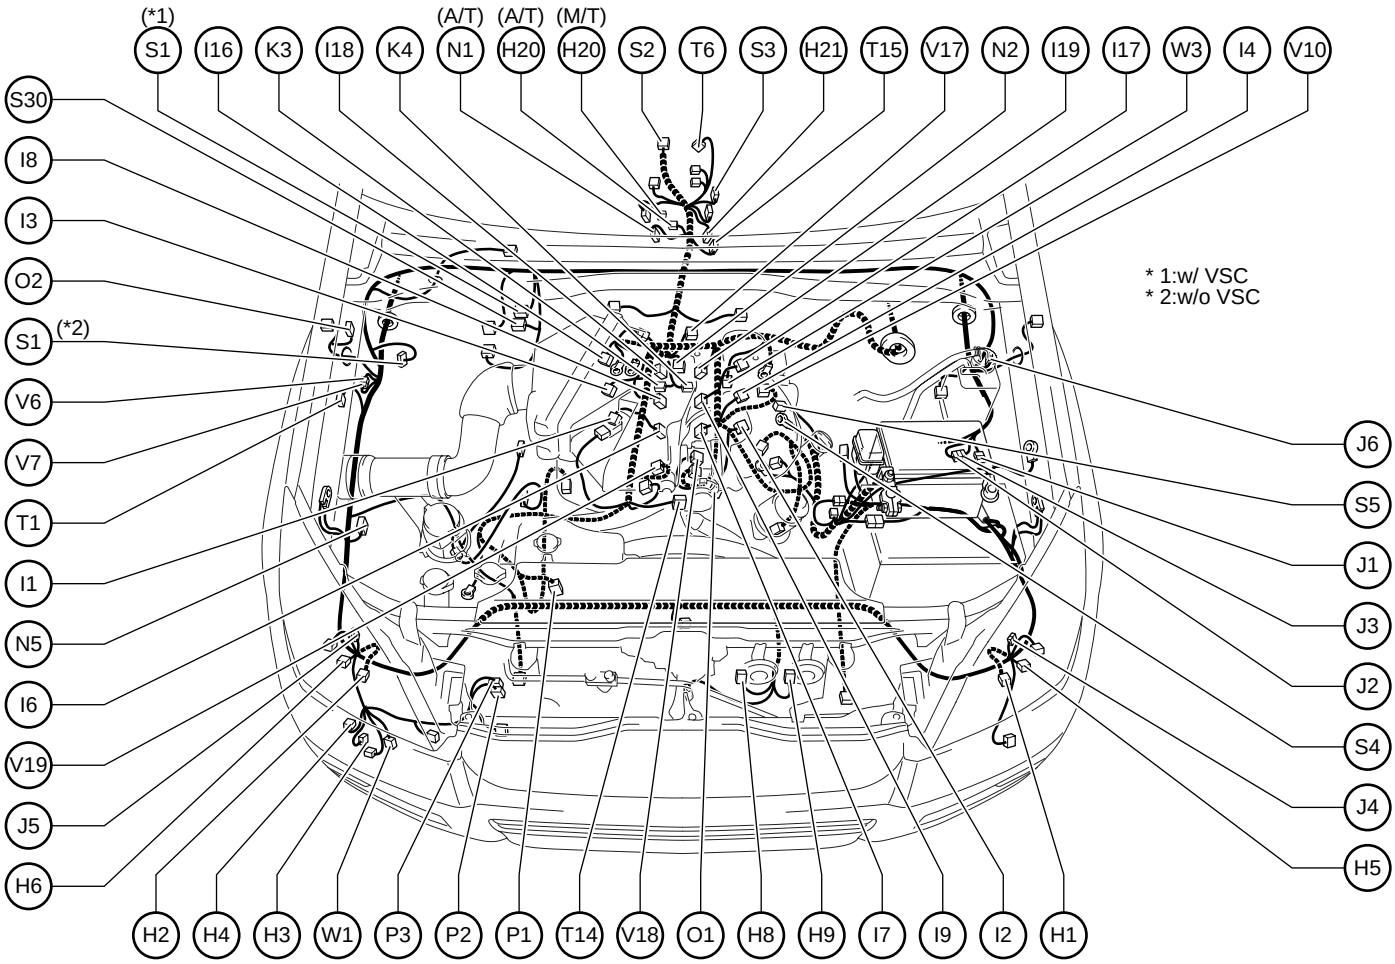

H 1 Headlight Beam Level Control Actuator LH
H 2 Headlight Beam Level Control Actuator RH
H 3 Headlight Cleaner Motor
H 4 Headlight Cleaner Relay
H 5 Headlight LH
H 6 Headlight RH
H 8 Horn (High)
H 9 Horn (Low)
H 20 Heated Oxygen Sensor (Bank 1 Sensor 2)
H 21 Heated Oxygen Sensor (Bank 2 Sensor 2)

I 1 Ignition Coil and Igniter No.1
I 2 Ignition Coil and Igniter No.2
I 3 Ignition Coil and Igniter No.3
I 4 Ignition Coil and Igniter No.4
I 6 Injector No.1
I 7 Injector No.2
I 8 Injector No.3
I 9 Injector No.4
I 16 Ignition Coil and Igniter No.5
I 17 Ignition Coil and Igniter No.6
I 18 Injector No.5
I 19 Injector No.6

J 1 Junction Connector
J 2 Junction Connector
J 3 Junction Connector
J 4 Junction Connector
J 5 Junction Connector
J 6 Junction Connector

K 3 Knock Sensor (Bank 1)
K 4 Knock Sensor (Bank 2)

N 1 Neutral Start SW
N 2 Noise Filter
N 5 Noise Filter (Condenser Fan)

O 1 Oil Pressure SW
O 2 Option Connector (Keyless Buzzer)

P 1 Power Steering Oil Pressure SW
P 2 Pressure SW
P 3 Pressure SW

S 1 Skid Control ECU with Actuator
S 2 Speed Sensor (Combination Meter)
S 3 Speed Sensor (ECT)
S 4 Starter
S 5 Starter
S 30 Skid Control ECU with Actuator

T 1 Theft Deterrent Horn
T 6 Transfer Actuator
T 14 Throttle Control Motor
Throttle Position Sensor
T 15 Turbine Speed Sensor

V 6 VSC Check Connector
V 7 VSC Check Connector
V 10 VSV (EVAP)
V 17 VSV (ACIS)
V 18 VVT Sensor LH
V 19 VVT Sensor RH

W 1 Washer Motor
W 3 Water Temp. Sensor