
Position of Parts in Engine Compartment

[RHD : 2TR–FE]

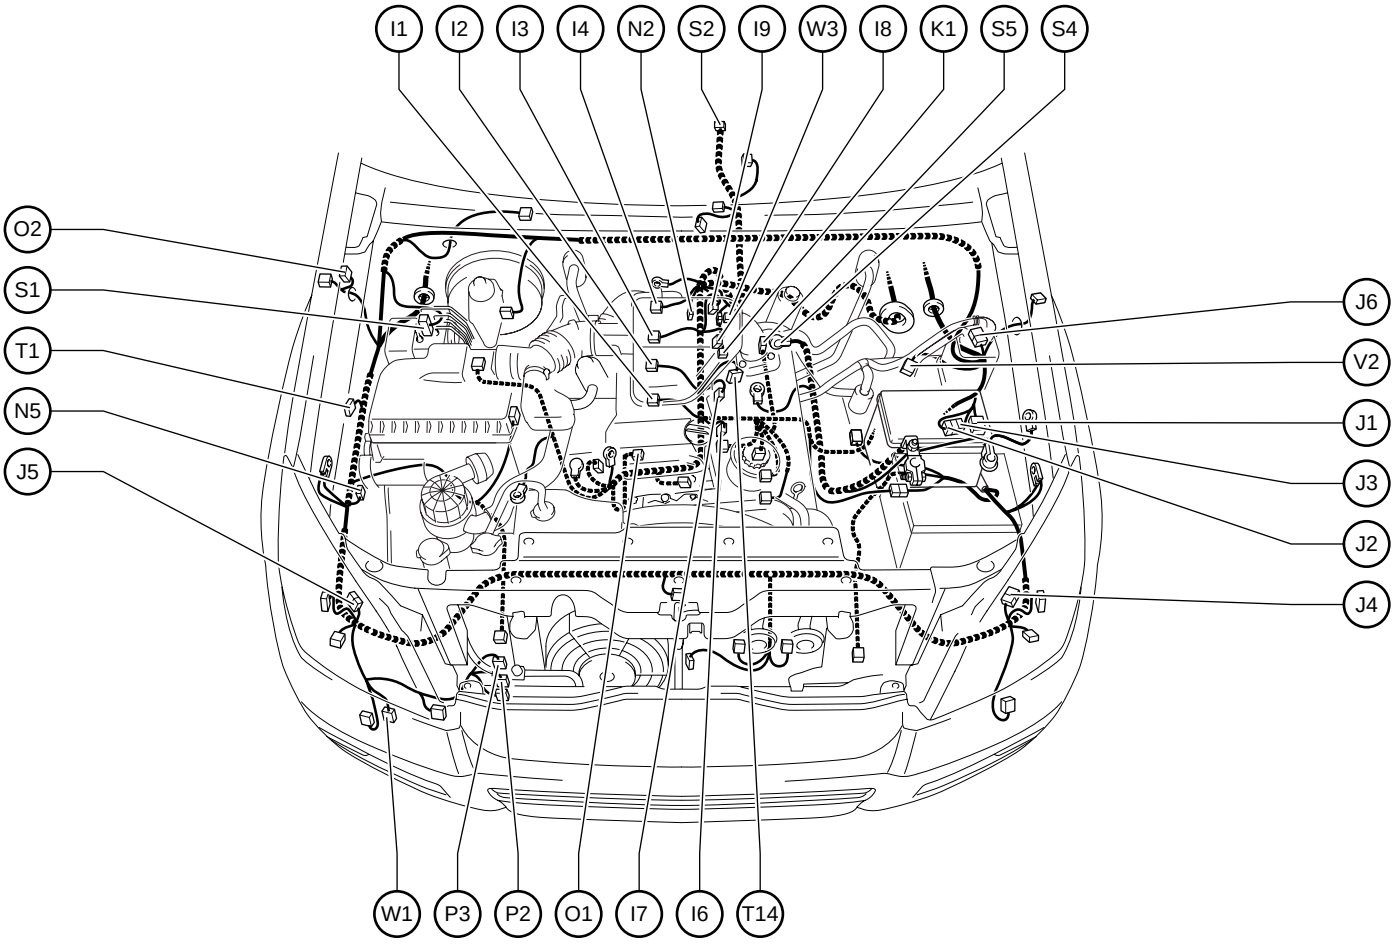

I 1 Ignition Coil and Igniter No.1
I 2 Ignition Coil and Igniter No.2
I 3 Ignition Coil and Igniter No.3
I 4 Ignition Coil and Igniter No.4
I 6 Injector No.1
I 7 Injector No.2
I 8 Injector No.3
I 9 Injector No.4

J 1 Junction Connector
J 2 Junction Connector
J 3 Junction Connector
J 4 Junction Connector
J 5 Junction Connector
J 6 Junction Connector

K 1 Knock Sensor (Bank 1)

N 2 Noise Filter
N 5 Noise Filter (Condenser Fan)

O 1 Oil Pressure SW
O 2 Option Connector (Keyless Buzzer)

P 2 Pressure SW
P 3 Pressure SW

S 1 Skid Control ECU with Actuator
S 2 Speed Sensor (Combination Meter)
S 4 Starter
S 5 Starter

T 1 Theft Deterrent Horn
T 14 Throttle Control Motor
Throttle Position Sensor

V 2 Variable Resistor

W 1 Washer Motor
W 3 Water Temp. Sensor