
Position of Parts in Engine Compartment

[RHD : 1KZ–TE]

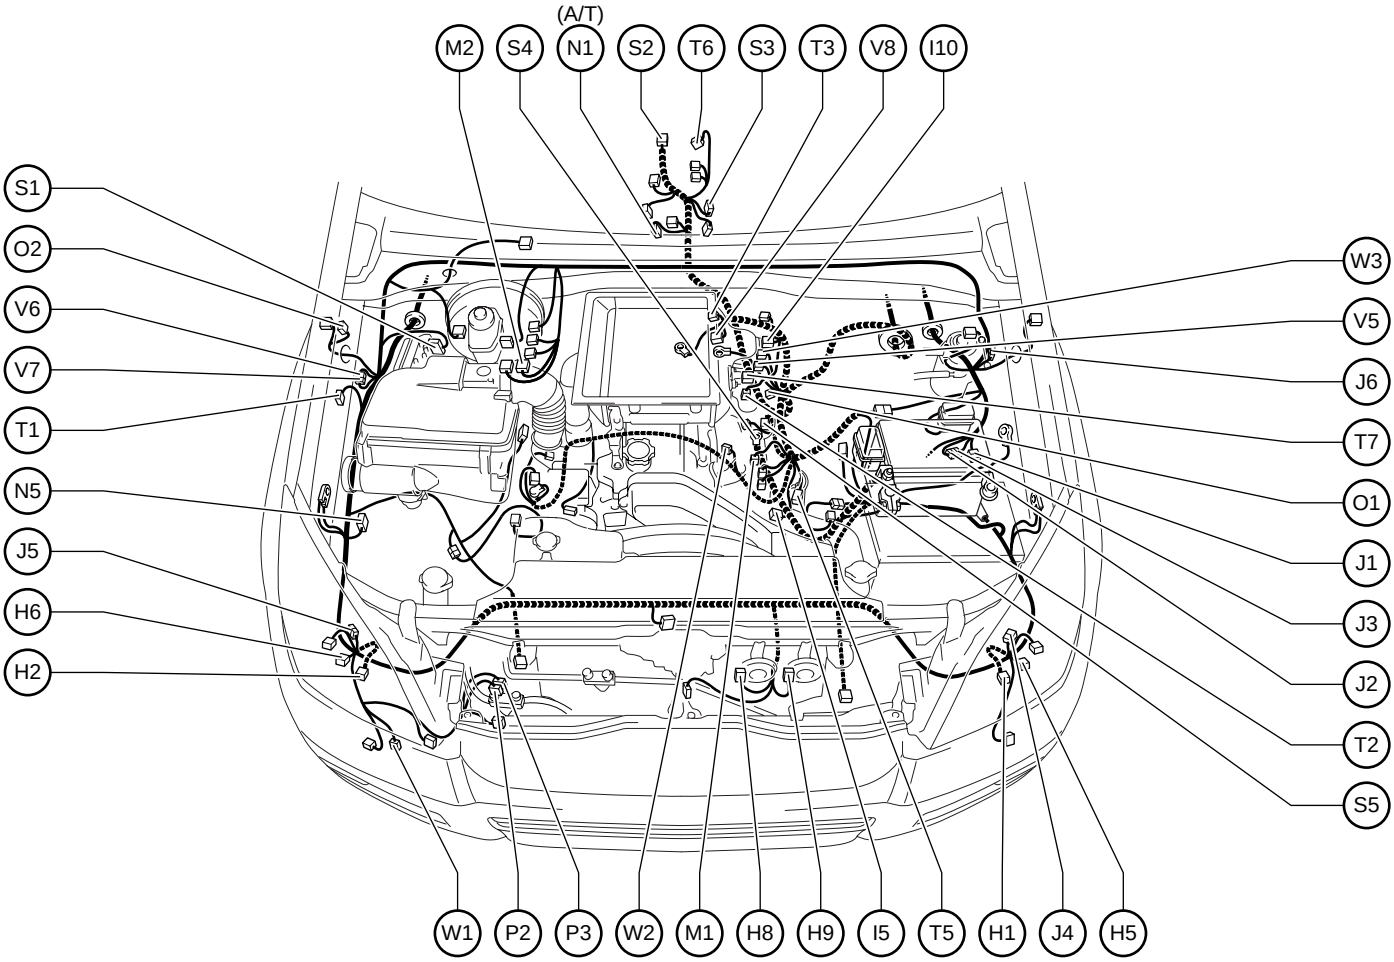

H 1 Headlight Beam Level Control Actuator LH
H 2 Headlight Beam Level Control Actuator RH
H 5 Headlight LH
H 6 Headlight RH
H 8 Horn (High)
H 9 Horn (Low)

I 5 Injection Pump
I 10 Intake Air Temp. Sensor

J 1 Junction Connector
J 2 Junction Connector
J 3 Junction Connector
J 4 Junction Connector
J 5 Junction Connector
J 6 Junction Connector

M 1 Magnetic Spill Valve
M 2 Master Cylinder Pressure Sensor

N 1 Neutral Start SW
N 5 Noise Filter (Condenser Fan)

O 1 Oil Pressure SW
O 2 Option Connector (Keyless Buzzer)

P 2 Pressure SW
P 3 Pressure SW

S 1 Skid Control ECU with Actuator
S 2 Speed Sensor (Combination Meter)
S 3 Speed Sensor (ECT)
S 4 Starter
S 5 Starter

T 1 Theft Deterrent Horn
T 2 Throttle Control Motor
T 3 Throttle Open SW
T 5 Timing Control Valve
T 6 Transfer Actuator
T 7 Turbo Pressure Sensor

V 5 VRV (EGR)
V 6 VSC Check Connector
V 7 VSC Check Connector
V 8 VSV (EGR Cut)

W 1 Washer Motor
W 2 Water Temp. Sender
W 3 Water Temp. Sensor