
Position of Parts in Instrument Panel

[RHD]

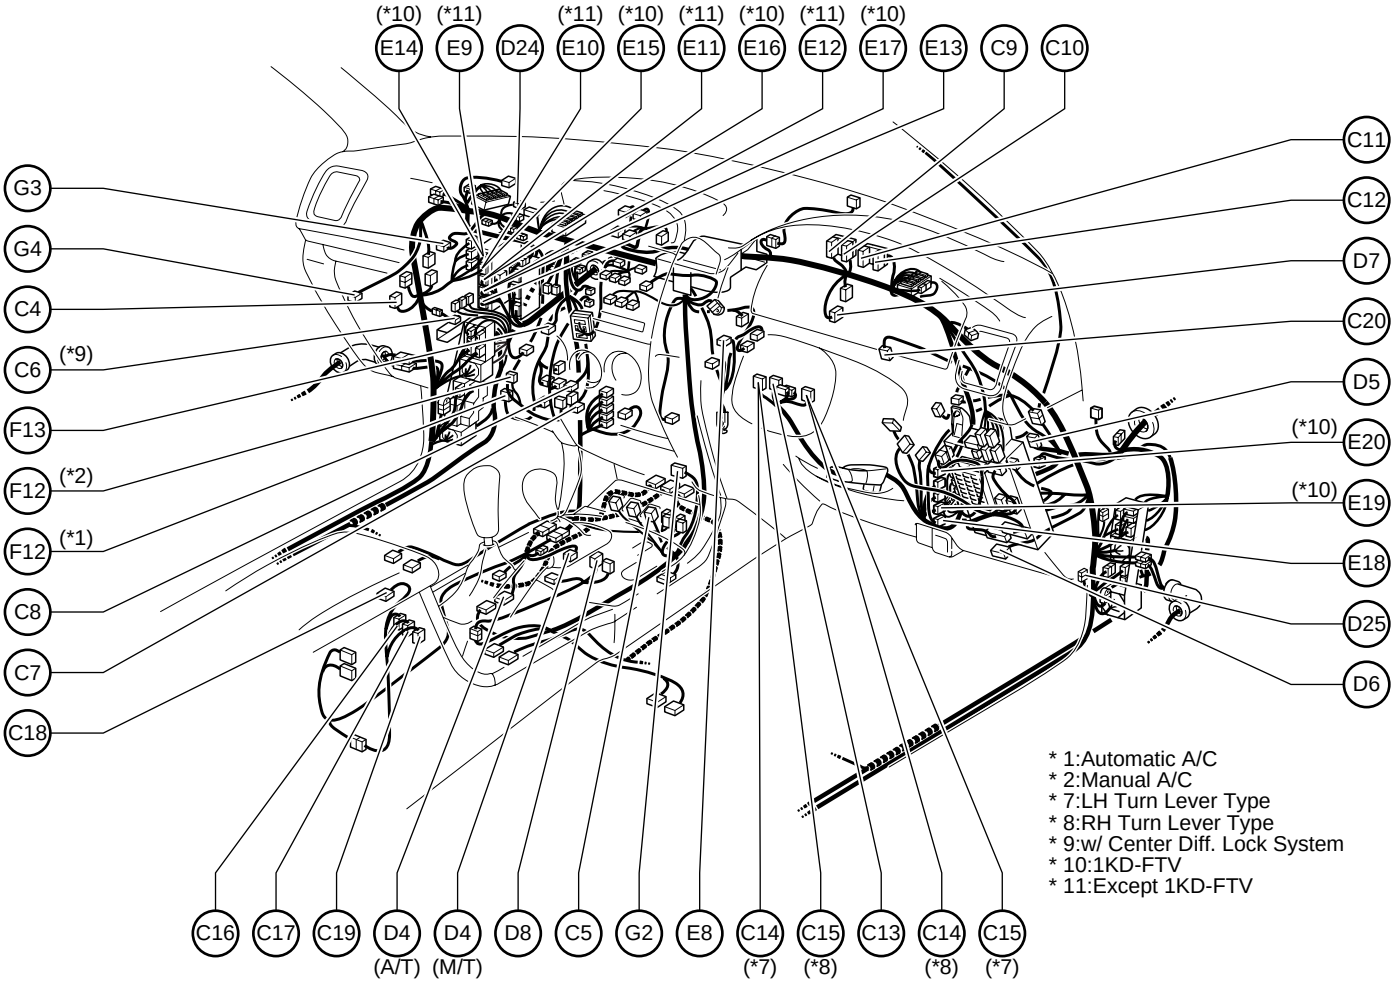

C 4 CD Automatic Changer
C 5 Center Diff. Lock Control SW
C 6 Center Diff. Lock ECU
C 7 Cigarette Lighter
C 8 Cigarette Lighter Illumination
C 9 Combination Meter
C10 Combination Meter
C11 Combination Meter
C12 Combination Meter
C13 Combination SW
C14 Combination SW
C15 Combination SW
C16 Cool Box Amplifier
C17 Cool Box Motor
C18 Cool Box SW
C19 Cool Box Thermistor
C20 Cruise Control Clutch SW

D 4 Deceleration Sensor
D 5 Diode (Front Fog Light)
D 6 DLC3
D 7 Double Door Lock Control Relay
D 8 Downhill Assist Control SW
D24 Diode (Back−Up Light)
D25 Diode (Luggage Compartment Light)

E 8 ECT Pattern Select SW
E 9 Engine and ECT ECU (A/T)
Engine ECU (M/T)
E10 Engine and ECT ECU (A/T)
Engine ECU (M/T)
E11 Engine and ECT ECU (A/T)
Engine ECU (M/T)
E12 Engine and ECT ECU (A/T)
Engine ECU (M/T)
E13 Engine and ECT ECU (A/T)
Engine ECU (M/T)
E14 Engine ECU
E15 Engine ECU
E16 Engine ECU
E17 Engine ECU
E18 ECT ECU
E19 ECT ECU
E20 ECT ECU

F12 Front Blower Motor
F13 Front Passenger's Seat Belt Warning Light

G 2 Gateway ECU
G 3 Glove Box Light
G 4 Glove Box Light SW