
## Position of Parts in Instrument Panel

## [RHD]

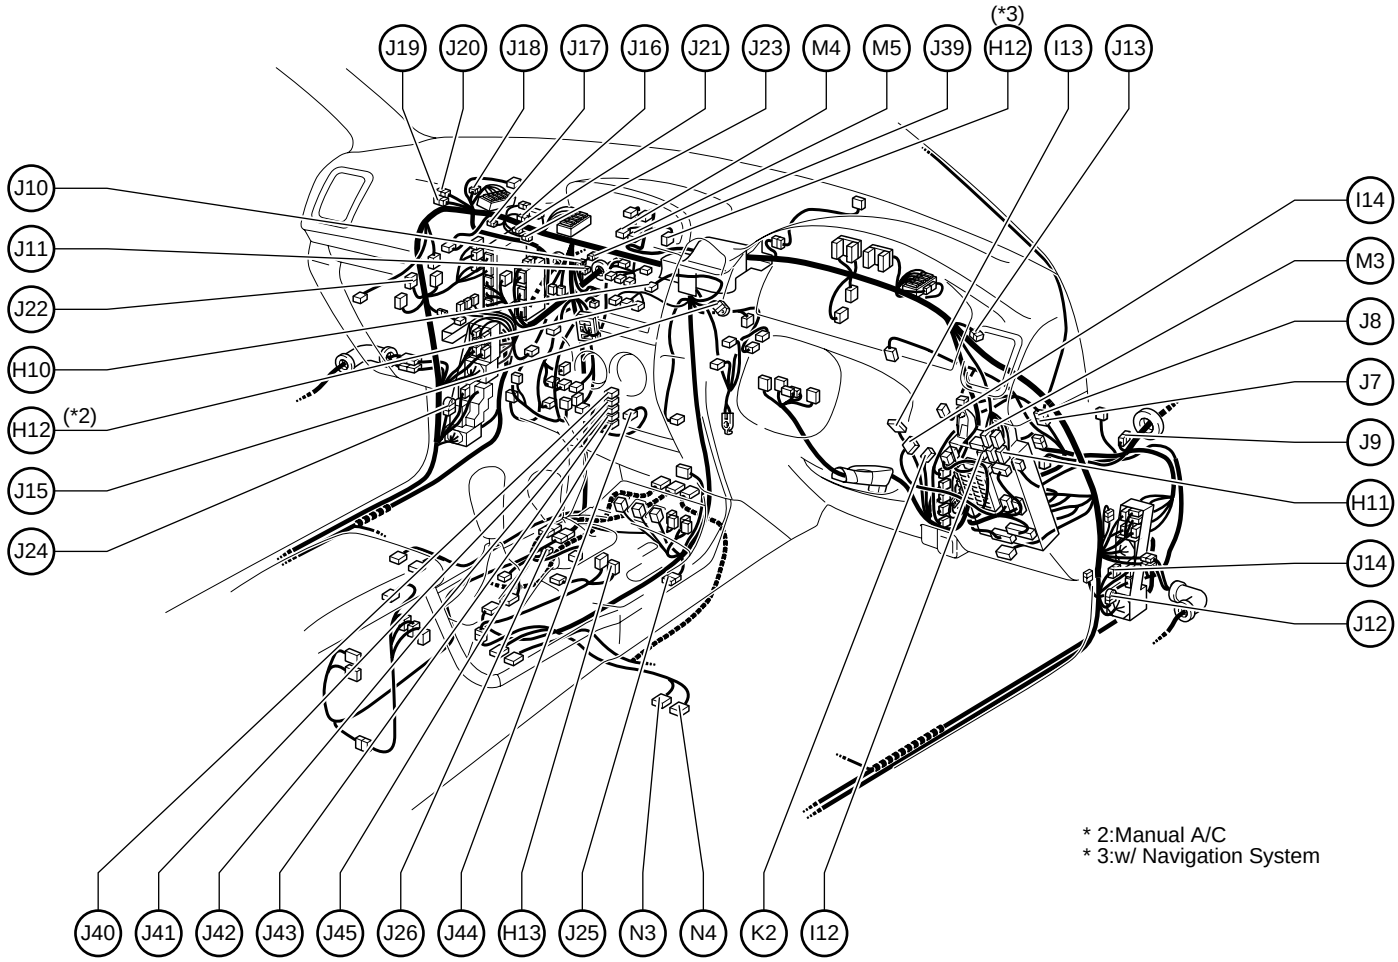


H10 Hazard SW
H11 Headlight Beam Level Control SW
H12 Heater Control SW
H13 Height Control and Suspension SW

I 12 Idle−Up SW
I 13 Ignition Key Cylinder Light
Transponder Key Amplifier
I 14 Ignition SW

J 7 Junction Connector
J 8 Junction Connector
J 9 Junction Connector
J 10 Junction Connector
J 11 Junction Connector
J 12 Junction Connector
J 13 Junction Connector
J 14 Junction Connector
J 15 Junction Connector
J 16 Junction Connector
J 17 Junction Connector
J 18 Junction Connector
J 19 Junction Connector
J 20 Junction Connector
J 21 Junction Connector
J 22 Junction Connector
J 23 Junction Connector
J 24 Junction Connector
J 25 Junction Connector
J 26 Junction Connector
J 39 Junction Connector
J 40 Junction Connector
J 41 Junction Connector
J 42 Junction Connector
J 43 Junction Connector
J 44 Junction Connector
J 45 Junction Connector

K 2 Key Interlock Solenoid
Unlock Warning SW

M 3 Mirror Heater SW
M 4 Multi−Display
M 5 Multi−Display

N 3 Navigation ECU
N 4 Navigation ECU