
## Position of Parts in Instrument Panel

## [RHD]

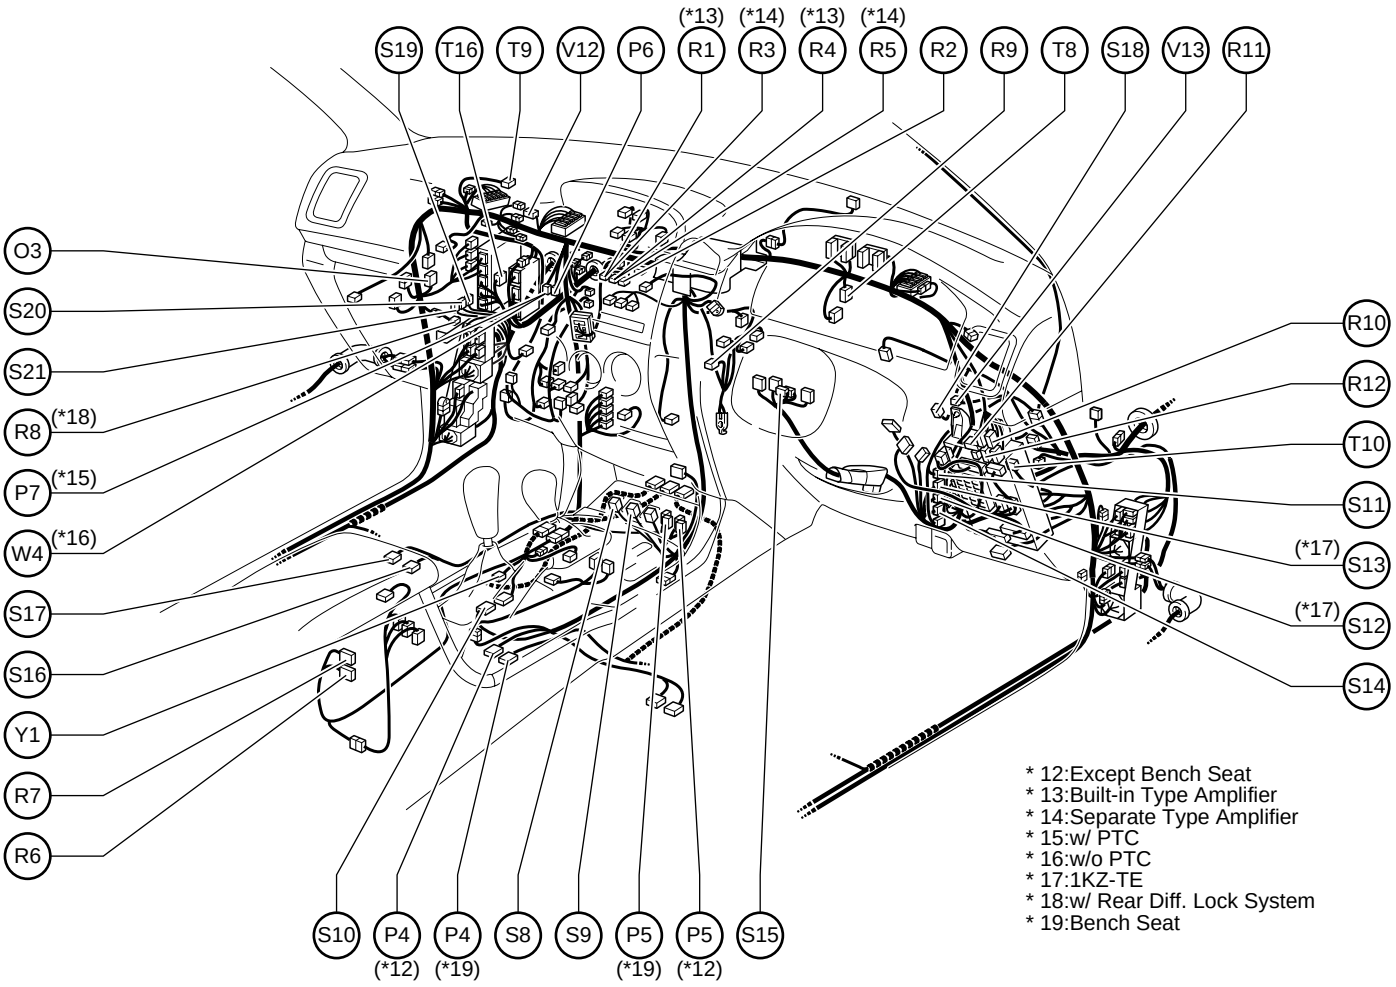


O 3 Option Connector (Door Control Receiver)

P 4 Parking Brake SW
P 5 Power Outlet (Front)
P 6 PTC Heater
P 7 PTC Heater

R 1 Radio and Player
R 2 Radio and Player
R 3 Radio and Player
R 4 Radio and Player
R 5 Radio and Player
R 6 Rear Blower SW
R 7 Rear Cooler Control SW
R 8 Rear Diff. Lock Control ECU
R 9 Rear Diff. Lock SW
R10 Rear Fog Light SW
R11 Remote Control Mirror SW
R12 Rheostat

S 8 Seat Heater SW Front LH
S 9 Seat Heater SW Front RH
S10 Shift Lock Control ECU
S11 Skid Control ECU
S12 Skid Control ECU
S13 Skid Control ECU
S14 Skid Control ECU
S15 Steering Sensor
S16 Stereo Component Amplifier
S17 Stereo Component Amplifier
S18 Stop Light SW
S19 Suspension Control ECU
S20 Suspension Control ECU
S21 Suspension Control ECU

T 8 Theft Deterrent ECU
T 9 Transponder Key Computer
T10 Turn Signal Flasher
T16 Turbo Motor Driver

V12 Viscous Heater Amplifier
V13 VSC Warning Buzzer

W 4 Water Temp. Sensor (A/C)

Y 1 Yaw Rate Sensor