
Connector Joining Wire Harness and Wire Harness

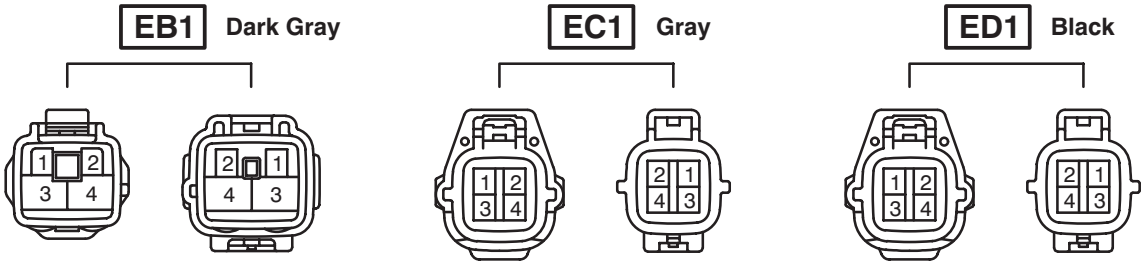

Code	Joining Wire Harness and Wire Harness (Connector Location)
EB1	Engine Room Main Wire and Engine Wire (Rear Side of the Engine Room R/B)
EC1	Sensor Wire RH and Engine Room Main Wire (Near the Air Cleaner)
ED1	Sensor Wire LH and Engine Room Main Wire (Near the Engine Room R/B)