
Connector Joining Wire Harness and Wire Harness

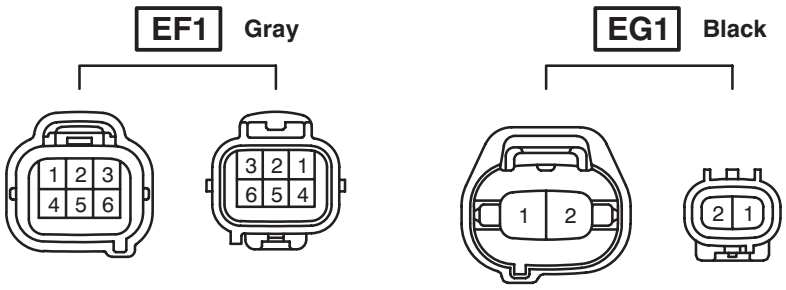

Code	Joining Wire Harness and Wire Harness (Connector Location)
EF1	Engine Wire and Engine Room Main Wire (Near the Engine Room R/B)
EG1	Engine Wire and Sensor Wire (Cylinder Head LH)