
## Connector Joining Wire Harness and Wire Harness

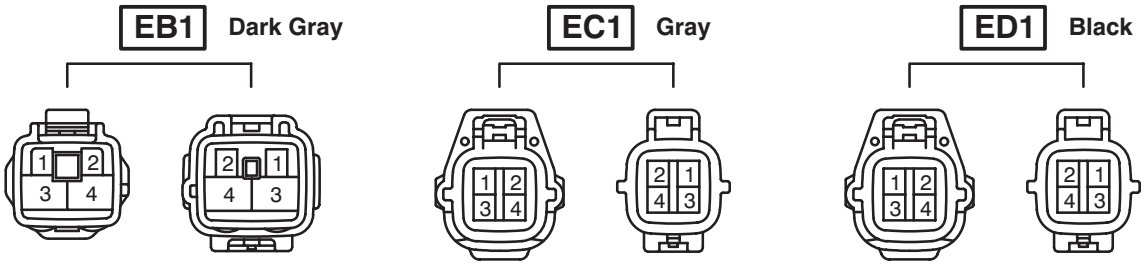


| Code | Joining Wire Harness and Wire Harness (Connector Location) |
|---|---|
| EB1 | Engine Room Main Wire and Engine Wire (Rear Side of the Engine Room R/B) |
| EC1 | Sensor Wire RH and Engine Room Main Wire (Near the Air Cleaner) |
| ED1 | Sensor Wire LH and Engine Room Main Wire (Near the Engine Room R/B) |