



(Cont. next page)
2 LAND CRUISER / LAND CRUISER PRADO
Power Source
Multiplex Communication System (RHD)
B 7(A), B 8(B), B 9(C)
Body ECU
BECU
BDR1
ACC
J33 Junction Connector
7. 5A ACC
W–R
W–G
G–W
R–L
L–Y
B–R
R–B
L–B
W–L
P
R
W
B
HEAD Relay
25A DR/LCK
20A D FR P/W
10A DOME
10A ECU–B
10A ECU–B NO. 2
Short Pin
Battery
30A AM2
50A J/B
50A AM1
140A ALT
7. 5A GAUGE
I14 Ignition SW
ACC
IG1
ST1
IG2
ST2
AM1
AM2
FL MAIN 3. 0W
* 1 : Except Europe
* 2 : 2TR–FE
* 3 : Except 2TR–FE
* 4 : Europe


(Cont. next page)

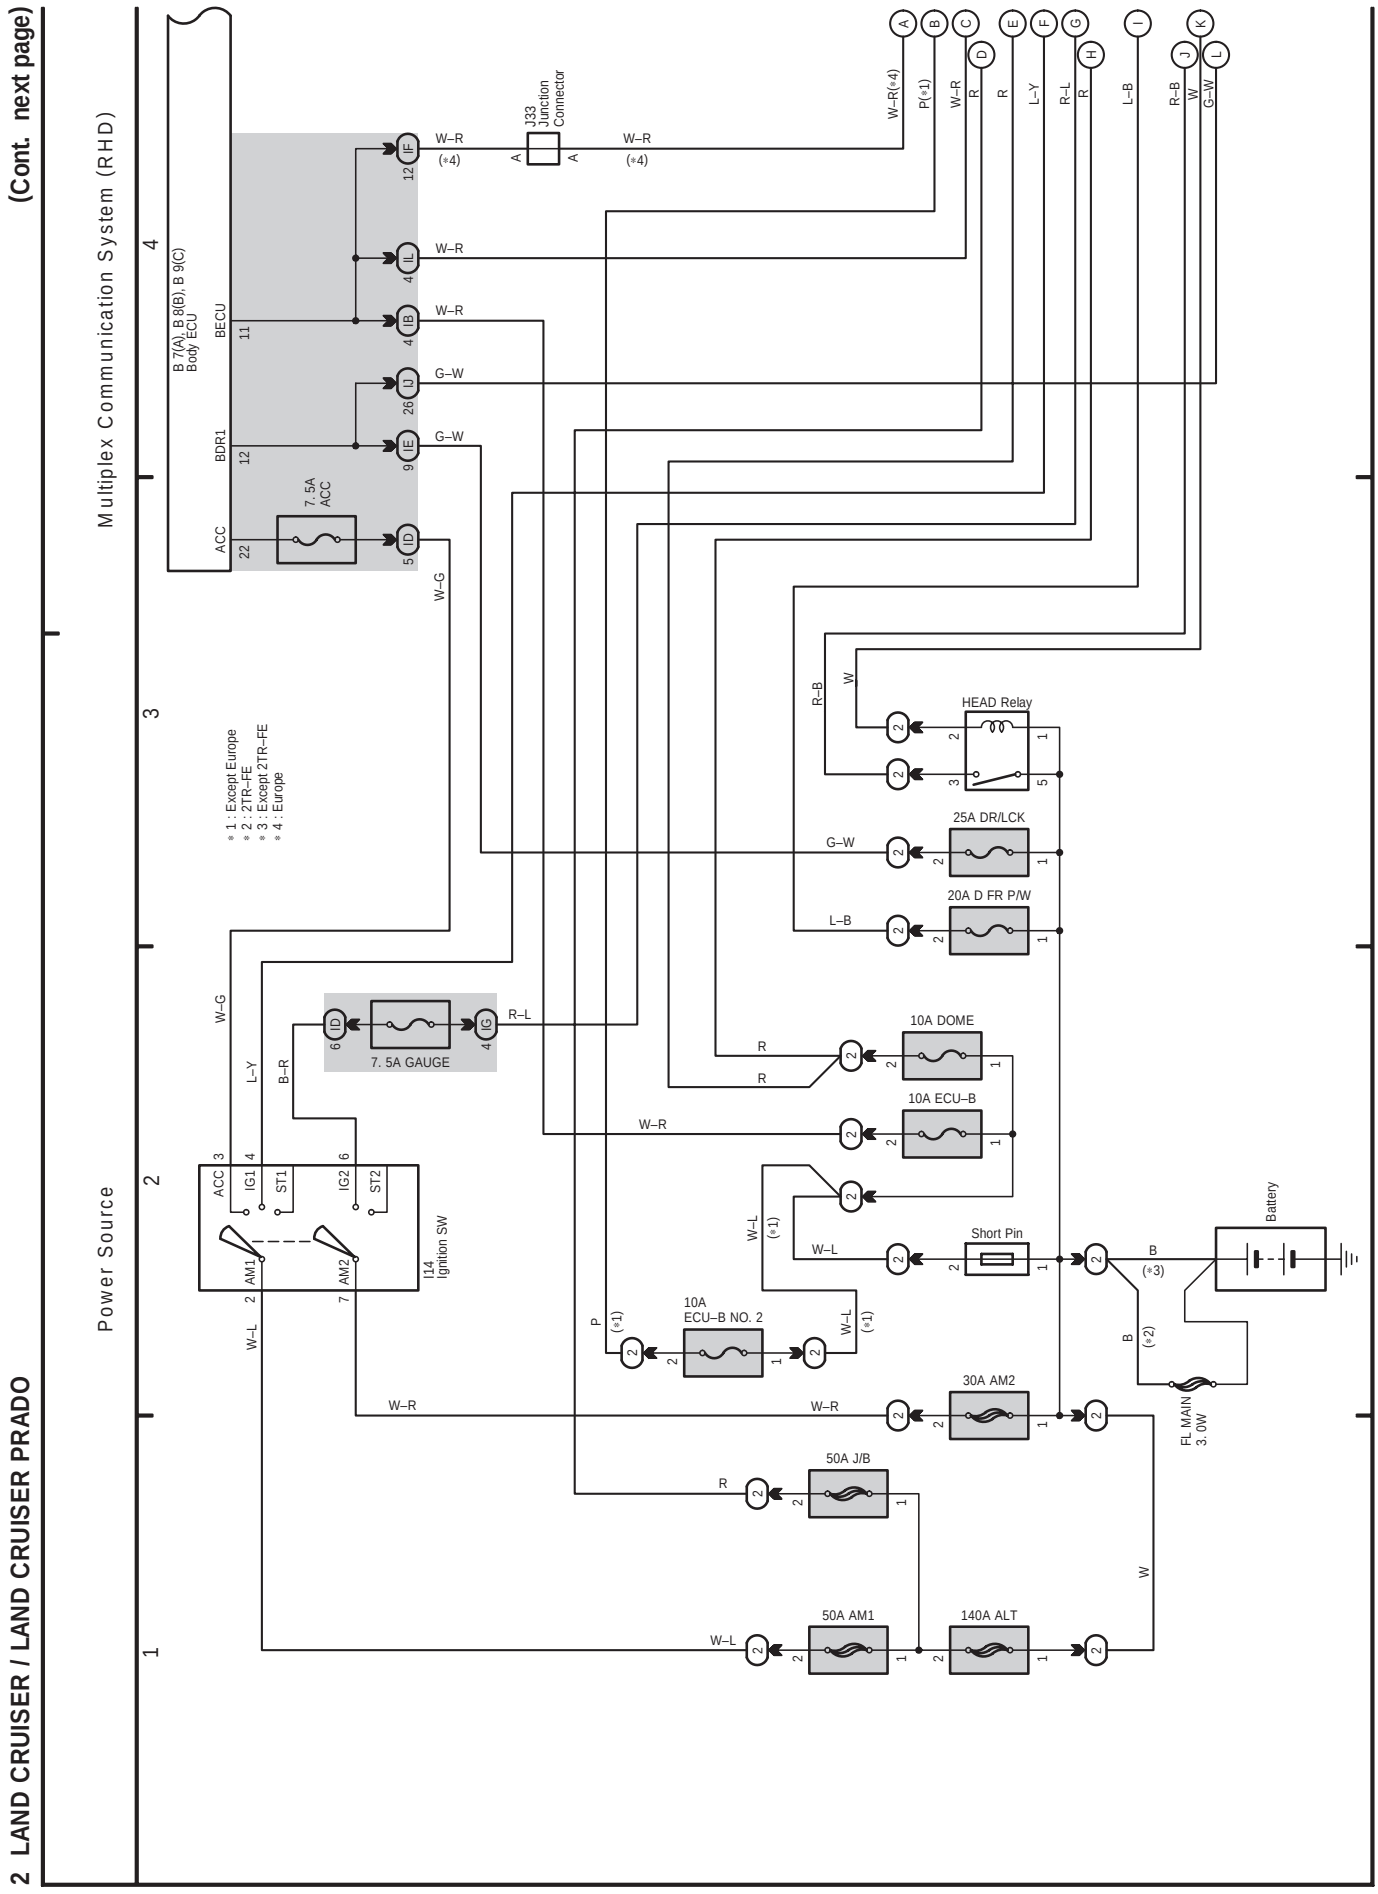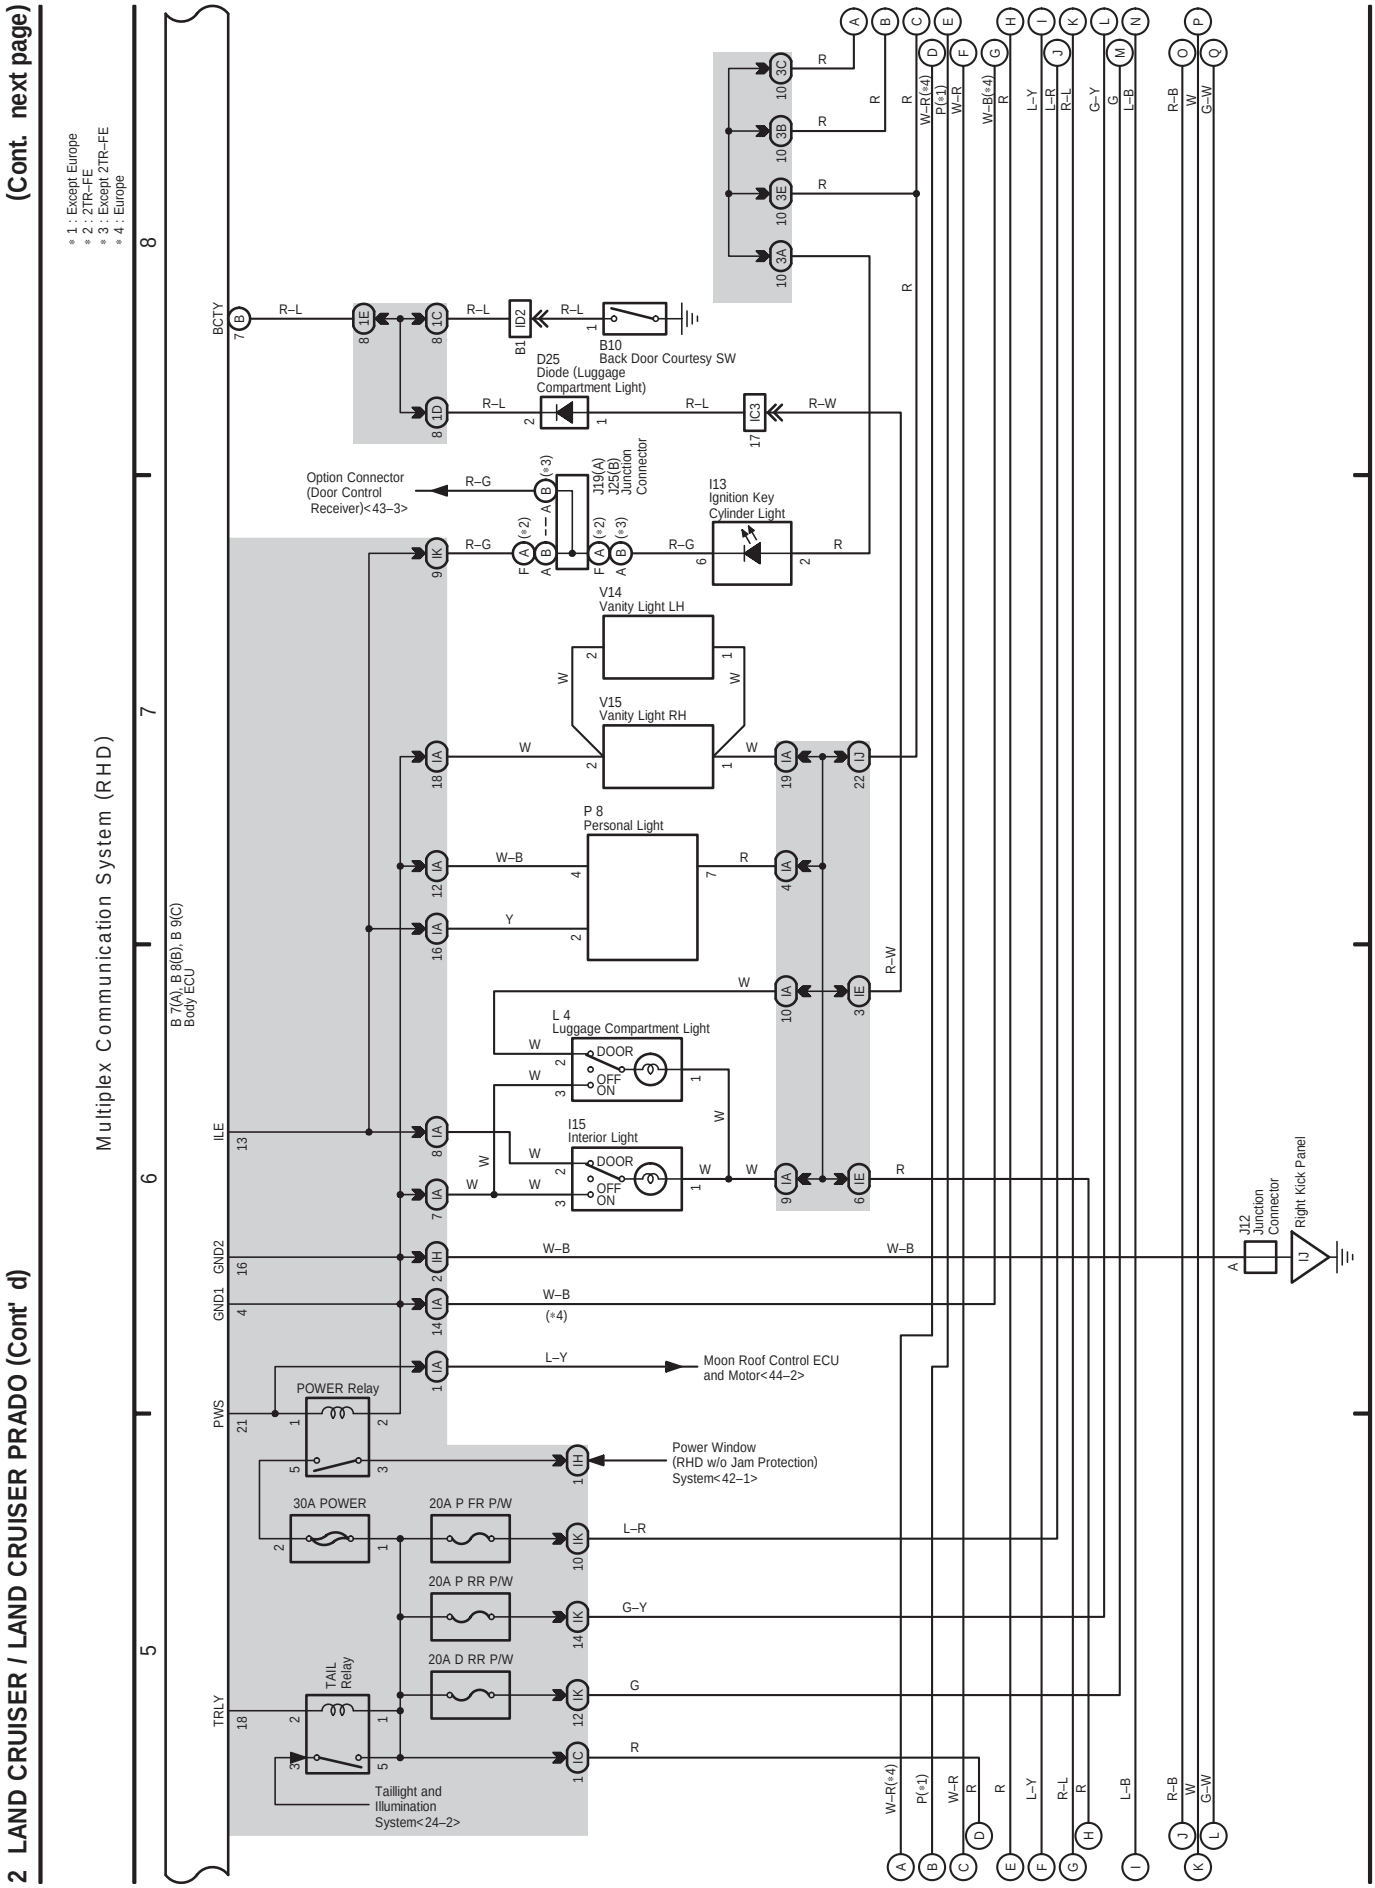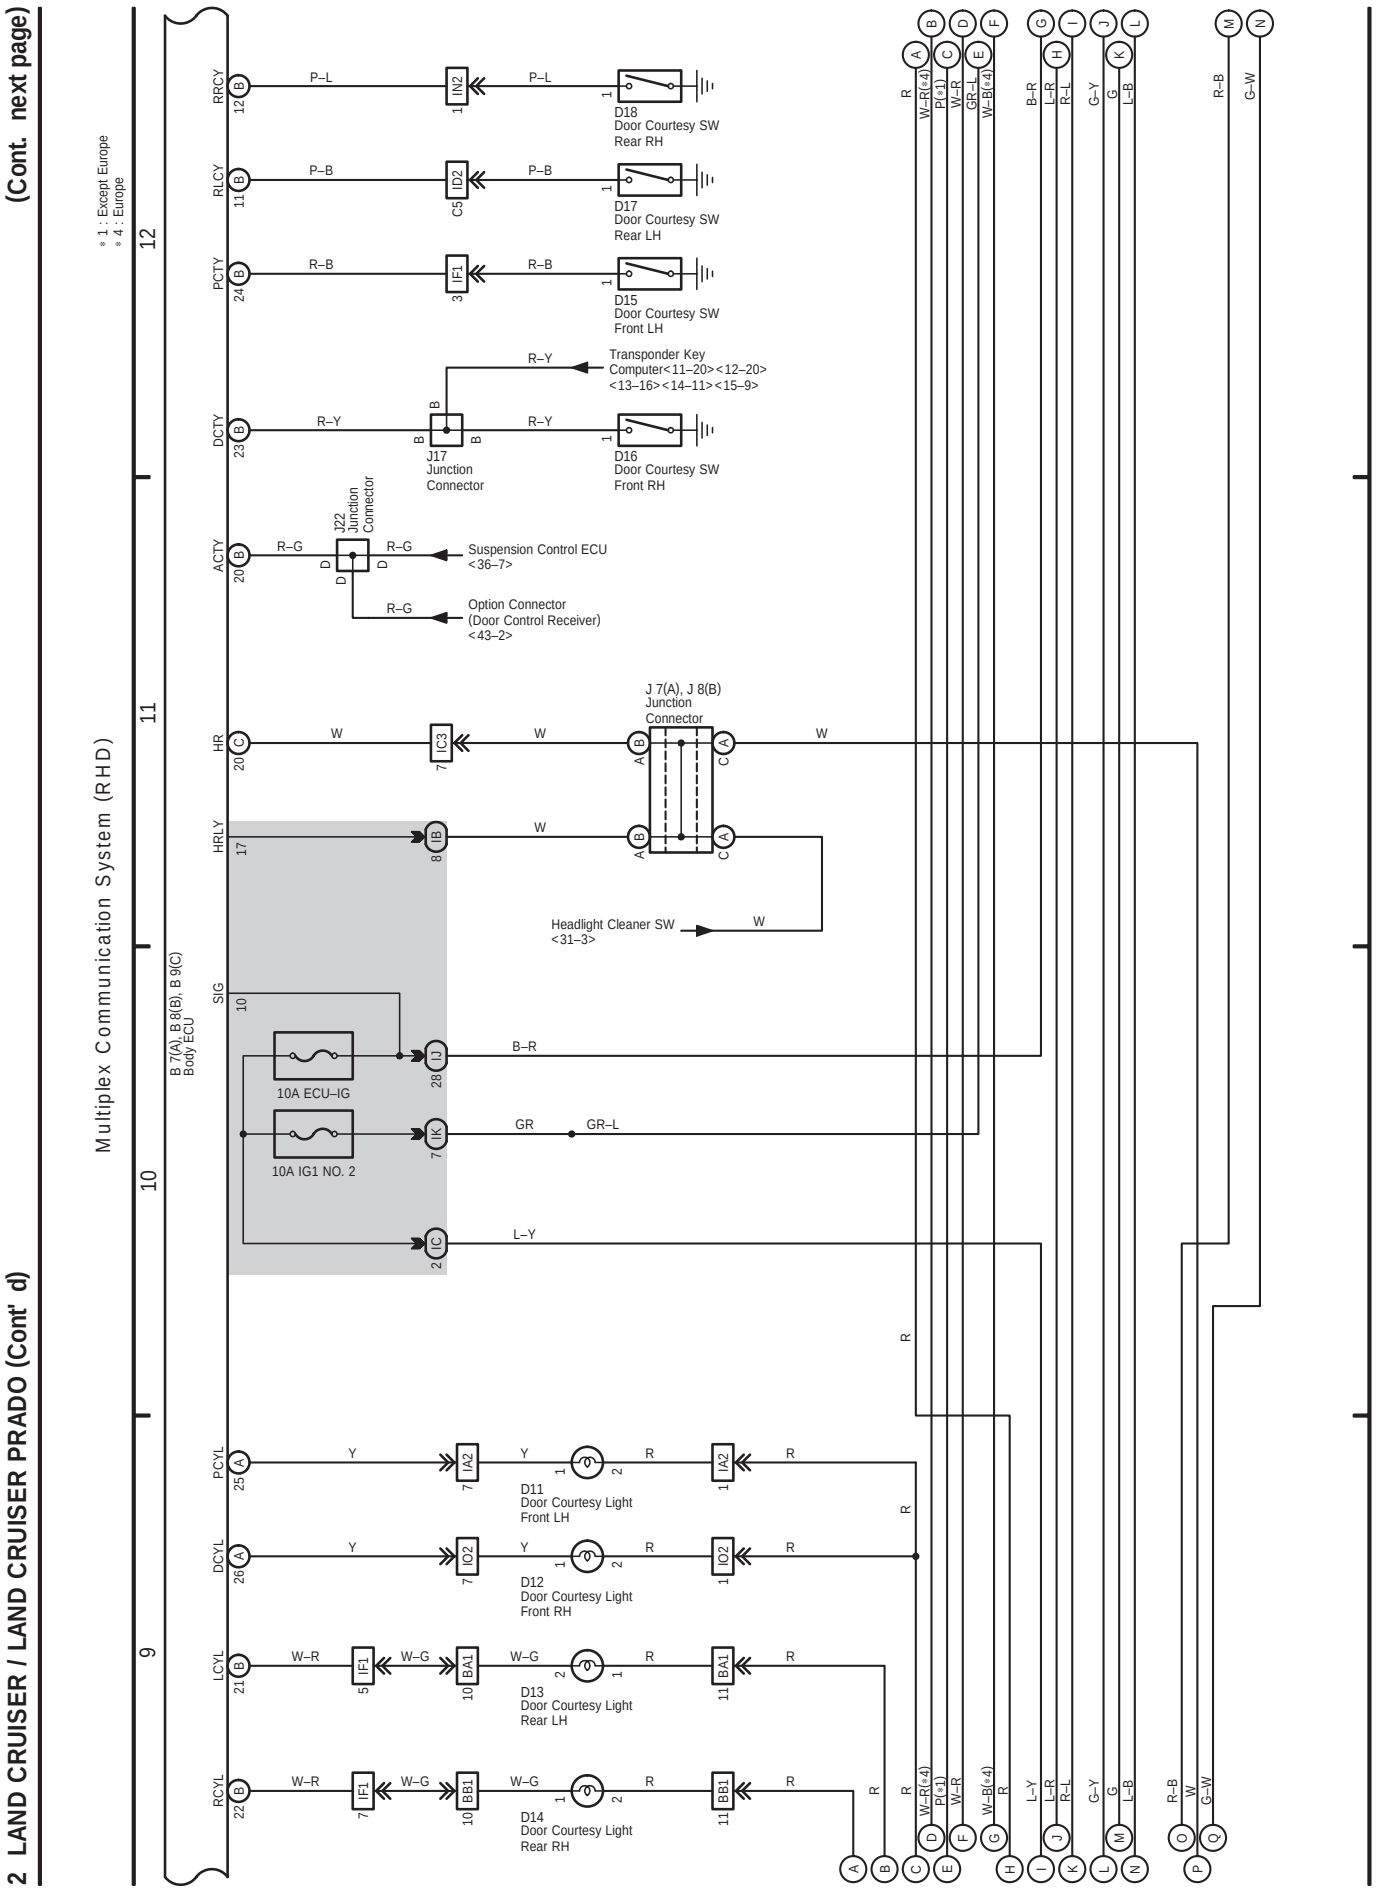



(Cont. next page)
2 LAND CRUISER / LAND CRUISER PRADO (Cont' d)
Multiplex Communication System (RHD)
* 1 : Except Europe
* 4 : Europe
B 7(A), B 8(B), B 9(C)
Body ECU
D18
Door Courtesy SW
Rear RH
D17
Door Courtesy SW
Rear LH
D15
Door Courtesy SW
Front LH
Transponder Key
Computer<11–20><12–20>
<13–16><14–11><15–9>
J17
Junction
Connector
D16
Door Courtesy SW
Front RH
J22
Junction
Connector
Suspension Control ECU
<36–7>
Option Connector
(Door Control Receiver)
<43–2>
J 7(A), J 8(B)
Junction
Connector
Headlight Cleaner SW
<31–3>
10A ECU–IG
10A IG1 NO. 2
D11
Door Courtesy Light
Front LH
D12
Door Courtesy Light
Front RH
D13
Door Courtesy Light
Rear LH
D14
Door Courtesy Light
Rear RH

2 LAND CRUISER / LAND CRUISER PRADO (Cont' d)


(Cont. next page)

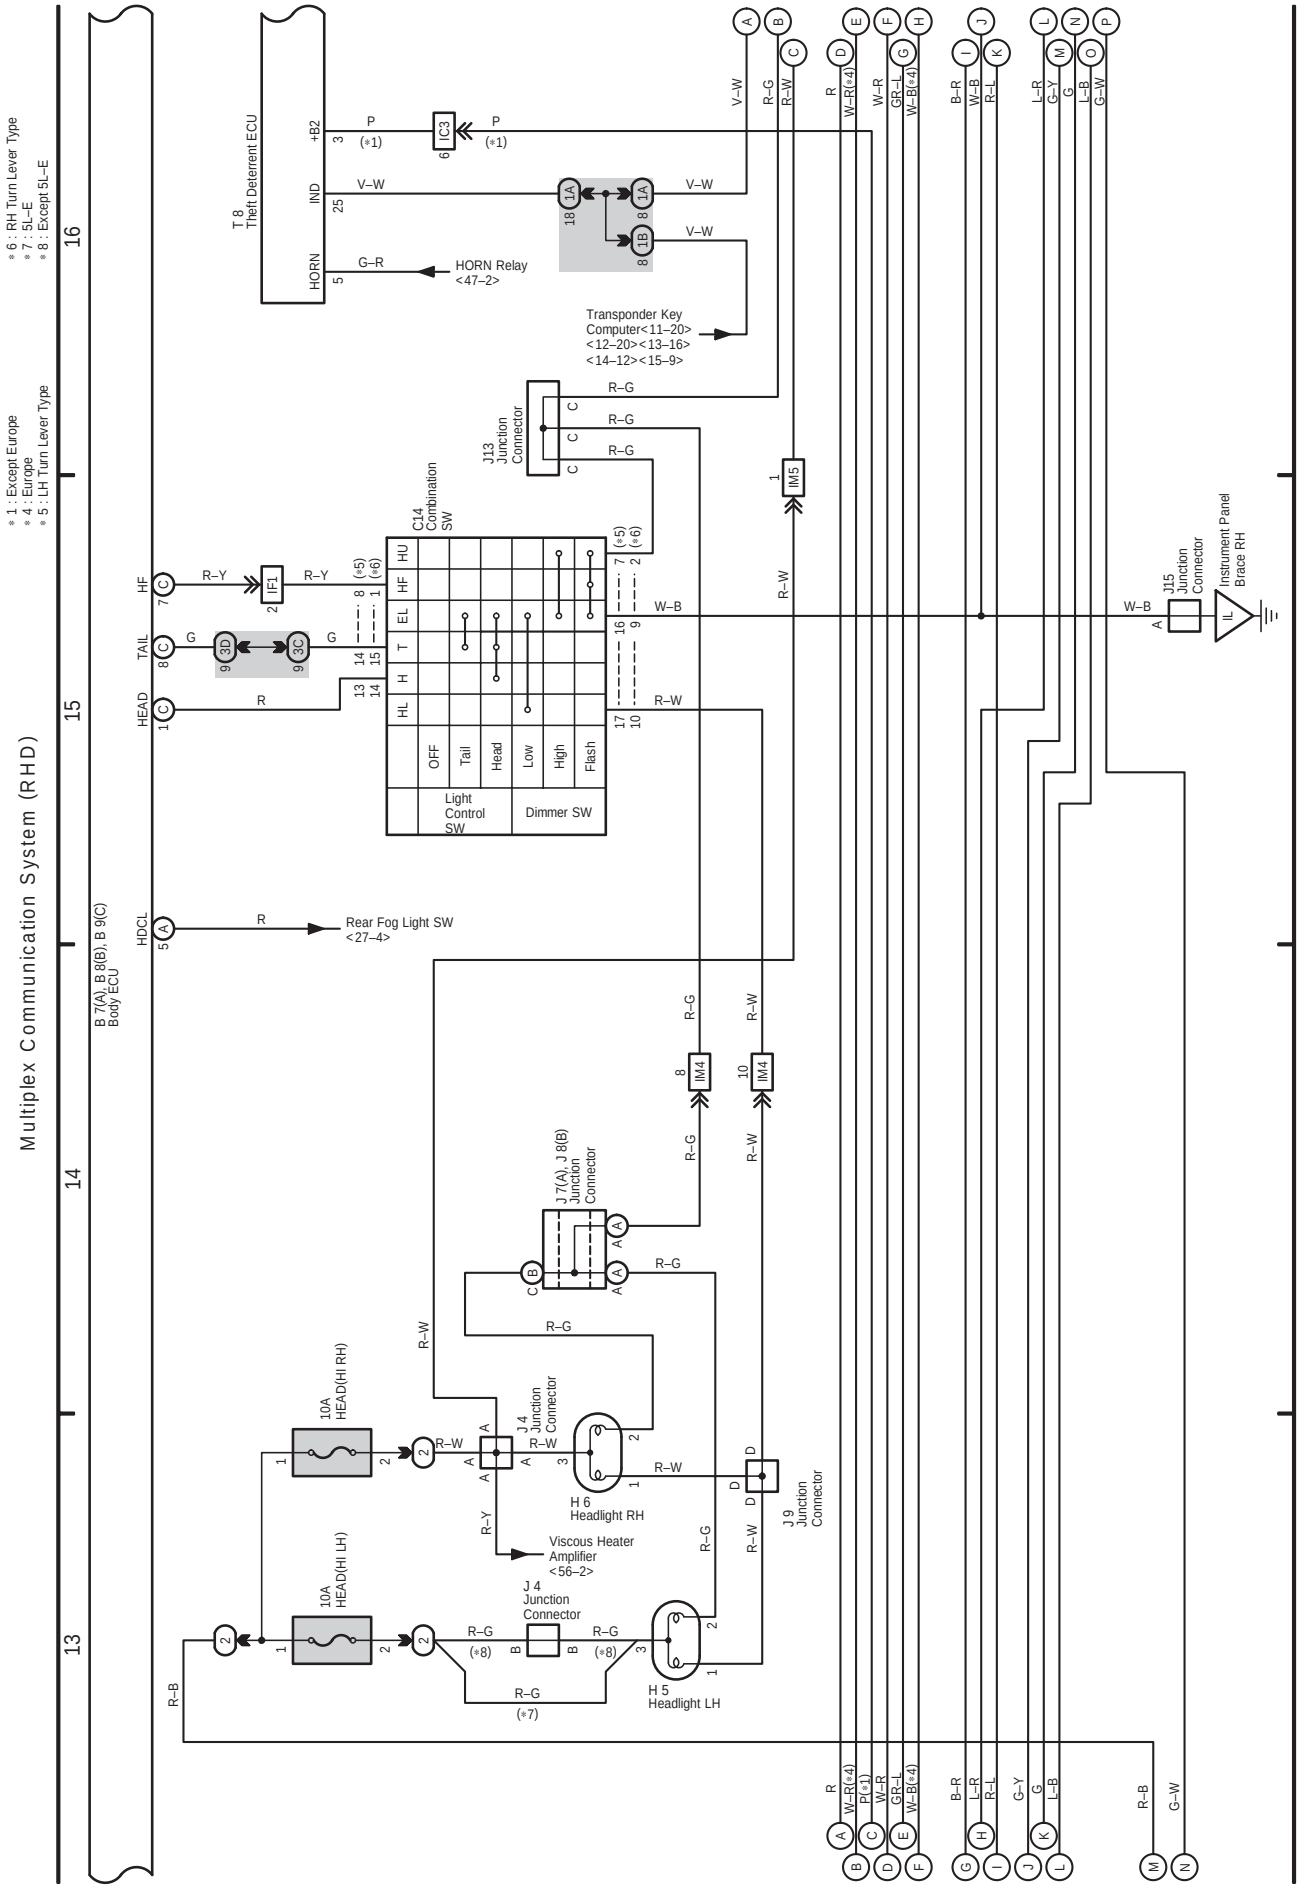


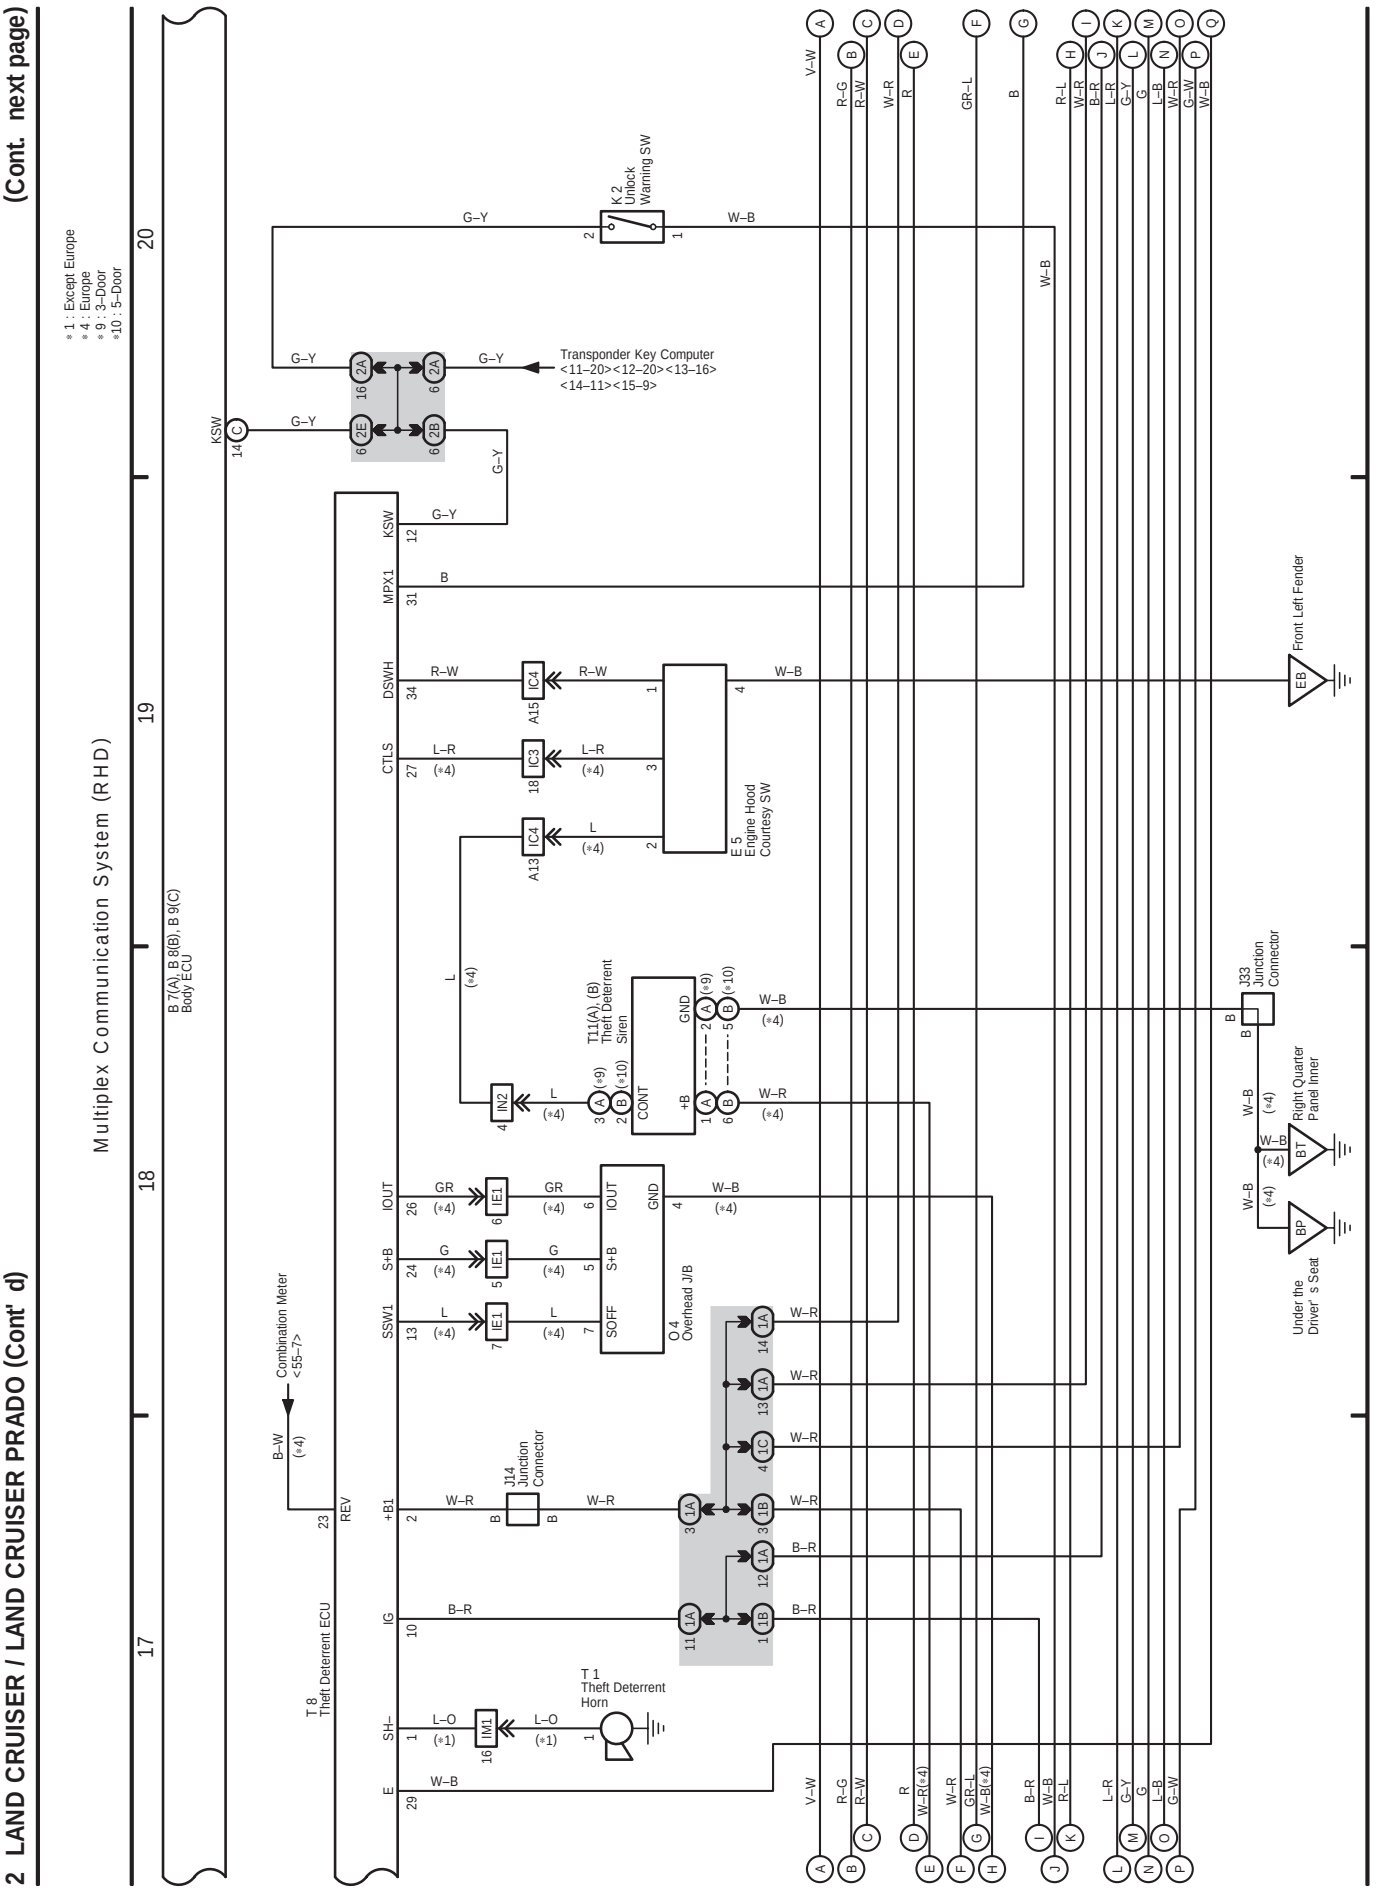
2 LAND CRUISER / LAND CRUISER PRADO (Cont' d)
(Cont. next page)
*1 : Except Europe
*4 : Europe
*9 : 3-Door
*10 : 5-Door
Multiplex Communication System (RHD)
B 7(A), B 8(B), B 9(C)
Body ECU
Transponder Key Computer
<11–20><12–20><13–16>
<14–11><15–9>
K 2
Unlock
Warning SW
E 5
Engine Hood
Courtesy SW
T11(A), (B)
Theft Deterrent
Siren
O 4
Overhead J/B
J14
Junction
Connector
T 8
Theft Deterrent ECU
T 1
Theft Deterrent
Horn
Combination Meter
<55–7>
J33
Junction
Connector
Front Left Fender
Right Quarter
Panel Inner
Under the
Driver' s Seat

2 LAND CRUISER / LAND CRUISER PRADO (Cont' d)


(Cont. next page)

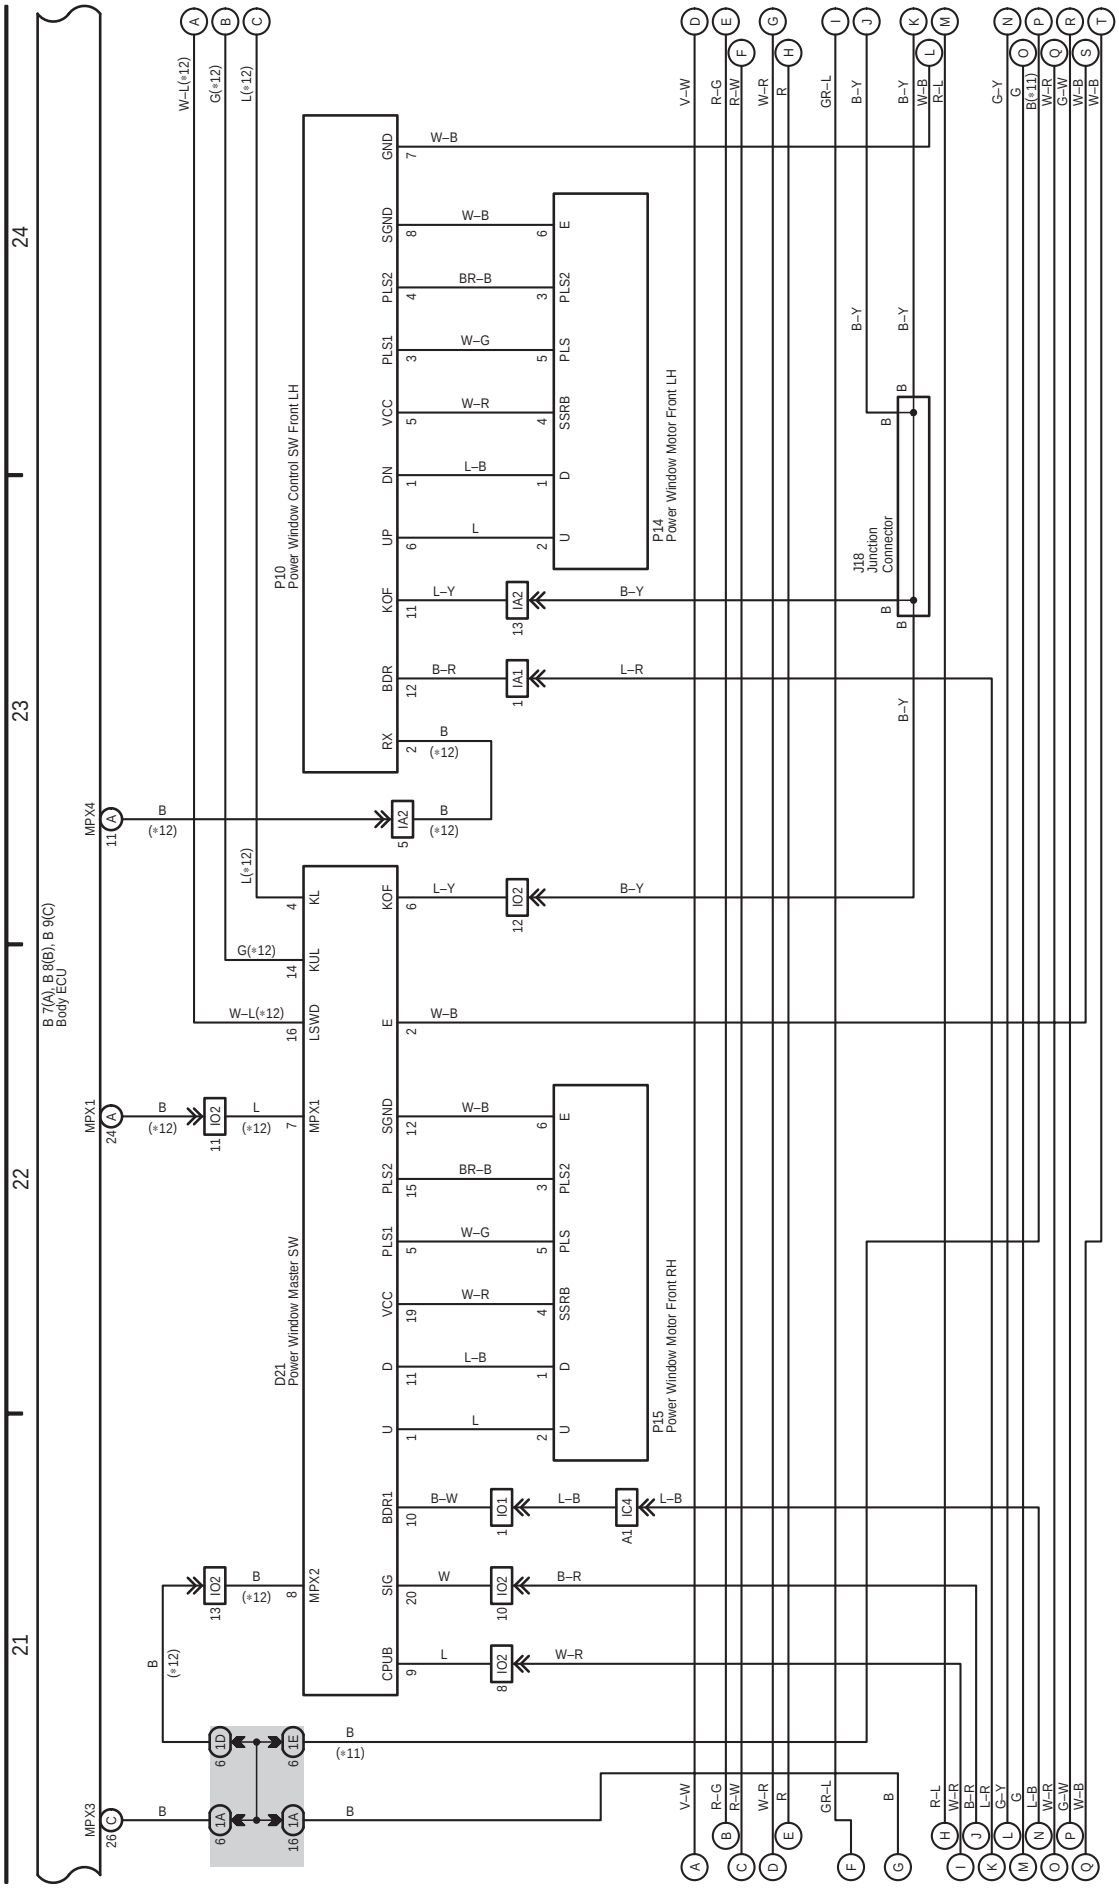

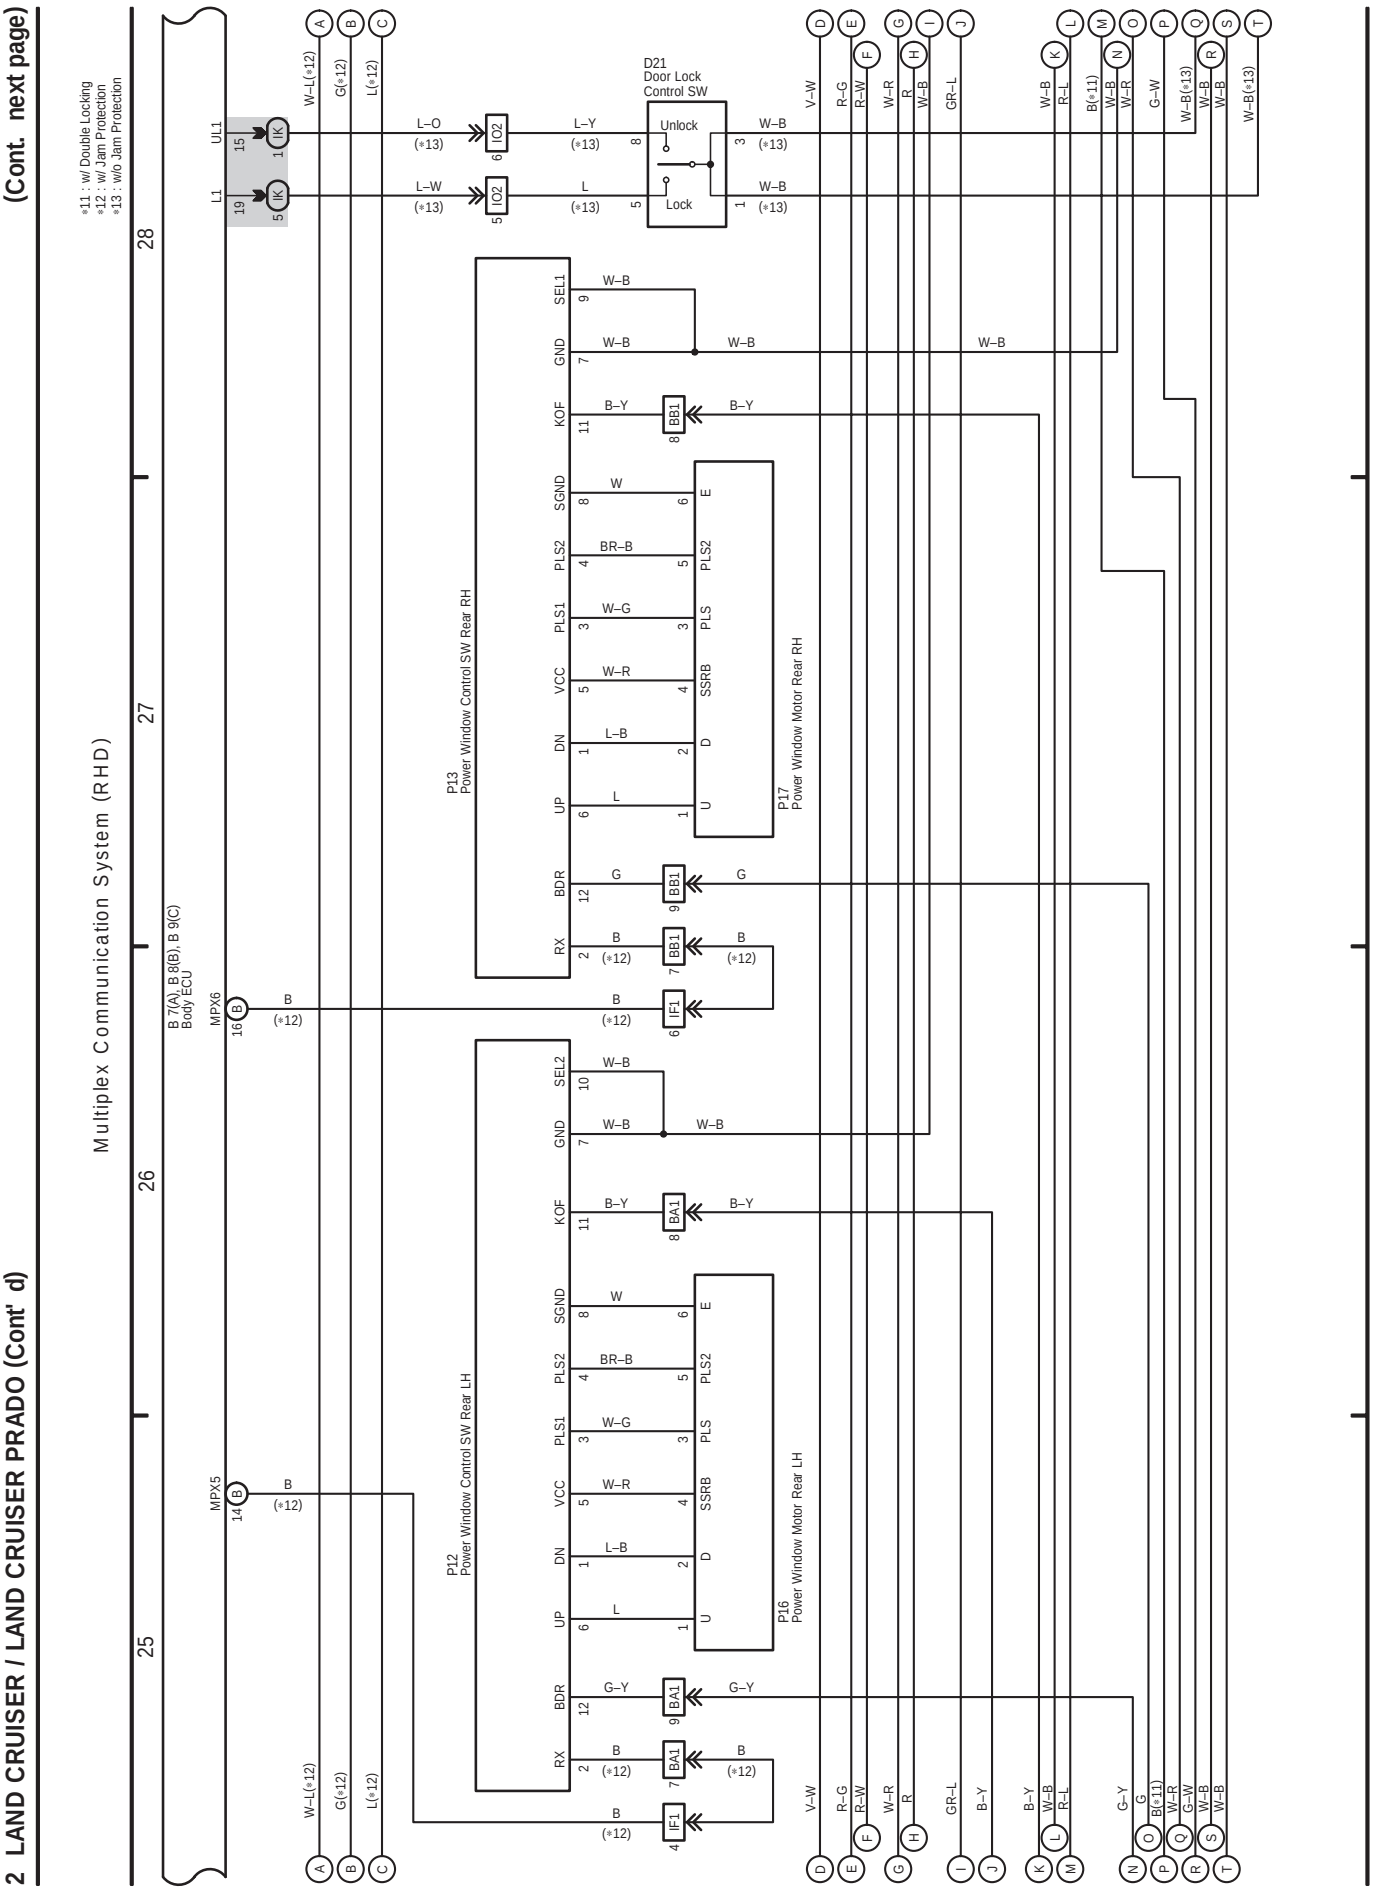

2 LAND CRUISER / LAND CRUISER PRADO (Cont' d)
(Cont. next page)
*11 : w/ Double Locking
*12 : w/ Jam Protection
*13 : w/o Jam Protection
Multiplex Communication System (RHD)
B 7(A), B 8(B), B 9(C)
Body ECU
MPX6
MPX5
D21
Door Lock
Control SW
Unlock
Lock
P13
Power Window Control SW Rear RH
P17
Power Window Motor Rear RH
P12
Power Window Control SW Rear LH
P16
Power Window Motor Rear LH
SEL1
SEL2
GND
KOF
SGND
PLS2
PLS1
VCC
DN
UP
BDR
RX
PLS
SSRB
UL1
L1
IK
IO2
BB1
BA1
IF1


2 LAND CRUISER / LAND CRUISER PRADO (Cont' d)

(Cont. next page)

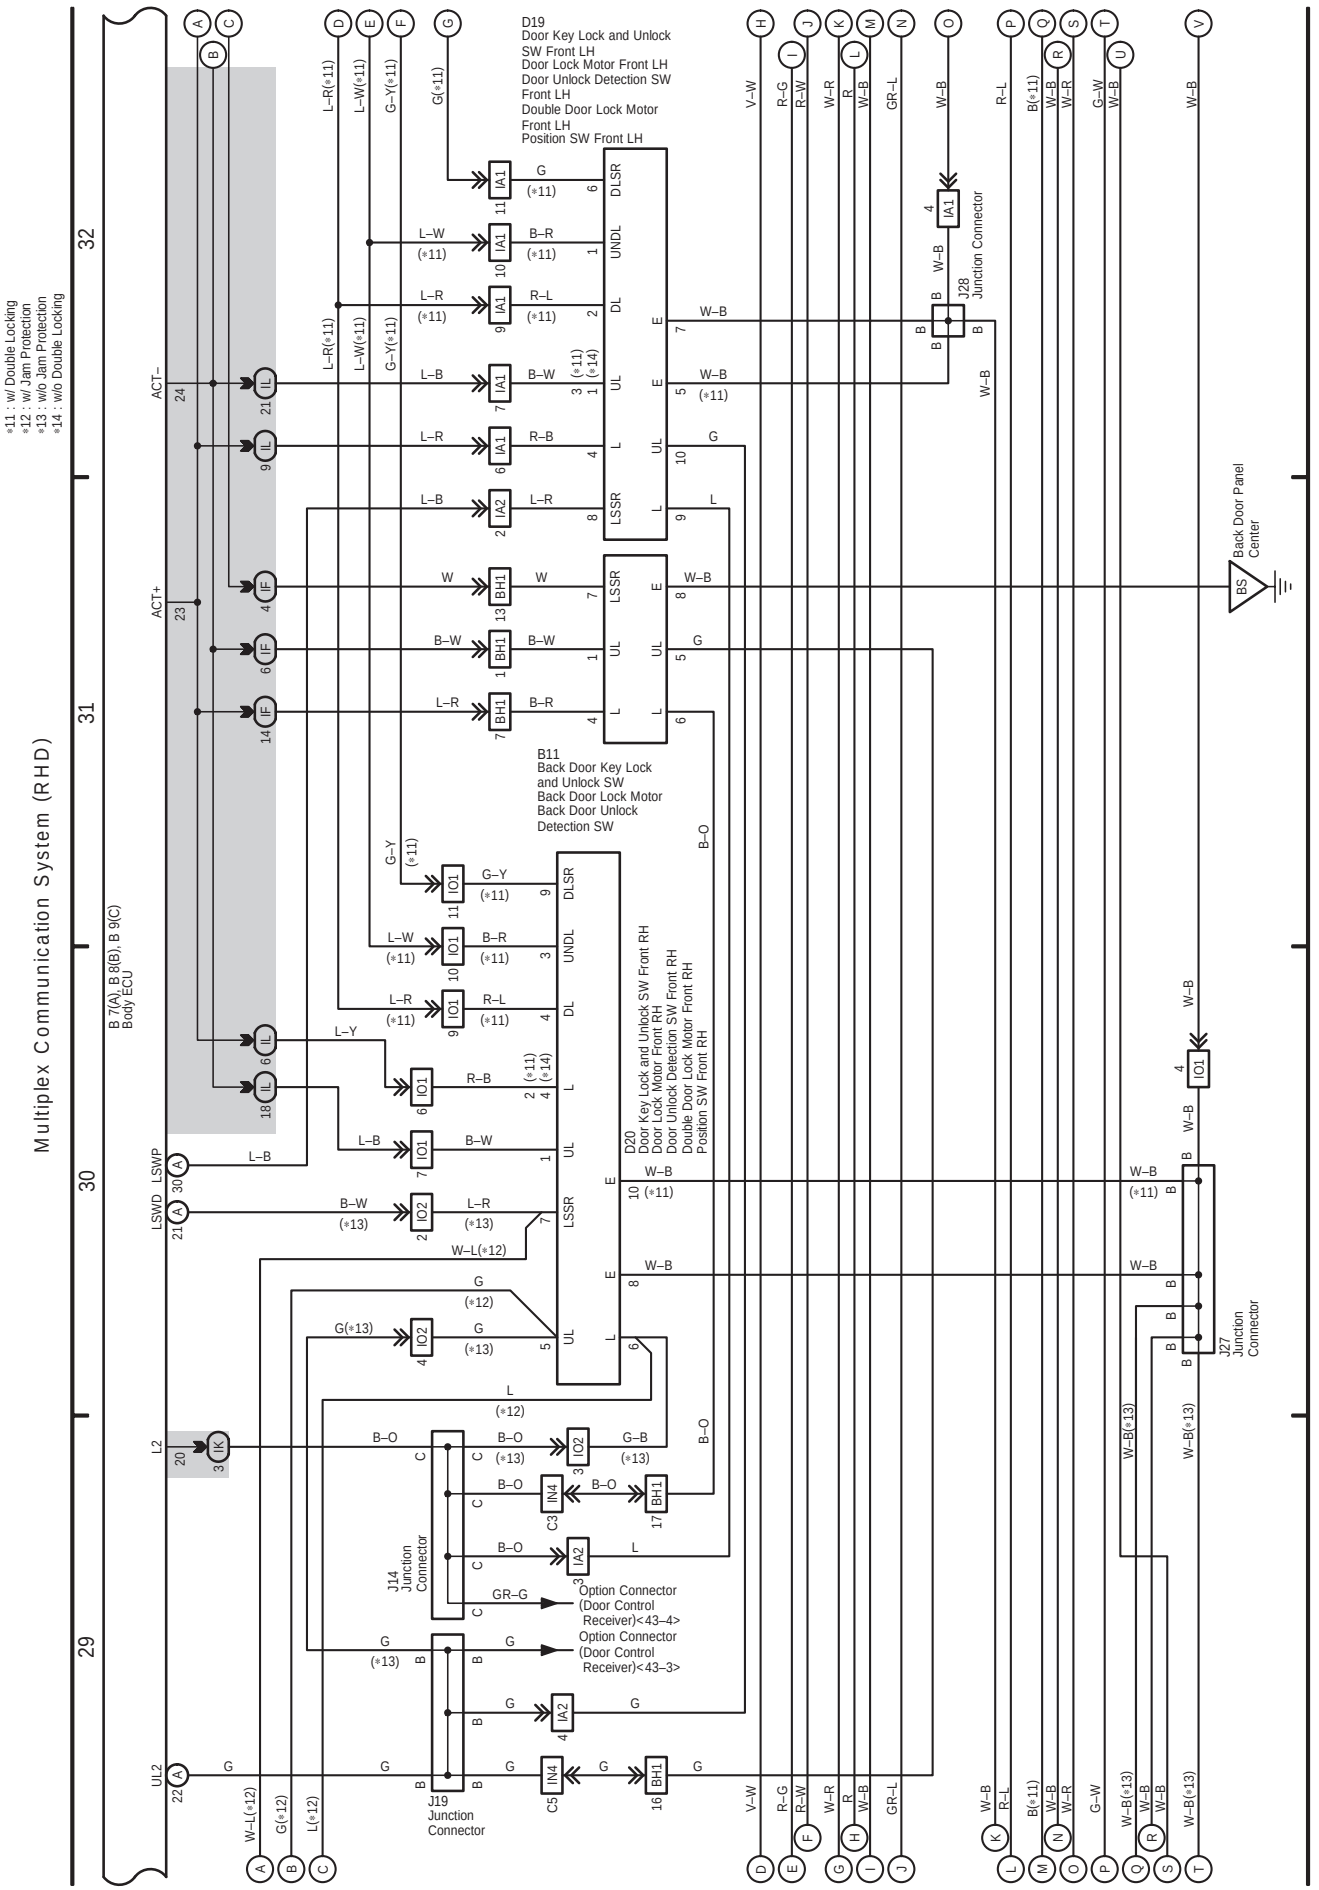

(Cont. next page)

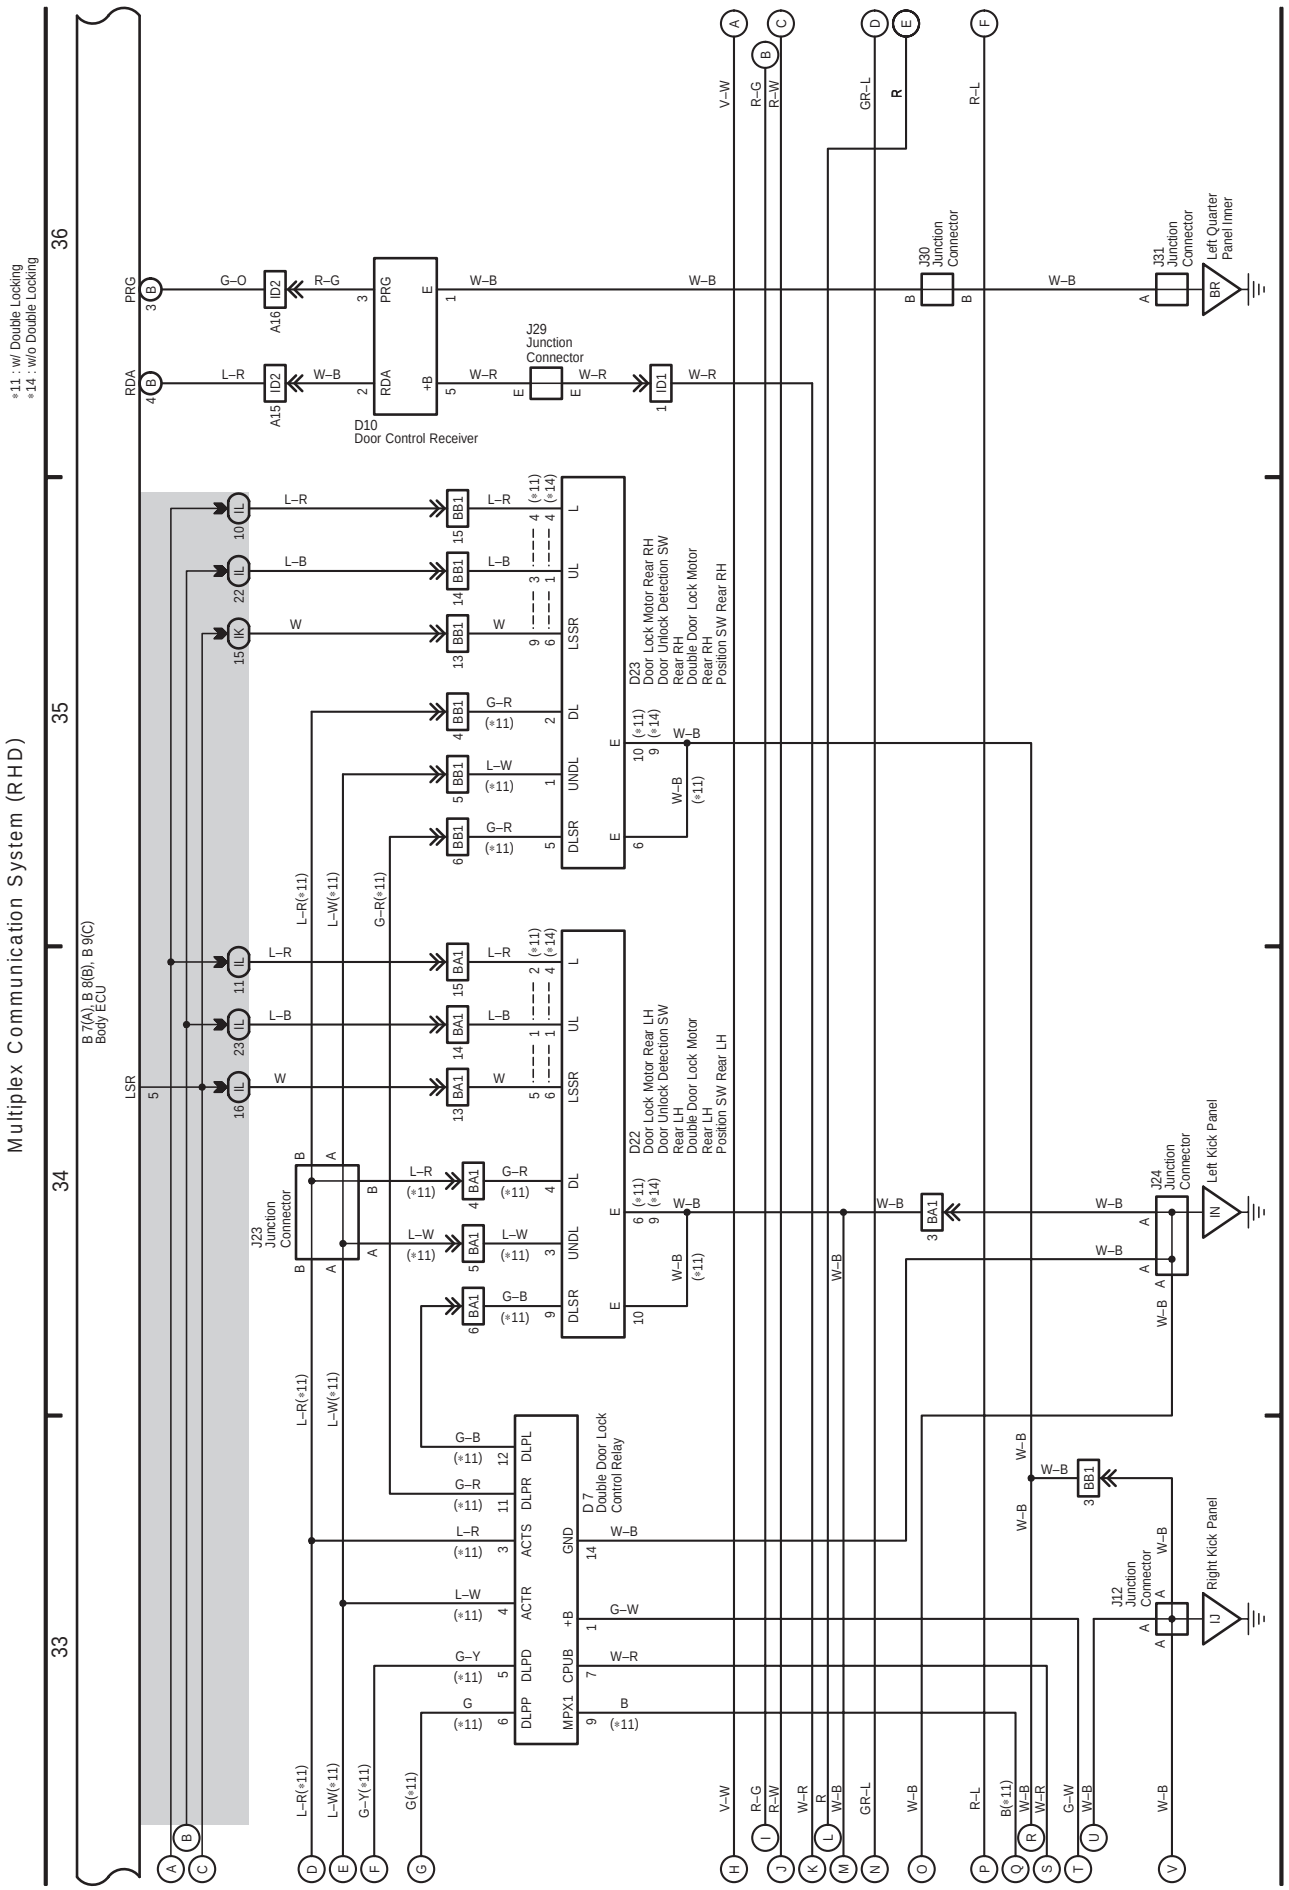

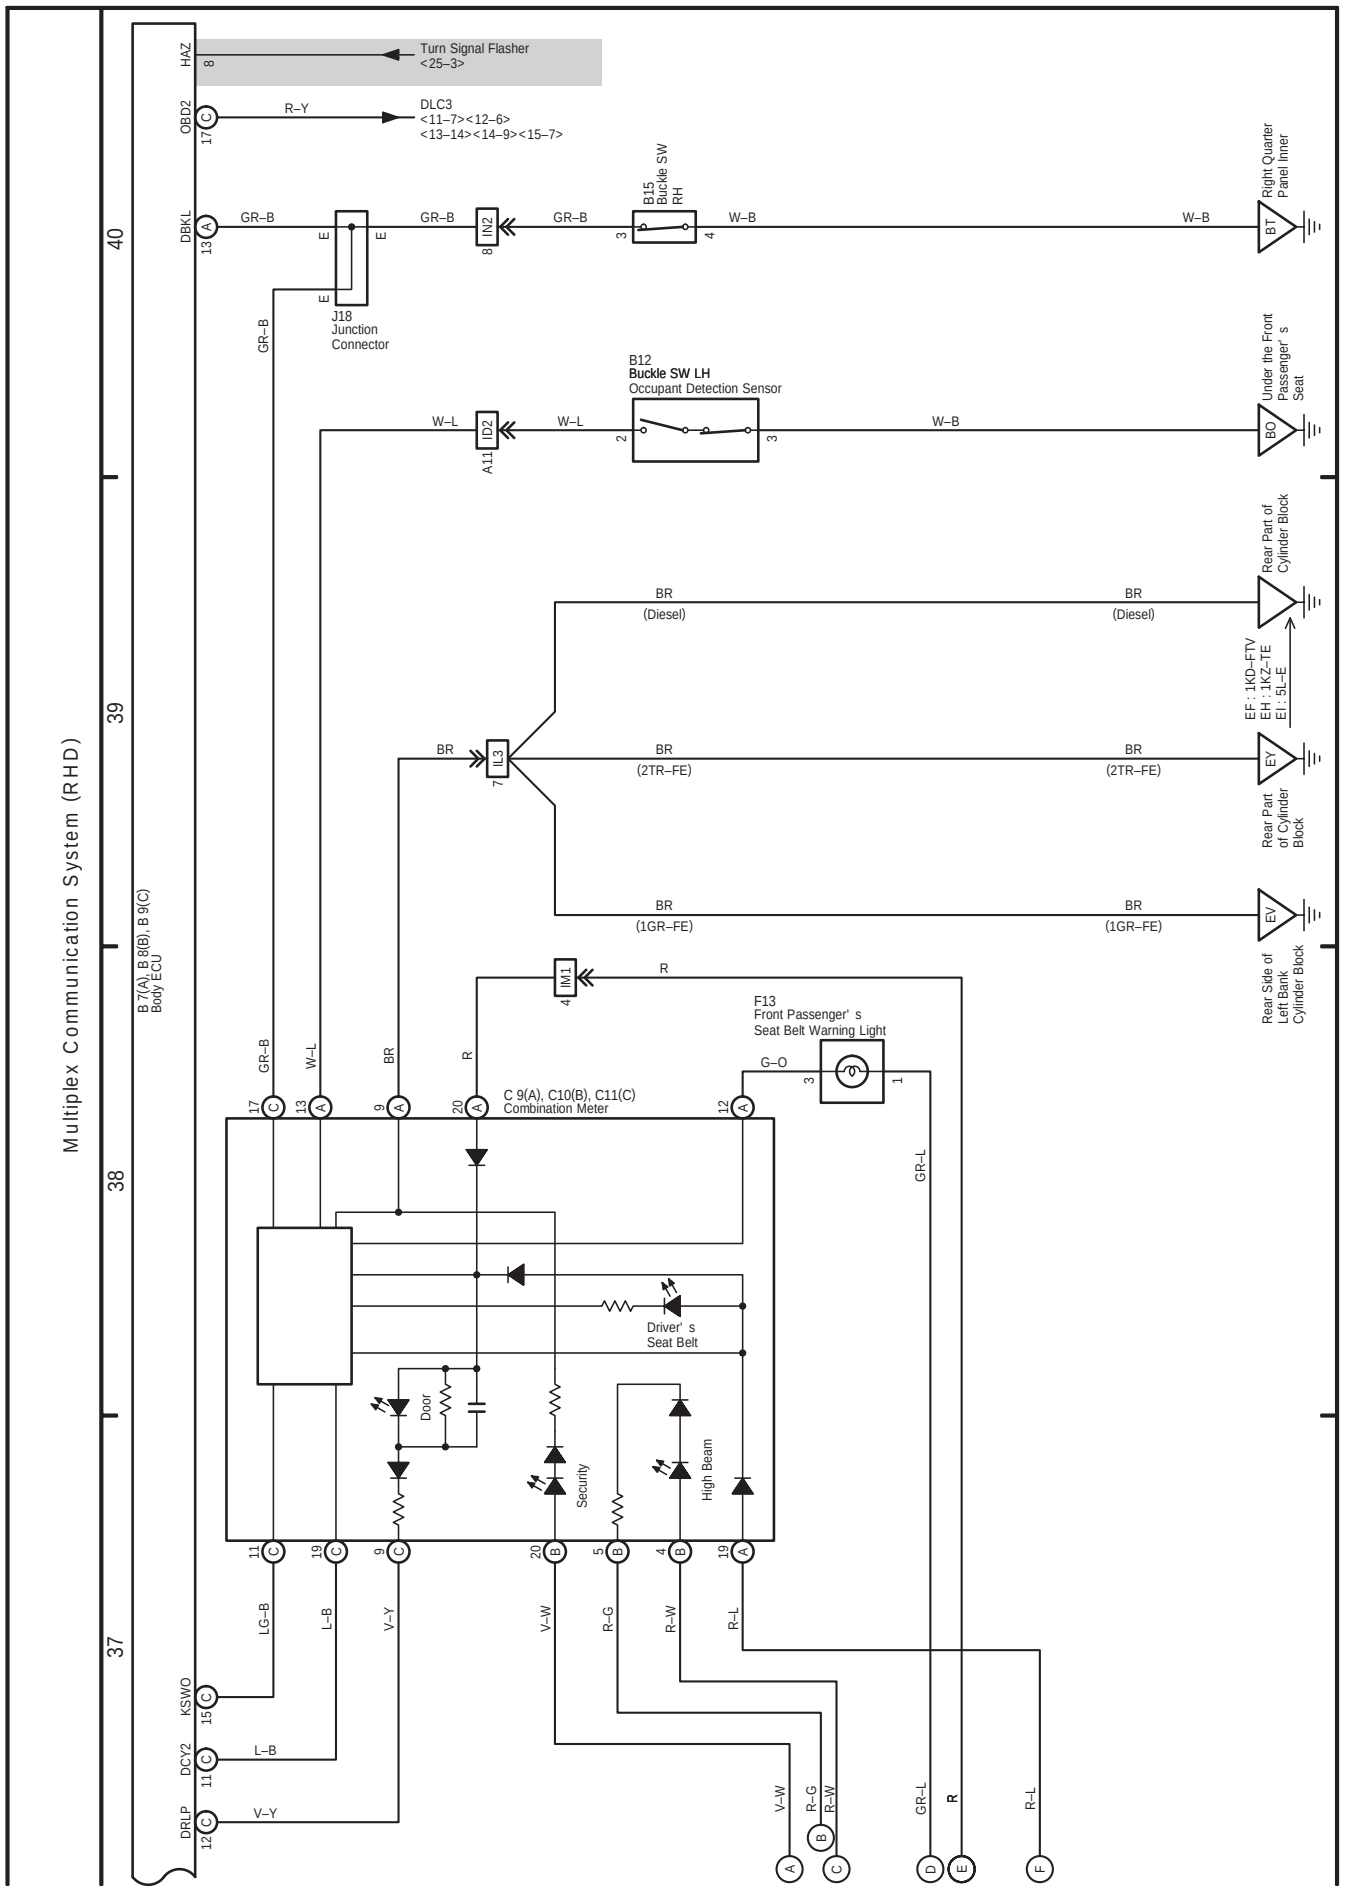
2 LAND CRUISER / LAND CRUISER PRADO (Cont' d)
Multiplex Communication System (RHD)
37
38
39
40
B 7(A), B 8(B), B 9(C)
Body ECU
HAZ
Turn Signal Flasher
<25–3>
OBD2
R–Y
DLC3
<11–7><12–6>
<13–14><14–9><15–7>
DBKL
GR–B
J18
Junction
Connector
IN2
B15
Buckle SW
RH
W–B
Right Quarter
Panel Inner
BT
B12
Buckle SW LH
Occupant Detection Sensor
ID2
A11
W–L
Under the Front
Passenger' s
Seat
BO
BR
(Diesel)
Rear Part of
Cylinder Block
EF : 1KD–FTV
EH : 1KZ–TE
EI : 5L–E
IL3
(2TR–FE)
EY
Rear Part
of Cylinder
Block
(1GR–FE)
EV
Rear Side of
Left Bank
Cylinder Block
IM1
R
F13
Front Passenger' s
Seat Belt Warning Light
G–O
C 9(A), C10(B), C11(C)
Combination Meter
GR–L
Driver' s
Seat Belt
Door
Security
High Beam
LG–B
L–B
V–Y
V–W
R–G
R–W
R–L
KSWO
DCY2
DRLP