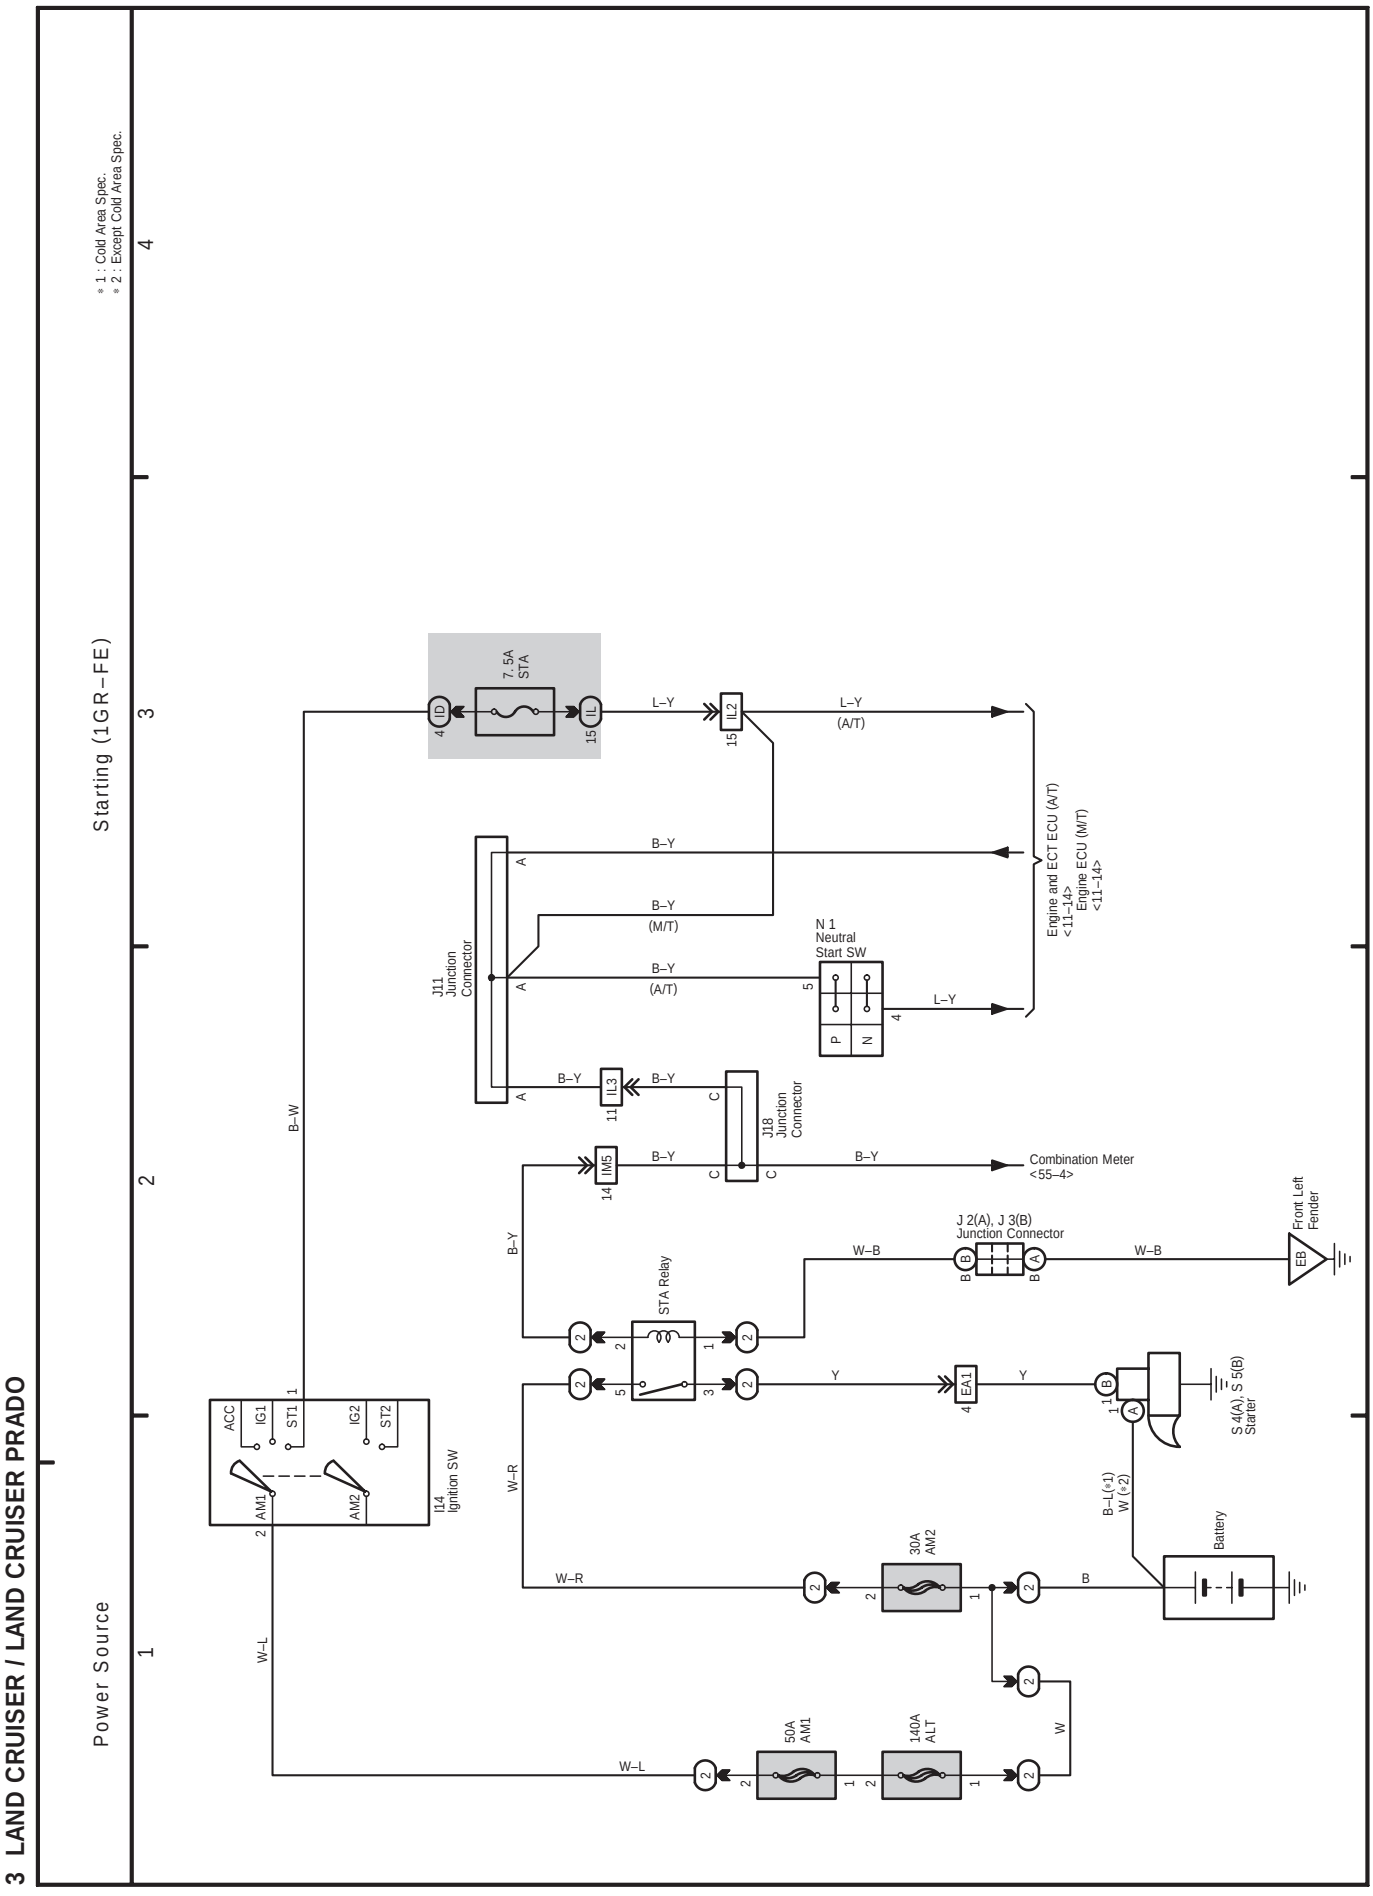

3 LAND CRUISER / LAND CRUISER PRADO
Power Source
Starting (1GR-FE)
1
2
3
4
* 1 : Cold Area Spec.
* 2 : Except Cold Area Spec.
7.5A STA
4 ID
15 IL
L–Y
IL2
15
L–Y (A/T)
B–Y
A
B–Y (M/T)
B–Y (A/T)
J11 Junction Connector
N 1 Neutral Start SW
5
P
N
4
L–Y
Engine and ECT ECU (A/T) <11–14>
Engine ECU (M/T) <11–14>
B–W
B–Y
IL3
11
C
J18 Junction Connector
IM5
14
Combination Meter <55–4>
J 2(A), J 3(B) Junction Connector
W–B
Front Left Fender
EB
STA Relay
W–R
Y
EA1
4
S 4(A), S 5(B) Starter
ACC
IG1
ST1
IG2
ST2
AM1
AM2
I14 Ignition SW
W–L
30A AM2
B
Battery
B–L(*1) W (*2)
50A AM1
140A ALT
W