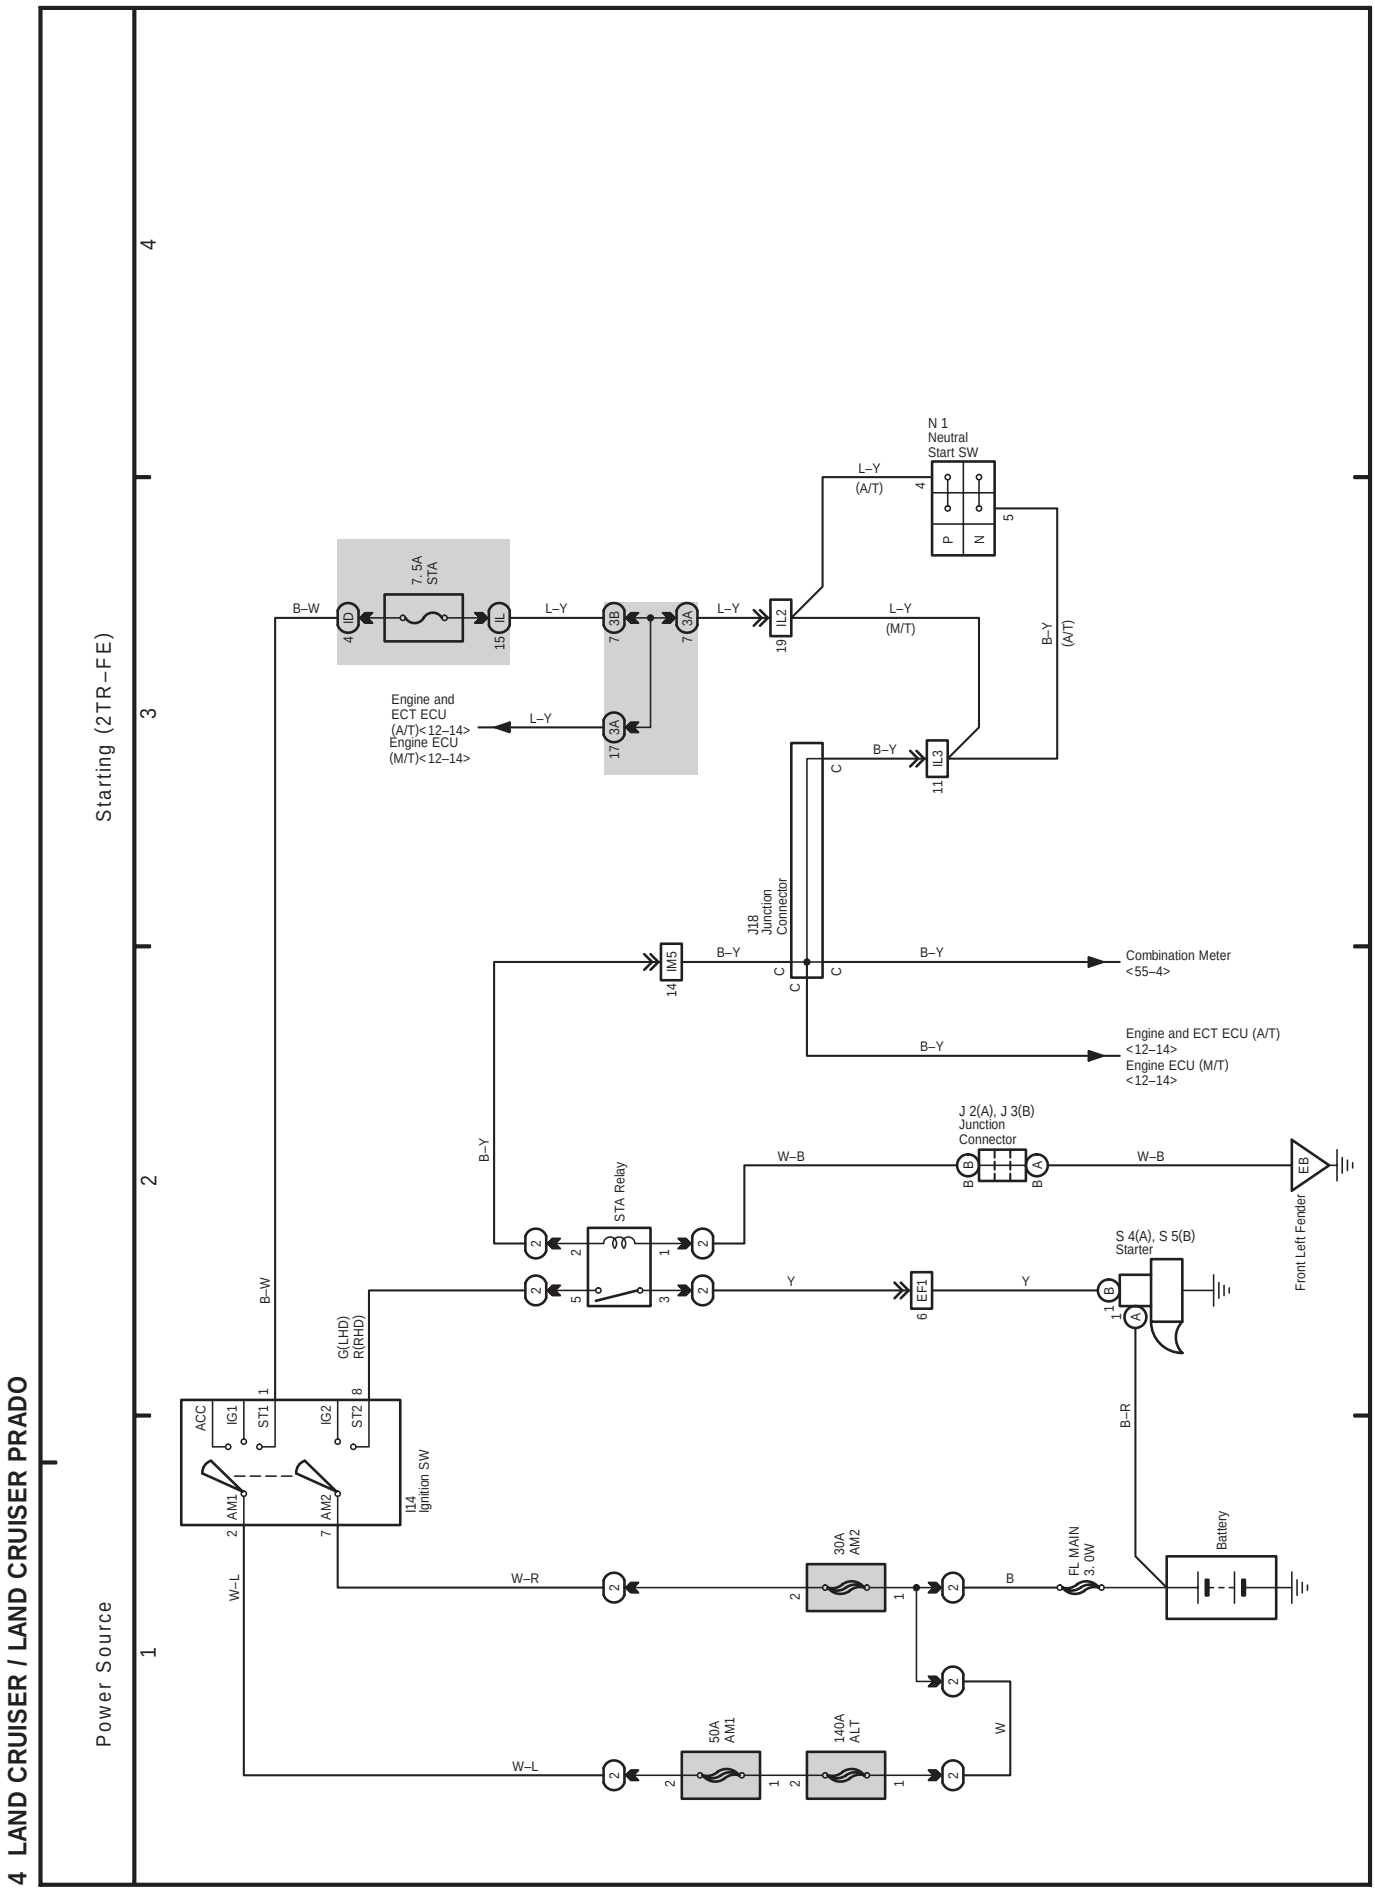

4 LAND CRUISER / LAND CRUISER PRADO
Power Source
Starting (2TR–FE)
1
2
3
4
N 1
Neutral
Start SW
L–Y
(A/T)
L–Y
(M/T)
B–Y
(A/T)
B–W
7. 5A
STA
ID
IL
3B
3A
IL2
IL3
Engine and
ECT ECU
(A/T)<12–14>
Engine ECU
(M/T)<12–14>
J18
Junction
Connector
IM5
Combination Meter
<55–4>
Engine and ECT ECU (A/T)
<12–14>
Engine ECU (M/T)
<12–14>
J 2(A), J 3(B)
Junction
Connector
W–B
STA Relay
EF1
S 4(A), S 5(B)
Starter
Front Left Fender
EB
G(LHD)
R(RHD)
ACC
IG1
ST1
IG2
ST2
AM1
AM2
I14
Ignition SW
W–L
W–R
30A
AM2
FL MAIN
3. 0W
B
B–R
Battery
50A
AM1
140A
ALT
W