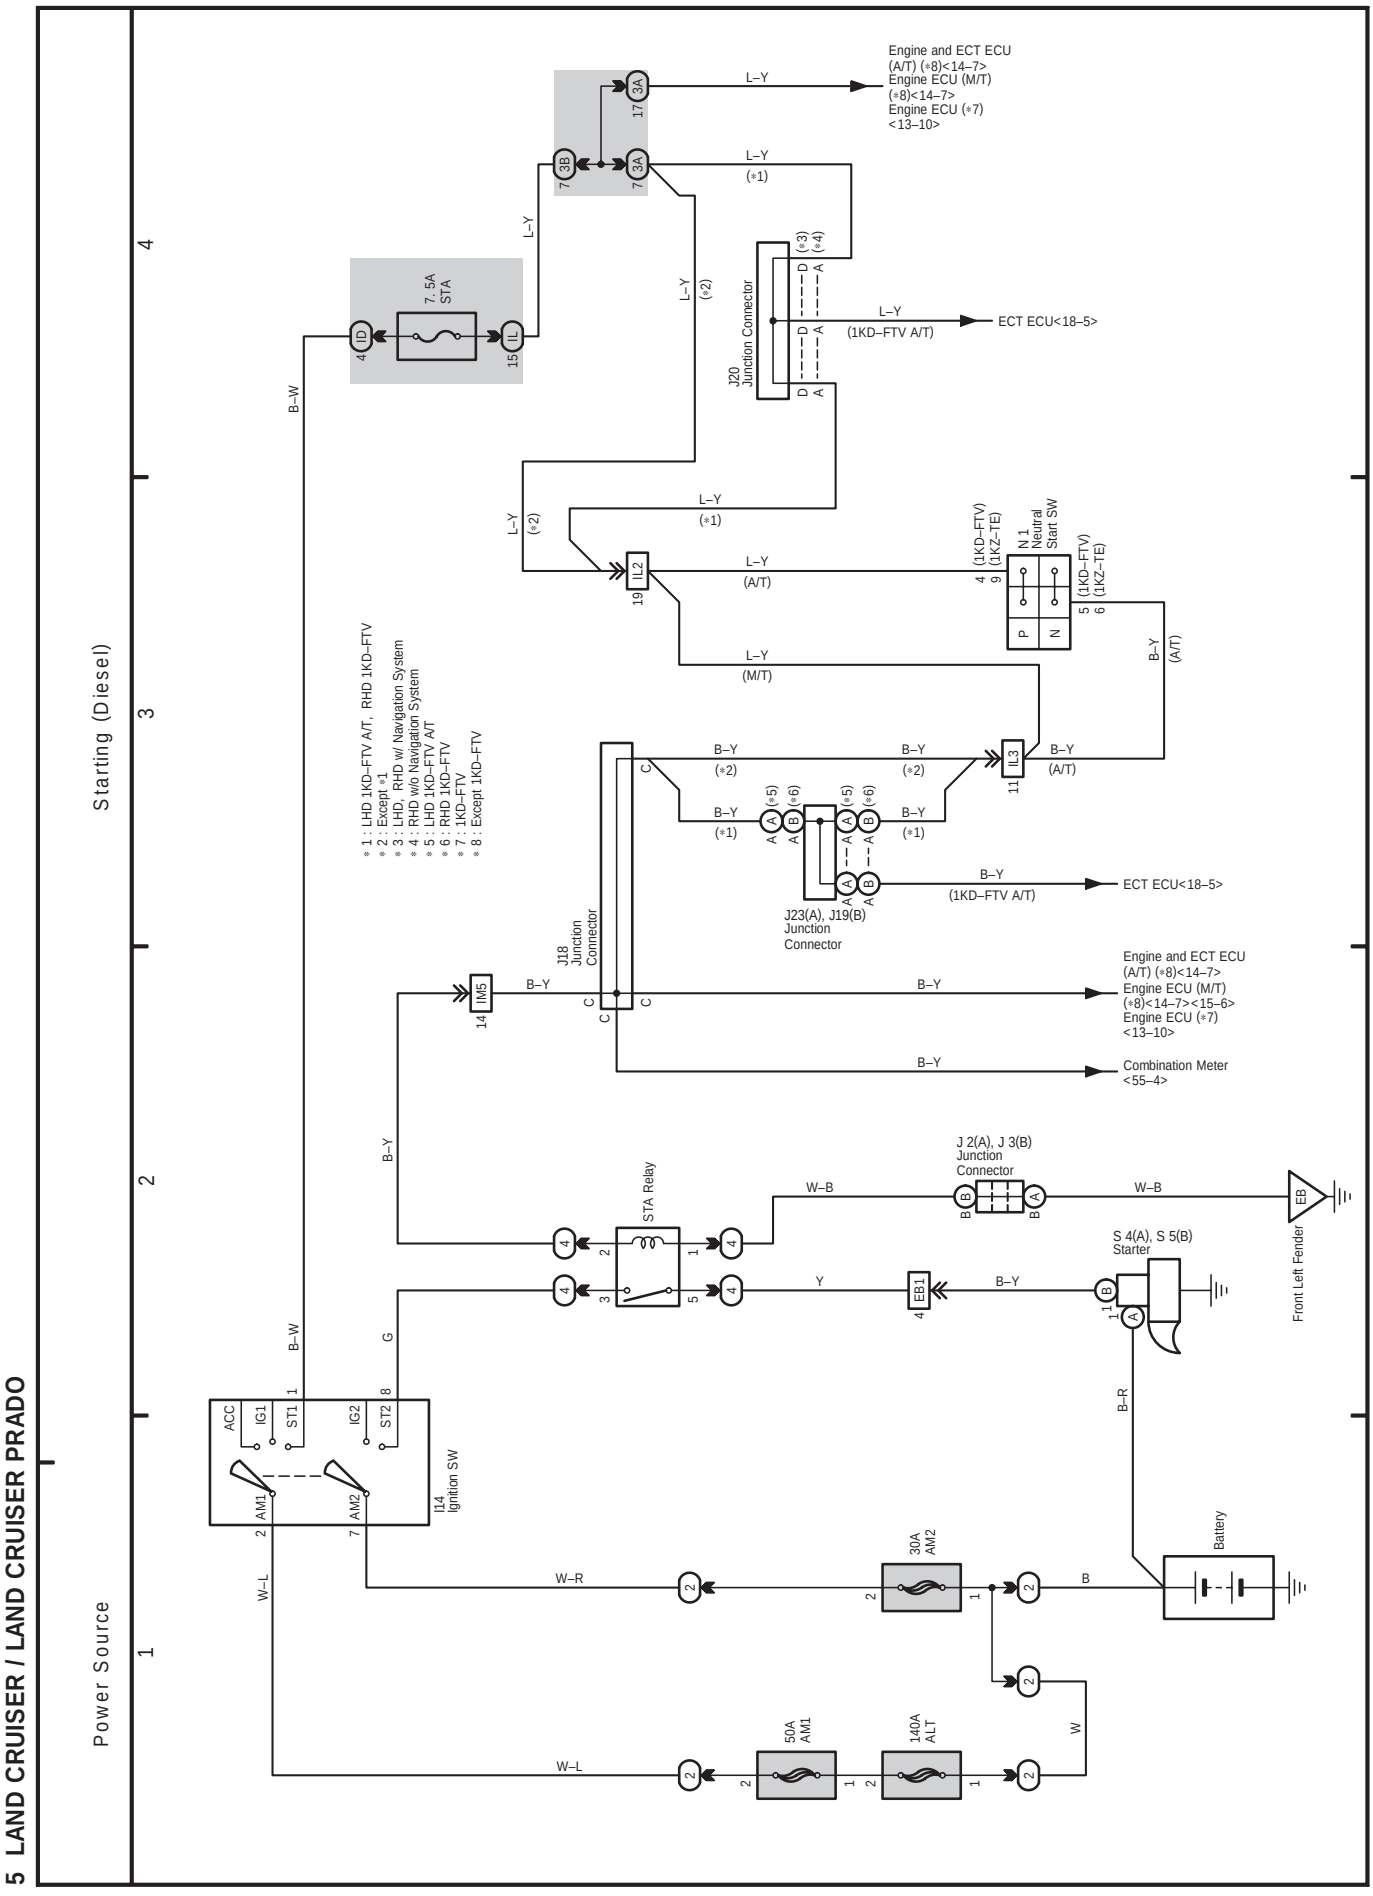

5 LAND CRUISER / LAND CRUISER PRADO
Power Source
Starting (Diesel)
1
2
3
4
Engine and ECT ECU (A/T) (∗8)<14–7> Engine ECU (M/T) (∗8)<14–7> Engine ECU (∗7) <13–10>
ECT ECU<18–5>
(1KD–FTV A/T)
J20 Junction Connector
7.5A STA
N 1 Neutral Start SW
(1KD–FTV) (1KZ–TE)
J18 Junction Connector
J23(A), J19(B) Junction Connector
Combination Meter <55–4>
J 2(A), J 3(B) Junction Connector
STA Relay
S 4(A), S 5(B) Starter
Front Left Fender
Battery
I14 Ignition SW
ACC
IG1
ST1
IG2
ST2
AM1
AM2
30A AM2
50A AM1
140A ALT
∗1 : LHD 1KD–FTV A/T, RHD 1KD–FTV
∗2 : Except ∗1
∗3 : LHD, RHD w/ Navigation System
∗4 : RHD w/o Navigation System
∗5 : LHD 1KD–FTV A/T
∗6 : RHD 1KD–FTV
∗7 : 1KD–FTV
∗8 : Except 1KD–FTV