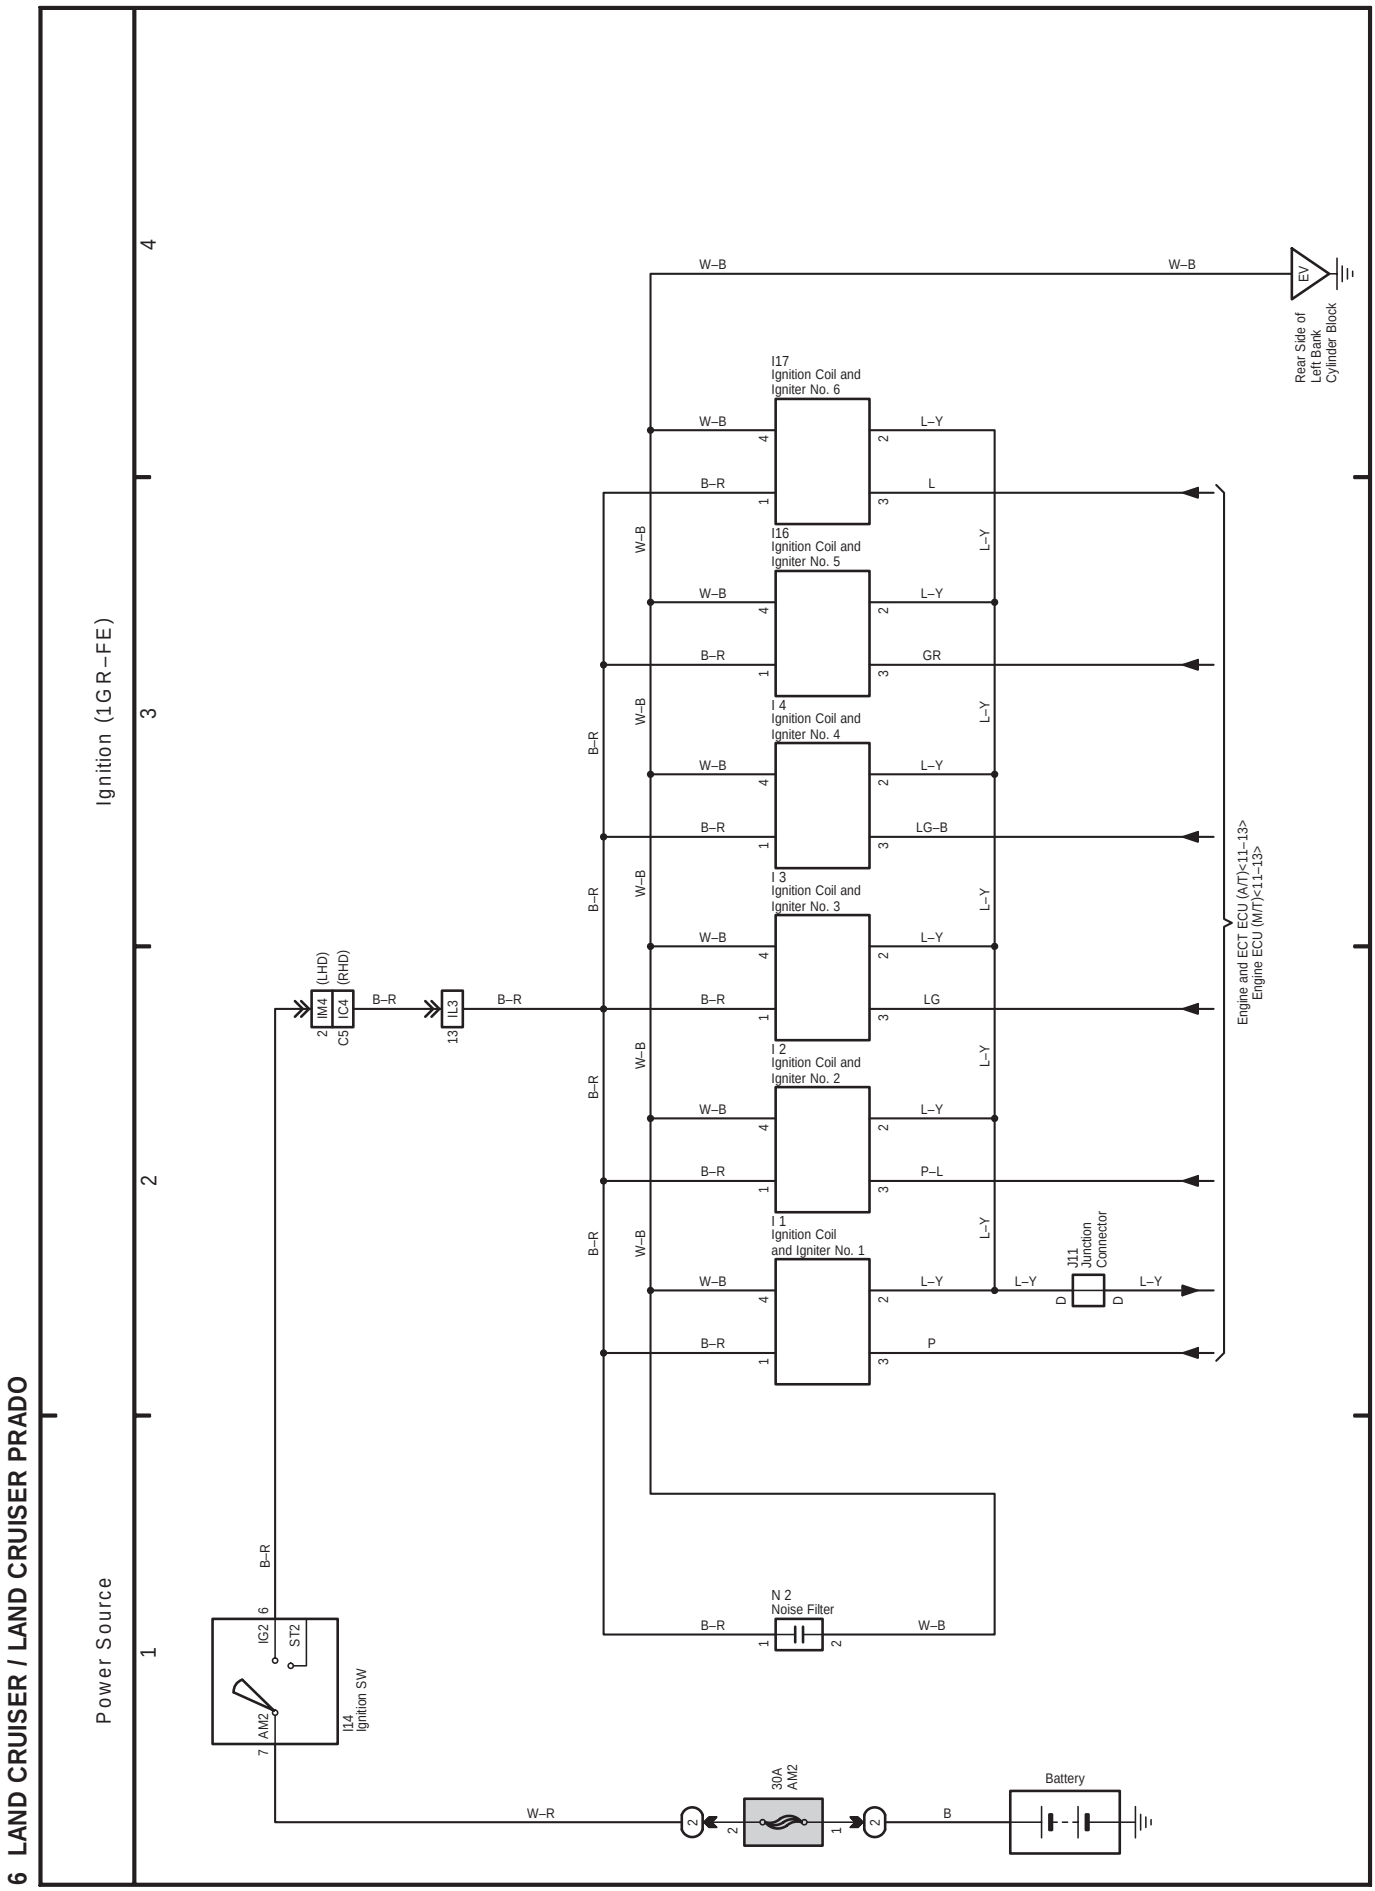

6 LAND CRUISER / LAND CRUISER PRADO
Power Source
Ignition (1GR–FE)
1
2
3
4
Battery
30A
AM2
W–R
B
N 2
Noise Filter
W–B
B–R
I14
Ignition SW
IG2
ST2
AM2
I17
Ignition Coil and
Igniter No. 6
I16
Ignition Coil and
Igniter No. 5
I 4
Ignition Coil and
Igniter No. 4
I 3
Ignition Coil and
Igniter No. 3
I 2
Ignition Coil and
Igniter No. 2
I 1
Ignition Coil
and Igniter No. 1
L–Y
L
GR
LG–B
LG
P–L
P
J11
Junction
Connector
IM4 (LHD)
IC4 (RHD)
C5
IL3
Engine and ECT ECU (A/T)<11–13>
Engine ECU (M/T)<11–13>
EV
Rear Side of
Left Bank
Cylinder Block