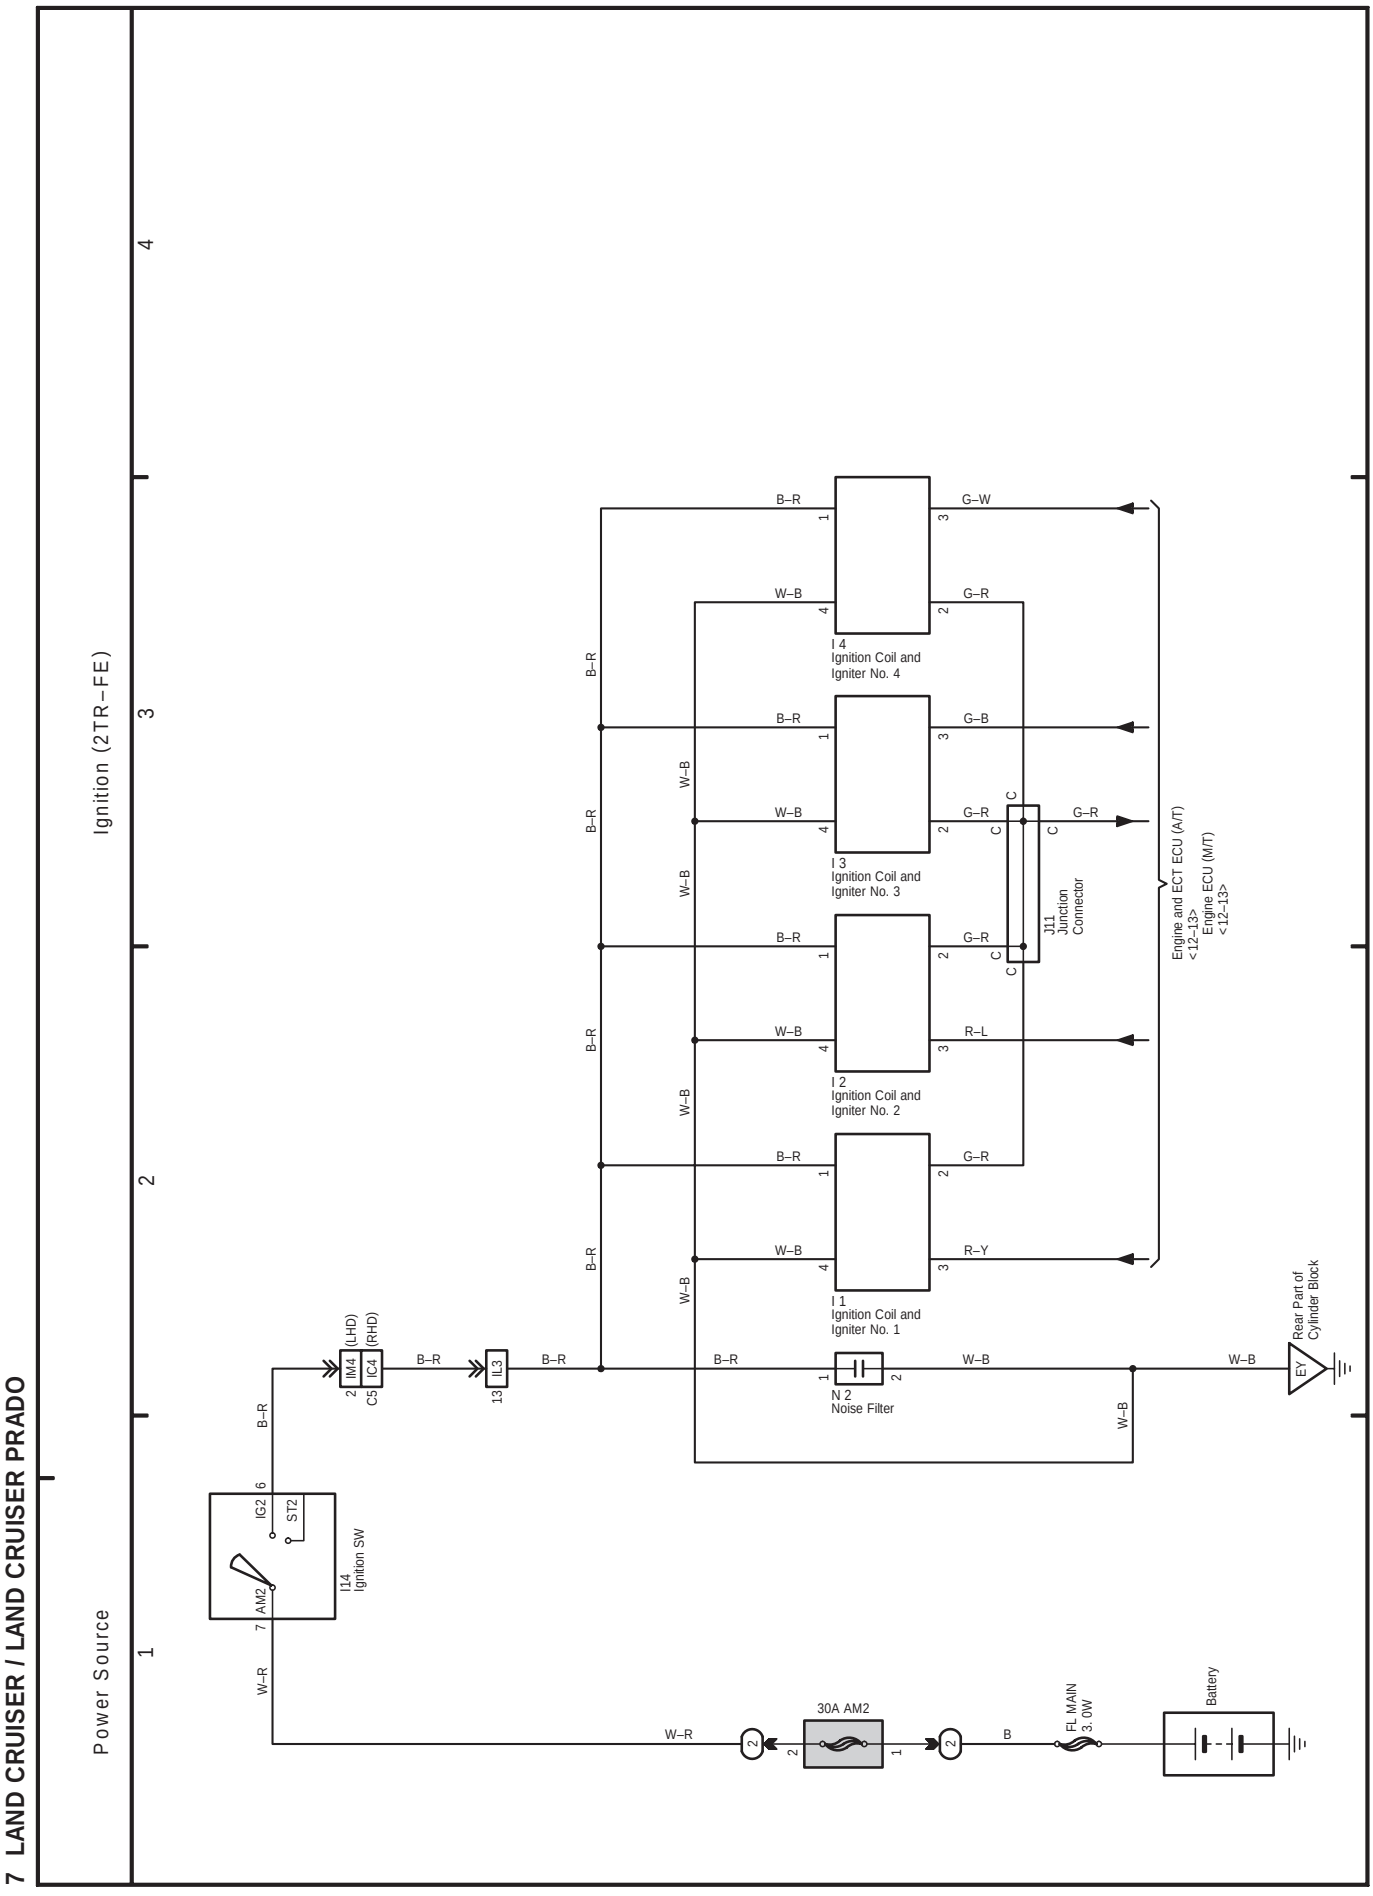

7 LAND CRUISER / LAND CRUISER PRADO
Power Source
Ignition (2TR–FE)
1
2
3
4
I 4
Ignition Coil and
Igniter No. 4
I 3
Ignition Coil and
Igniter No. 3
I 2
Ignition Coil and
Igniter No. 2
I 1
Ignition Coil and
Igniter No. 1
J11
Junction
Connector
Engine and ECT ECU (A/T)
<12–13>
Engine ECU (M/T)
<12–13>
N 2
Noise Filter
Rear Part of
Cylinder Block
I14
Ignition SW
30A AM2
FL MAIN
3. 0W
Battery
(LHD)
(RHD)
IM4
IC4
C5
IL3
13
IG2
ST2
AM2
B–R
W–B
G–W
G–R
G–B
R–L
R–Y
W–R
B