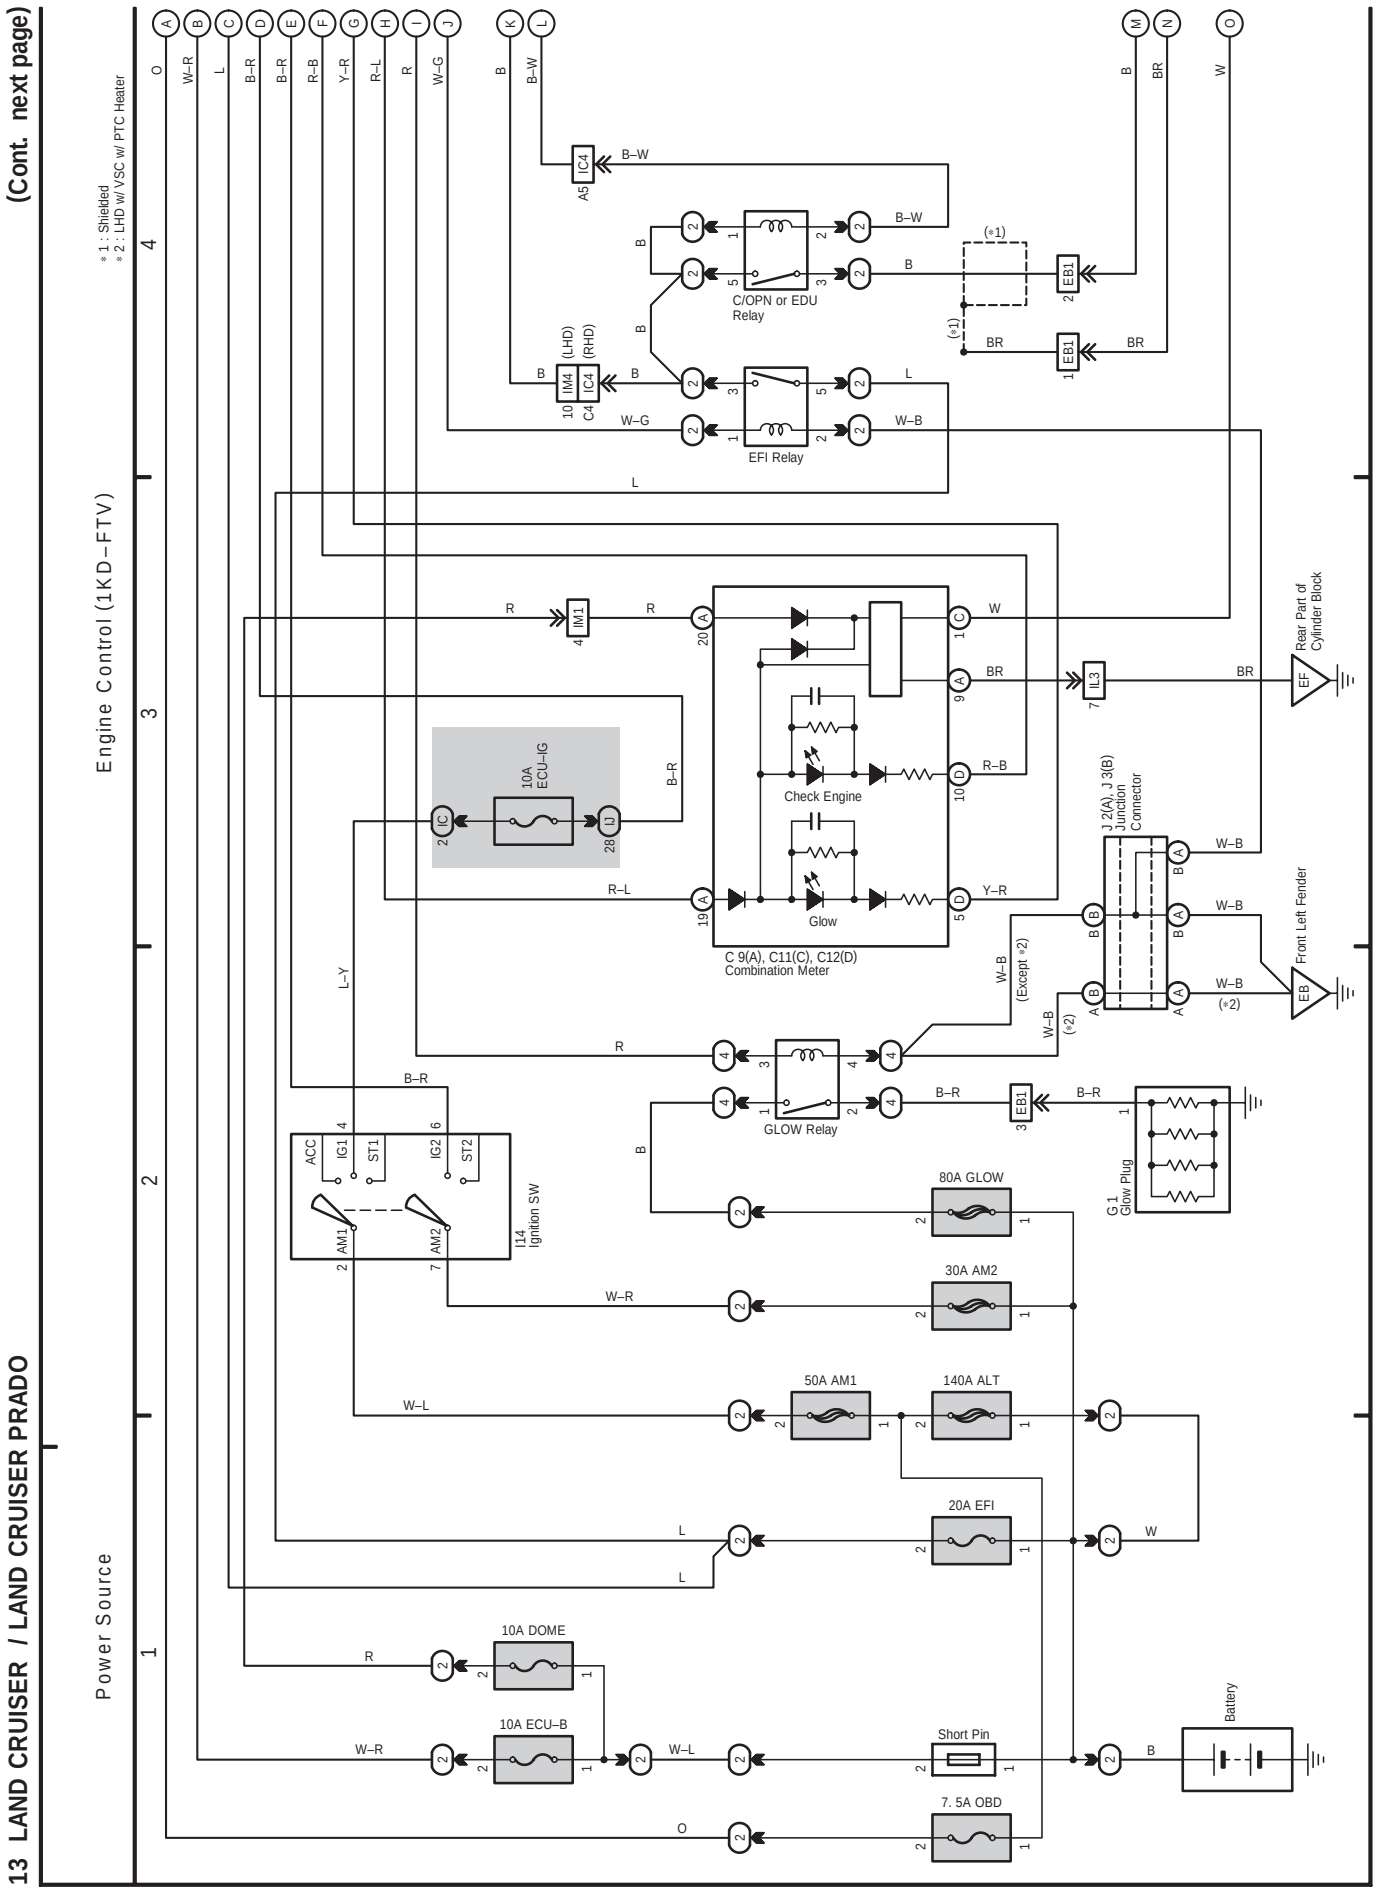
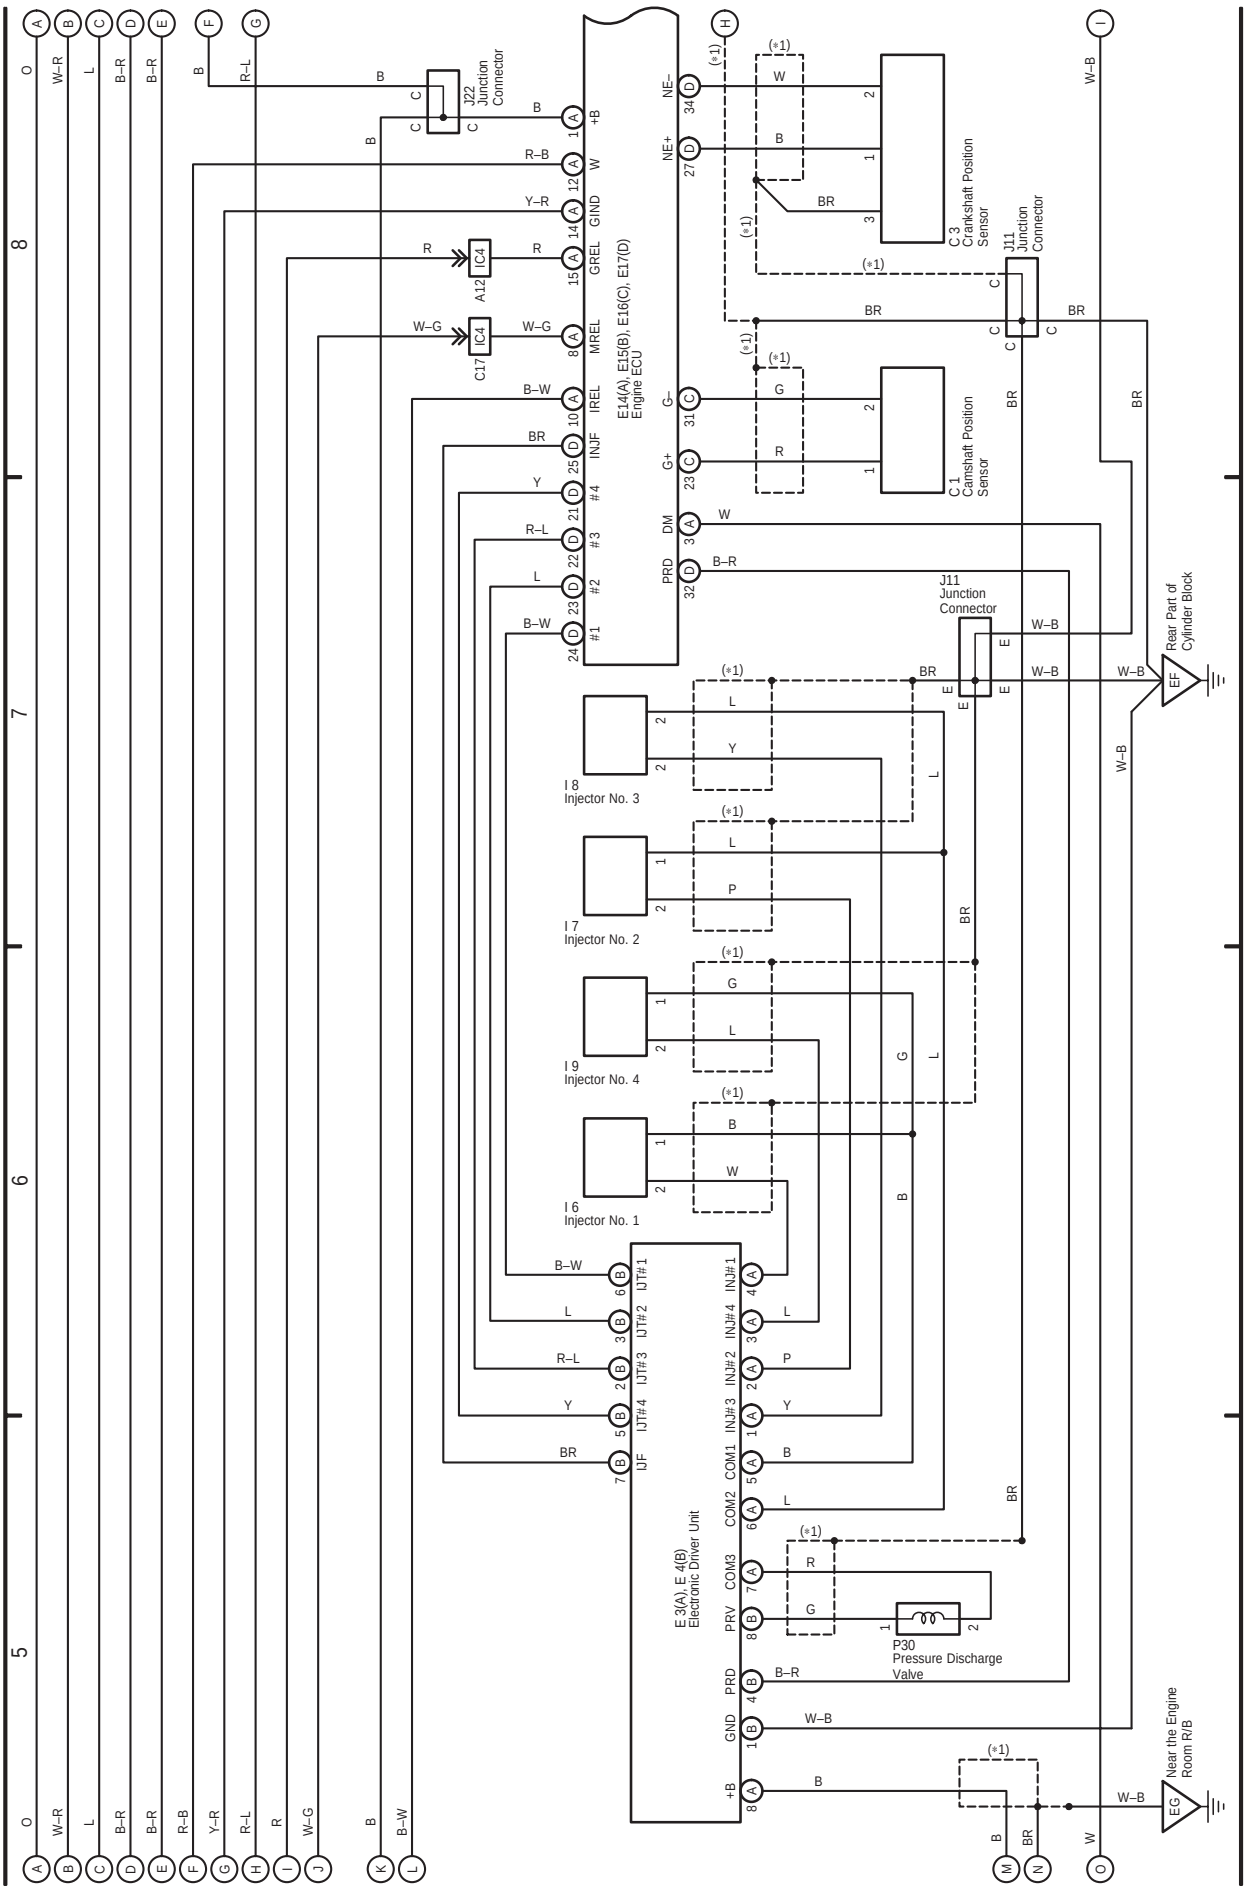
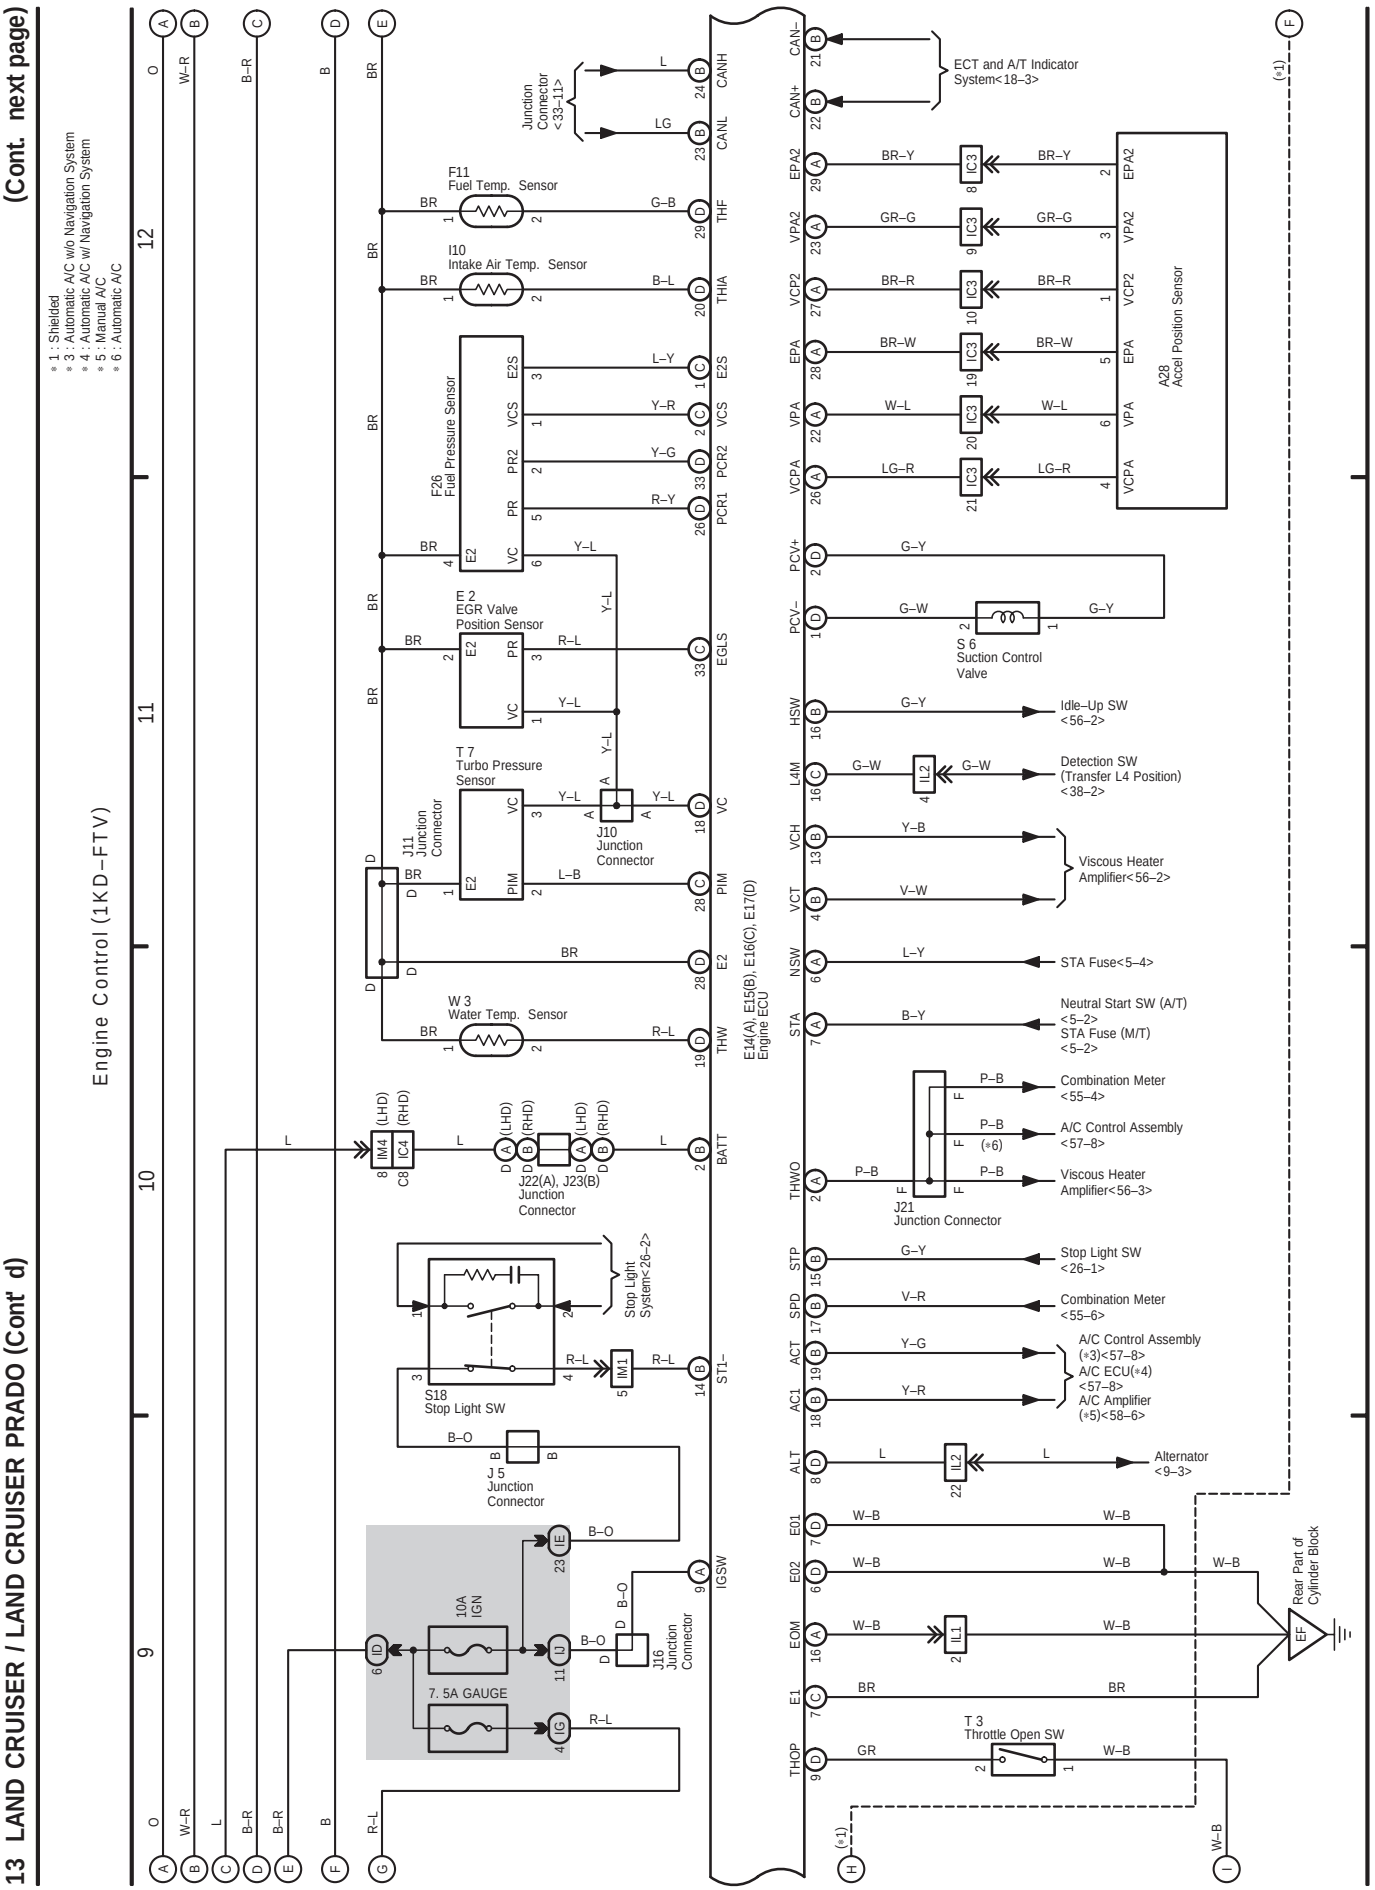

(Cont. next page)
13 LAND CRUISER / LAND CRUISER PRADO
Power Source
Engine Control (1KD–FTV)
*1 : Shielded
*2 : LHD w/ VSC w/ PTC Heater
C/OPN or EDU Relay
EFI Relay
GLOW Relay
Check Engine
Glow
C 9(A), C11(C), C12(D) Combination Meter
J 2(A), J 3(B) Junction Connector
Rear Part of Cylinder Block
Front Left Fender
G 1 Glow Plug
i14 Ignition SW
10A ECU–IG
80A GLOW
30A AM2
50A AM1
140A ALT
20A EFI
10A DOME
10A ECU–B
Short Pin
7. 5A OBD
Battery

13 LAND CRUISER / LAND CRUISER PRADO (Cont' d)

(Cont. next page)




13 LAND CRUISER / LAND CRUISER PRADO (Cont' d)
(Cont. next page)
Engine Control (1KD–FTV)
* 1 : Shielded
* 3 : Automatic A/C w/o Navigation System
* 4 : Automatic A/C w/ Navigation System
* 5 : Manual A/C
* 6 : Automatic A/C
F11 Fuel Temp. Sensor
I10 Intake Air Temp. Sensor
F26 Fuel Pressure Sensor
E 2 EGR Valve Position Sensor
T 7 Turbo Pressure Sensor
J11 Junction Connector
J10 Junction Connector
W 3 Water Temp. Sensor
Junction Connector <33–11>
E14(A), E15(B), E16(C), E17(D) Engine ECU
J22(A), J23(B) Junction Connector
S18 Stop Light SW
Stop Light System<26–2>
J 5 Junction Connector
10A IGN
7. 5A GAUGE
J16 Junction Connector
ECT and A/T Indicator System<18–3>
A28 Accel Position Sensor
S 6 Suction Control Valve
Idle–Up SW <56–2>
Detection SW (Transfer L4 Position) <38–2>
Viscous Heater Amplifier<56–2>
STA Fuse<5–4>
Neutral Start SW (A/T) <5–2>
STA Fuse (M/T) <5–2>
Combination Meter <55–4>
A/C Control Assembly <57–8>
Viscous Heater Amplifier<56–3>
J21 Junction Connector
Stop Light SW <26–1>
Combination Meter <55–6>
A/C Control Assembly (*3)<57–8>
A/C ECU(*4) <57–8>
A/C Amplifier (*5)<58–6>
Alternator <9–3>
Rear Part of Cylinder Block
T 3 Throttle Open SW

13 LAND CRUISER / LAND CRUISER PRADO (Cont' d)

